

TM-10-1152

PARTS LIST

1/2 Ton 4 x 4

DODGE TRUCK

Built for

UNITED STATES ARMY

T-215 MODEL NUMBERS

WC21—U.S.A.
WC22—U.S.A.
WC23—U.S.A.

WC24—U.S.A.
WC25—U.S.A.
WC26—U.S.A.

WC27—U.S.A.
WC40—U.S.A.
WC41—U.S.A.

CONTRACT NUMBERS

W-398-QM-10327
W-398-QM-DA-28

U. S. A. REGISTRATION NUMBERS FOR CONTRACT W-398-QM-10327

W-234379 to W-238778 Incl.
W-240179 to W-242178 Incl.
W-238779 to W-240178 Incl.
W-242179 to W-242678 Incl.
W-2050397 to W-2051696 Incl.
W-2052047 to W-2052246 Incl.
W-2051697 to W-2052046 Incl.
W-2052247 to W-2052396 Incl.

W-608358 to W-608857 Incl.
W-608858 to W-609007 Incl.
W-2052397 to W-2053446 Incl.
W-2053447 to W-2053496 Incl.
W-75400 to W-77080 Incl.
W-005371 to W-005645 Incl.
W-005646 to W-005858 Incl.
W-005859 to W-005912 Incl.

REGISTRATION NUMBERS ARE NOT USED ON CONTRACT W-398-QM-DA-28

CHRYSLER CORPORATION

PARTS DIVISION

DETROIT, MICHIGAN, U. S. A.

FACTORY PARTS PLANT: - MARYSVILLE, MICHIGAN

TM-10-1152

D-10252

DODGE TRUCK

PARTS LIST

SEPTEMBER 25, 1941

1/2 TON MODEL

CONTRACT NUMBERS

W-398-QM-10327

W-398-QM-DA-28

WAR DEPARTMENT Registration No's For Contract W-398-QM-10327	Model	Type
W-234379 to W-238778 Incl. W-240179 to W-242178 Incl.	WC-21	Open Cab—With Express Body
W-238779 to W-240178 Incl. W-242179 to W-242678 Incl.	WC-22	Open Cab—With Express Body and Winch
W-2050397 to W-2051696 Incl. W-2052047 to W-2052246 Incl.	WC-23	Reconnaissance Body
W-2051697 to W-2052046 Incl. W-2052247 to W-2052396 Incl.	WC-24	Reconnaissance Body and Winch
W-608358 to W-608857 Incl. W-608858 to W-609007 Incl.	WC-25	Radio
W-2052397 to W-2053446 Incl. W-2053447 to W-2053496 Incl.	WC-26	Carryall
W-75400 to W-77080 Incl.	WC-27	Ambulance
W-005371 to W-005645 Incl.	WC-40	Closed Cab—With Express Body
W-005646 to W-005858 Incl. W-005859 to W-005912 Incl.	WC-41	Closed Cab—No Body—123" W.B.

REGISTRATION NUMBERS ARE NOT USED ON CONTRACT W-398-QM-DA-28

ENGINEERS' SYMBOL	T-215
WHEELBASE	116" and 123"
CYLINDERS	6
STARTING SERIAL NO.	81,500,001

Group 01	Engine
Group 02	Clutch
Group 03	Fuel
Group 04	Exhaust
Group 05	Cooling
Group 06	Electrical
Group 07	Transmission
Group 08	Transfer Case
Group 09	Propeller Shaft
Group 10	Front Axle
Group 11	Rear Axle
Group 12	Brake
Group 13	Wheels, Hubs & Drums
Group 14	Steering
Group 15	Frame
Group 16	Springs & Shock Absorber
Group 17	Front Fender
Group 18	Body
Group 19	Winch
Group 21	Bumpers
Group 22	Miscellaneous
Group 23	General Use, Standardized Parts
Group 24	Bearing Chart
Group 25	Specifications Lines, Hose Tubes
Group 26	Standard Parts

Instructions for Ordering Prime or Painted Sheet Metal Parts

Sheet metal parts which are indicated as "white" should be painted locally.

When local painting facilities are not available, prime or painted sheet metal parts may be ordered from Chrysler Corporation, Parts Division as follows:

To order primed parts specify "white" part number and in the description column on the parts order enter the "Prime Operation."

To order painted parts specify "white" part number and in the description column on the parts order enter the following: "Prime, Paint and Packing Operation." Also specify truck serial number.

PRIME FINISH AND SPECIAL PACKING OPERATIONS

Part No. Prime Operation	Description	Additional Net Price For Operation
830006	Front Fenders and Hood Top Panels	\$1.50
830007	Rear Fenders, Radiator Shells and Hood Halves	1.25
830010	Rear Wheel Shields (Per Shield), Radiator Air Scoop Pan, Radiator Grilles, Radiator Shell Panels, Running Boards, Running Board Splash Guards, Hood Side Panels, Body to Frame Splash Shields, Body Side Shields, Body to Rear Fender Splash Shields, Front Fender Splash Shield Assemblies, Fender Lower Grilles, Rear Bumper Stone Deflectors, Front Bumper Shields, Front Bumper End Plate.....	1.00

PRIME, PAINT AND SPECIAL PACKING OPERATIONS

Part No. Paint Operation	Description	Additional Net Price For Operation
830008	Front Fenders, Deck and Luggage Compartment Lids and Hood Top Panels.....	\$4.75
830009	Rear Fenders, Radiator Shells and Hood Halves	3.50
830011	Rear Wheel Shields (Per Shield), Radiator Air Scoop Pan, Radiator Grilles, Radiator Shell Panels, Running Boards, Running Board Splash Guards, Hood Side Panels, Body to Frame Splash Shields, Body Side Shields, Body to Rear Fender Splash Shields, Front Fender Splash Shield Assemblies, Fender Lower Grilles, Rear Bumper Stone Deflectors, Front Bumper Shields, Front Bumper End Plate.....	2.00
830004	Doors	5.00
None	Cab or Cab Shell (Painted).....	17.50
	Cab or Cab Shell (Crating Operation).....	7.50

The above net charges, not subject to discount, will be added to the net price of the part when a finish other than white is desired.

Prices and specifications subject to change without notice.

ILLUSTRATION INDEX

Plate No.	NAME	Page No.
1	Exploded View of Engine	01-1
2	Connecting Rod.	01-3
3	Crankshaft Rear Bearing Cap Oil Seals	01-3
4	Engine Oiling System.	01-11
5	Oil Filter.	01-15
6	Clutch.	02-1
7	Clutch Cover, Pressure Plate and Springs.	02-2
8	Carburetor.	03-1
9	Carburetor.	03-2
10	Fuel Pump	03-3
11	Fuel Pump	03-3
12	Water Pump.	05-1
13	Water Pump.	05-1
14	Generator (919889).	06-1
15	Starting Motor (920344)	06-2
16	Distributor (919911).	06-3
17	Transmission.	07-1
18	Transmission (4-Speed) (Exploded View).	07-2
19	Power Take-Off.	07-6
20	Transfer Case (Sectional View).	08-1
21	Transfer Case (Exploded View).	08-2
22	Propeller Shaft and Universal Joint	09-1
23	Propeller Shaft and Universal Joint	09-2
24	Front Axle (Sectional View) (Bendix-Weiss Joint).	10-1
25	Front Axle (Exploded View) (Bendix-Weiss Joint).	10-2
26	Front Axle (Exploded View) (Rzeppa Joint).	10-3
27	Rear Axle	11-1
28	Rear Axle Differential.	11-1
29	Hand Brake.	12-1
30	Wheel Brake	12-2
31	Master Cylinder	12-3
32	Master Cylinder	12-3
33	Wheel Cylinder.	12-4
34	Wheel Cylinder.	12-4
35	Pedal Adjustment.	12-5
36	Rear Wheel Bearings	13-1
37	Steering Gear	14-1
38	Drag Link	14-2
39	Drag Link	14-2
40	Front End View.	17-1
41	Interior View of Closed Cab	18-2
42	Detail Parts of Cab Door.	18-3
43	View of Express Body (With Transverse Seats).	18-4
44	Open Cab and Instrument Board	18-5
45	Details of Open Cab	18-6
46	Dodge Command Reconnaissance and Radio Body	18-7
47	Dodge Command Reconnaissance and Radio Body	18-8
48	Interior View of Ambulance Cab.	18-9
49	Ambulance Body (Side View).	18-10
50	Closed Rear View of Ambulance Body.	18-11
51	Rear Open View of Ambulance Body.	18-12
52	Rear Open View of Ambulance Body.	18-13
53	Ambulance Body Parts.	18-14
54	Carry-All Body.	18-16
55	Carry-All Body Details.	18-19
56	Winch	19-1

MAJOR GROUP INDEX

Group No.	NAME	Page No.
01	Engine.	01-1
02	Clutch.	02-1
03	Fuel System	03-1
04	Exhaust	04-1
05	Cooling	05-1
06	Electrical.	06-1
07	Transmission.	07-1
08	Transfer Case	08-1
09	Propeller Shaft and Universal Joint	09-1
10	Axle - Front.	10-1
11	Axle - Rear	11-1
12	Brakes.	12-1
13	Wheels, Hubs and Drums.	13-1
14	Steering.	14-1
15	Frames and Brackets	15-1
16	Springs and Shock Absorbers	16-1
17	Hoods, Fenders, Running Boards, Aprons (Miscellaneous Sheet Metal).	17-1
18	Body.	18-1
19	Winch	19-1
20		----
21	Bumper and Guards	21-1
22	Miscellaneous Body, Chassis and Accessories	22-1
23	General Use, Standardized Parts	23-1
24	Bearing Chart	24-1
25	Specifications Lines, Hose and Tubes.	25-1
26	Standard Parts Specifications	26-1

ALPHABETICAL INDEX

A	Group	B (Cont'd.)	Group	B (Cont'd.)	Group
Absorber - Front Shock.....	1603	Block - Upper to Lower		Brake Flexible Hose.....	1209
Absorber - Rear Shock.....	1603	Truck Wiring Junction.....	0604	Brake Pedal.....	1204
Accelerator Pedal.....	0303	Board - Floor.....	18-B	Brake Pedal Draft Pad.....	18-X
Accelerator Pedal Rod.....	0303	Board - Running.....	1703	Brake Shoe Adjuster.....	1203
Accelerator Shaft.....	0303	Board - Toe.....	18-B	Brake Shoe Adjusting Pin.....	1203
Accelerator Shaft Bracket.....	0303	Body.....	18-C	Brake Shoe Anchor.....	1203
Accelerator Shaft to		Body - Fuel Pump.....	0302	Brake Shoe Anchor Bolt.....	1203
Throttle Control Bell		Body - Oil Pump.....	0107	Brake Shoe and Lining.....	1202
Crank Rod.....	0303	Body - Water Pump.....	0503	Brake Shoe Guide.....	1203
Adapter - Carburetor Flange.....	0301	Body Dust Shield.....	18-Z	Brake Support.....	1203
Adjuster - Brake Shoe.....	1203	Body Hold Down Bolt.....	18-D	Brake Support Adjusting Pin.....	1203
Ammeter.....	0605	Body Hold Down Bolt and		Brake Tube Tee.....	1209
Anchor - Brake Shoe.....	1203	Bracket.....	18-D	Brake Tube to Hose Bracket..	1209
Arm - Front Door Check.....	18-I	Body Hold Down Bracket.....	18-D	Brake Tube to Hose Union	
Arm - Fuel Pump Rocker.....	0302	Body Rear Panel.....	18-Z	Nut.....	1209
Arm - Steering.....	1006	Body Rear Section.....	18-Z	Breather Pipe.....	0107
Arm - Steering Gear.....	1403	Body Side Panel.....	18-Z	Breather Pipe Air Cleaner... 0107	
Arm - Windshield Adjusting.....	18-AK	Body to Rear Fender Shield..	1702	Brush - Generator.....	0601
Arm - Windshield Side.....	18-AK	Bolt - Body Hold Down.....	18-D	Brush - Starting Motor.....	0602
Arm - Windshield Wiper.....	18-AL	Bolt - Brake Shoe Anchor....	1203	Bumper - Cab Side Panel to	
Armature - Generator.....	0601	Bolt - Drive Gear.....	1003	Running Board.....	18-F
Armature - Starting Motor... 0602			1104	Bumper - Front.....	2101
Attaching Parts - Center		Bolt - Eye.....	0203	Bumper - Front Door.....	18-F
and Rear Seat.....	18-AD	Bolt - Winch to Frame.....	1900	Bumper - Front Door Check	
Attaching Parts - Drivers'		Bow - Roof.....	18-AB	Arm.....	18-F
Seat.....	18-AD		2310	Bumper - Front Spring Axle..	1601
Attaching Parts - Front		Box - Glove.....	18-E	Bumper - Glove Box Door.....	18-E
Seat.....	18-AD	Brace - Front Fender Rear		Bumper - Rear.....	2101
Attachment - Towing.....	1501	Support to Frame.....	1504	Bumper - Rear Spring Axle... 1601	
Auxiliary Seat Frame.....	18-AD	Bracket - Accelerator Shaft. 0303		Bumper - Windshield Side	
Axle - Front.....	1000	Bracket - Body Hold Down....	18-D	Arm.....	18-AK
Axle - Rear.....	1100	Bracket - Brake Tube to		Button - Horn.....	0609
		Hose.....	1209	Button and Wire - Choke	
		Bracket - Cab Hold Down....	1500	Control.....	0303
			18-D	Button and Wire - Throttle	
		Bracket - Frame.....	1500	Control.....	0303
		Bracket - Front Door Check		By-Pass - Water Pump.....	0503
		Arm.....	18-I		
		Bracket - Front Door Vent			
		Wing Locking.....	18-AI		
		Bracket - Front Fender Rear			
		Support Frame.....	1504		
		Bracket - Front Fender to			
		Frame Splash Shield			
		Support.....	1702		
		Bracket - Front License			
		Plate.....	2304		
		Bracket - Generator			
		Mounting.....	0601		
		Bracket - Radiator Support..	0110		
		Bracket - Radiator Tie Rod			
		Dash.....	18-K		
		Bracket - Rear Spring.....	1503		
		Bracket - Signal and Tail			
		Lamp.....	0608		
		Bracket - Steering Gear			
		Housing.....	1403		
		Bracket - Steering Post.....	1405		
		Bracket - Throttle Control			
		Wire Tube.....	0303		
		Bracket - Tail and Signal			
		Lamp.....	0608		
		Bracket - Windshield			
		Adjusting Arm Frame.....	18-AK		
		Bracket - Windshield			
		Adjusting Arm to Pillar... 18-AK			
		Bracket - Windshield Hinge.. 18-AK			
		Bracket - Windshield Side			
		Arm (in Cowl).....	18-AK		
		Brake Adjusting Parts -			
		Hand.....	1201		
		Brake and Clutch Pedal			
		Draft Pad.....	18-X		
		Brake Drum.....	1302		

ALPHABETICAL INDEX-Continued

D (Cont'd.)	Group	F (Cont'd.)	Group	F (Cont'd.)	Group
Drum - Brake.....	1302	Frame - Front Side Window		Front Fender.....	1701
Drum - Hand Brake.....	1201	Glass.....	18-AJ	Front Fender Front Support..	1504
Dust Cover Package - Drag		Frame - Generator.....	0601	Front Fender Rear Support	
Link.....	1401	Frame - Rear Side Window		Frame Bracket.....	1504
		Glass.....	18-AJ	Front Fender Rear Support to	
E		Frame - Starting Motor.....	0602	Frame Brace.....	1504
Elbow - Water Outlet.....	0101	Frame - Windshield.....	18-AK	Front Fender to Body Filler..	1702
End - Front.....	18-K	Frame Bracket.....	1500	Front Fender to Frame Splash	
End - Generator Commutator..	0601	Frame Bracket and Parts.....	1500	Shield.....	1702
End - Generator Drive.....	0601	Frame Crossmember.....	1500	Front Fender to Frame Splash	
End - Steering Tie Rod.....	1402	Frame Sidemember.....	1500	Shield Support Bracket....	1702
Engine Assembly.....	0100	Frame Spring Hangers and		Front Floor Mat.....	18-T
Engine Dust Pan.....	1702	Brackets.....	1503	Front License Mounting Parts	2304
Engine Front Support.....	0110	Frame Tee to Front Hose		Front License Plate Bracket..	2304
Engine Front Support		Connection Tube.....	1209	Front Seat Attaching Parts..	18-AD
Insulator.....	0110	Frame Tee to Rear Hose		Front Seat Safety Strap	
Engine Front Support Plate..	0110	Connection Tube.....	1209	(Cowl).....	18-K
Engine Gasket Set.....	0100	Front Axle.....	1000	Front Shock Absorber.....	1603
Engine Rear Support		Front Axle Housing.....	1001	Front Side Panel and	
Insulator.....	0110	Front Bumper.....	2101	Extension.....	18-Z
Engine Rear Support Parts..	0110	Front Compartment Roof		Front Side Window Glass....	18-N
Engine Rebuilding Replace-		Panel.....	18-Z	Front Side Window Glass	
ment Parts Package.....	0100	Front Door Bumper.....	18-F	Frame.....	18-AJ
Engine to Oil Gauge Hose....	0107	Front Door Check Arm.....	18-I	Front Side Window Glass	
Engine to Oil Gauge Tube....	0107	Front Door Check Arm		Lower Channel.....	18-H
Engine Water Fittings.....	0505	Bracket.....	18-I	Front Spring.....	1601
Exhaust Pipe.....	0402	Front Door Check Arm Bumper.	18-F	Front Spring Axle Bumper....	1601
Expander - Piston.....	0103	Front Door Glass.....	18-N	Front Spring Clip.....	1601
Expander - Wheel Cylinder		Front Door Glass Frame.....	18-AI	Front Spring Cover.....	1601
Piston Cup.....	1207	Front Door Glass Front Run..	18-AC	Front Spring Hanger.....	1503
Expander Package - Piston..	0103	Front Door Glass Front Run		Front Spring Leaves.....	1601
Extension and Panel -		Channel.....	18-H	Front Spring Shackles.....	1602
Front Side.....	18-Z	Front Door Glass Lower		Front Wheel Bearing.....	1301
Eye Bolt.....	0203	Channel.....	18-H	Front Wheel Cylinder.....	1207
Eye Bolt Nut.....	0203	Front Door Glass Lower		Front Wheel Cylinder Service	
		Channel Weatherstrip.....	18-AH	Package.....	1207
F		Front Door Glass Run.....	18-AC	Fuel Filter.....	0302
Fan.....	0503	Front Door Hinge.....	18-Q	Fuel Filter to Fuel Pump	
Fan Belt.....	0503	Front Door Lock and Link....	18-S	Hose.....	0302
Fan Blade.....	0503	Front Door Lock Cylinder....	18-R	Fuel Filter to Fuel Pump	
Fan Pulley.....	0503	Front Door Lock Striker		Tube.....	0302
Fender - Front.....	1701	Plate.....	18-F	Fuel Gauge (on Instrument	
Fender - Rear.....	1701	Front Door Lower		Panel).....	0605
Fender and Running Board		Weatherstrip.....	18-AH	Fuel Gauge (on Tank Unit)...	0304
Bracket and Hanger.....	1504	Front Door Outside Handle..	18-P	Fuel Gauge Volt Resistor....	0605
Filler - Front Fender to		Front Door Rear Window Glass		Fuel Pump.....	0302
Body.....	1702	Frame.....	18-AI	Fuel Pump Body.....	0302
Filter - Fuel.....	0302	Front Door Remote Control..	18-S	Fuel Pump Bottom Cover.....	0302
Filter - Oil.....	0107	Front Door Remote Control		Fuel Pump Diaphragm.....	0302
Fittings - Engine Water....	0505	Handle.....	18-P	Fuel Pump Diaphragm	
Flange - Drive.....	1005	Front Door Shell.....	18-J	Protector.....	0302
Flange - Propeller Shaft		Front Door Upper Wedge Plate		Fuel Pump Heat Shield.....	0302
Companion.....	0901	Cover.....	18-F	Fuel Pump Mounting.....	0302
Flange - Steering Knuckle... 1006		Front Door Vent Wing		Fuel Pump Rocker Arm.....	0302
Float - Carburetor.....	0301	Division Bar.....	18-AI	Fuel Pump Strainer.....	0302
Floor Board.....	18-B	Front Door Vent Wing		Fuel Pump Top Cover.....	0302
Floor Board Skid Strip.....	18-AE	Division Bar Weatherstrip..	18-AH	Fuel Pump Tube.....	0302
Flywheel.....	0109	Front Door Vent Wing Glass..	18-N	Fuel Tank.....	0304
Fork - Clutch Release.....	0203	Frame.....	18-AI	Fuel Tank Filler Cap.....	0304
Fork - Transfer Case Shift.. 0806		Front Door Vent Wing Handle..	18-P	Fuel Tank Filler Tube.....	0304
Fork - Transmission		Front Door Vent Wing Locking		Fuel Tank Filler Tube Hose..	0304
Gearshift.....	0706	Bracket.....	18-AI	Fuel Tank Support Strap....	0304
Fork - Transmission		Front Door Vent Wing Lower		Fuel Tank to Fuel Filter	
Gearshift Reverse Shift... 0706		Pivot.....	18-AI	Hose.....	0304
Frame.....	1500	Front Door Vent Wing Upper		Fuel Tank to Fuel Filter	
Frame - Auxiliary Seat.....	18-AD	Pivot.....	18-AI	Tube.....	0304
Frame - Front Door Glass....	18-AI	Front Door Vent Wing		Fuse Merchandising Package..	0604
Frame - Front Door Rear		Weatherstrip.....	18-AH		
Window Glass.....	18-AI	Front Door Weathercord.....	18-AN	G	
Frame - Front Door Vent Wing		Front Door Wedge Plate.....	18-F	Gasket - Carburetor.....	0301
Glass.....	18-AI	Front Door Window Regulator..	18-Z	Gasket Set - Engine.....	0100
		Front Door Window Regulator		Gasket Set - Manifold.....	0108
		Handle.....	18-P	Gasket Set - Oil Pan.....	0107
		Front End.....	18-K		

ALPHABETICAL INDEX-Continued

G (Cont'd.)	Group	G (Cont'd.)	Group	H (Cont'd.)	Group
Gasket Set - Valve Spring Cover.....	0105	Guide and Housing - Choke Control.....	0303	Hose - Fuel Tank Filler Tube	0304
Gate - Lift.....	18-M	Guide and Housing - Throttle Control.....	0303	Hose - Fuel Tank to Fuel Filter.....	0304
Gate - Tail.....	18-L			Hose - Fuel Filter to Fuel Pump.....	0302
Gauge - Fuel (on Instrument Panel).....	0605	H		Hose - Radiator.....	0505
Gauge - Fuel (on Tank Unit).....	0304	Hand Brake Adjusting Parts..	1201	Hose - Water Pump.....	0503
Gauge - Oil.....	0605	Hand Brake Band.....	1201	Housing - Clutch.....	0207
Gear - Camshaft.....	0106	Hand Brake Cam Lever.....	1201	Housing - Front Axle.....	1001
Gear - Differential.....	1002	Hand Brake Drum.....	1201	Housing - Rear Axle.....	1101
Gear - Differential Side.....	1103	Hand Brake Lever.....	1201	Housing - Steering Gear....	1403
Gear - Oil Pump and Distributor Drive.....	0107	Hand Brake Spacer Link.....	1201	Housing - Transmission Gearshift Lever.....	0706
Gear - Oil Pump Idler.....	0107	Hand Brake Support.....	1201	Housing and Guide - Choke Control.....	0303
Gear - Ring.....	0109	Hand Brake Rod.....	1201	Housing and Guide - Throttle Control.....	0303
Gear - Steering.....	1403	Handle.....	18-P	Hub.....	1302
Gear - Transfer Case Drive..	0802	Handle - Front Door Outside..	18-P	Hydraulic Brake Solution....	2301
Gear - Transfer Case Driven..	0803	Handle - Hood Lock.....	1704		
Gear - Transfer Case Idler..	0804	Handle - Front Door Remote Control.....	18-P		
Gear - Transmission Countershaft.....	0703	Handle - Front Door Vent Wing.....	18-P	I	
Gear - Transmission Low and Second.....	0703	Handle - Front Door Window Regulator.....	18-P	Indicator - Headlight Beam..	0607
Gear - Transmission Main Drive.....	0703	Handle - Rear Door Outside..	18-P	Indicator - Oil Level.....	0107
Gear - Transmission Reverse Idler.....	0703	Handle - Side Window Regulator.....	18-P	Ignition Cable Tube.....	0604
Gear - Transmission Speedometer.....	0705	Handle - Tail Gate Lock.....	18-P	Ignition Coil.....	0604
Gear - Transmission Third and Direct.....	0703	Handle - Windshield.....	18-AK	Ignition Coil Lock Cylinder..	0604
Gear and Pinion - Drive.....	1003	Handle - Windshield Pull-To..	18-AK	Ignition Coil Lock Switch...	0604
	1104	Half - Hood.....	1704	Ignition Coil Primary Cable..	0604
Gearshift - Transmission Reverse Idler.....	0704	Hanger - Front Spring.....	1503	Ignition Coil Secondary Cable.....	0604
Gearshift - Transmission....	0706	Hanger - Running Board.....	1504	Instrument Lamp.....	0605
Generator.....	0601	Hanger and Bracket - Fender and Running Board.....	1504	Instrument Panel.....	18-Y
Generator Adjusting Strap...	0601	Hanger and Bracket - Frame Spring.....	1503	Insulation - Generator.....	0601
Generator Armature.....	0601	Hamp - Seat Cushion Lock....	18-AD	Insulator - Engine Front Support.....	0110
Generator Belt.....	0503	Head - Cylinder.....	0101	Insulator - Engine Rear Support.....	0110
Generator Brush.....	0601	Headlight.....	0607	Insulator - Carburetor.....	0301
Generator Commutator End....	0601	Headlight Beam Indicator....	0607	Intake and Exhaust Manifold..	0108
Generator Drive End.....	0601	Headlight Cable.....	0607		
Generator Field Coil.....	0601	Headlight Door.....	0607	J	
Generator Frame.....	0601	Headlight Shell.....	0607	Jack Assembly.....	2306
Generator Head Band.....	0601	Heater.....	22-1	Jacket - Steering Column....	1403
Generator Insulation.....	0601	Hinge - Battery Case.....	18-A	Jet - Carburetor.....	0301
Generator Mounting Bracket..	0601	Hinge - Cowl Ventilator.....	18-AG	Joint - Propeller Shaft Universal.....	0902
Generator Pole Piece.....	0601	Hinge - Door.....	18-Q		
Generator Pulley.....	0601	Hinge - Front Door.....	18-Q	K	
Generator Regulator.....	0601	Hinge - Glove Box Door.....	18-E	Kit - Tool.....	2306
Generator Terminal Post....	0601	Hinge - Hood.....	1704	Knob - Windshield Wiper Control.....	18-AL
Generator to Regulator Cable	0601	Hinge - Lift Gate.....	18-M	Knuckle - Steering.....	1006
Glass - Cab Rear Window.....	18-N	Hinge - Tail Gate.....	18-L		
Glass - Front Door.....	18-N	Hinge - Windshield.....	18-AK	L	
Glass - Front Door Vent Wing.....	18-N	Hinge Pillar Trim Panel....	18-AN	Lacing - Cowl Hood.....	18-K
Glass - Front Side Window...18-N		Hood Hinge.....	1704	Lacing - Radiator Shell.....	0501
Glass - Lift Gate.....	18-N	Hood Hinge Rod.....	1704	Lamp - Blackout Parking.....	0607
Glass - Rear Side Window...18-N		Hood Hinge Support.....	1704	Lamp - Dome.....	0606
Glass - Windshield.....	18-N	Hood Half.....	1704	Lamp - Signal and Tail.....	0608
Glove Box.....	18-E	Hood Lock.....	1704	Lamp - Tail and Signal.....	0608
Glove Box Door.....	18-E	Hood Lock Catch.....	1704	Lamp Instrument.....	0605
Glove Box Door Bumper.....18-E		Hood Lock Handle.....	1704	Latch - Dash Hood Lock.....	18-K
Glove Box Door Hinge.....18-E		Hood Lock Plate.....	1704	Leaves - Front Spring.....	1601
Glove Box Door Spring.....18-E		Hood Locking Parts.....	1704	Leaves - Rear Spring.....	1601
Governor.....	0305	Hood Name Plate.....	1704		
Governor and Driveshaft - Distributor.....	0603	Hood Panel.....	1704		
Grille - Cab Back Window....18-O		Hood Protector.....	1704		
Grommet - Windshield Wiper Handle Cover Plate.....	18-AL	Hook - Pintle.....	1502		
Ground Straps.....	0604	Hook - Tow.....	1501		
Guard - Radiator.....	2103	Horn.....	0609		
Guide - Brake Shoe.....	1203	Horn - Carburetor Air.....	0301		
		Horn Button.....	0609		
		Horn Button Cable.....	0609		
		Hose - Brake Flexible.....	1209		
		Hose - Engine to Oil Gauge..	0107		