

C8A-02

CHEVROLET
ILLUSTRATED
SPARE PARTS LIST
FOR
HEAVY UTILITY 4x4 WITH PERSONNEL BODY
MODEL 8A--CHASSIS 8445

THIS PARTS LIST APPLIES
TO ALL VEHICLES OF THIS MODEL
FROM START OF PRODUCTION UP TO
AND INCLUDING THOSE WITH SYMBOL
NO C8A-01 AND C8A-02
ON PUBLICATIONS PLATE

GENERAL MOTORS PRODUCTS OF CANADA, LTD.
OSHAWA -- ONTARIO

Engine—0.000
Clutch—0.795

Cooling—1.00
Oiling—1.426

Electrical
2.000—2.999

Fuel System
3.000
Carburetor
3.725
Pump—3.900

Transmission
4.000—4.450

Transfer Case
4.450

Brakes
4.591—5.200

Rear Axle—
Propeller Shaft
5.386—5.547

Universal Joint—
Brake Drums
5.548—5.999

Front Axle
6.008

Steering
6.508

Frame—Shock
Absorbers
7.000—7.411

Springs
7.412—7.600

Tools—8.820

Miscellaneous
9.000

Body—16,000

Standard Parts

Numerical
Index

CHEVROLET

ILLUSTRATED

SPARE PARTS LIST

FOR

HEAVY UTILITY 4x4 WITH PERSONNEL BODY


MODEL 8A--CHASSIS 8445

THIS PARTS LIST APPLIES
TO ALL VEHICLES OF THIS MODEL
FROM START OF PRODUCTION UP TO
AND INCLUDING THOSE WITH SYMBOL
No. C8A-01 AND C8A-02
ON PUBLICATIONS PLATE

GENERAL MOTORS PRODUCTS OF CANADA, LTD.

OSHAWA - ONTARIO

CHEVROLET--SPARE PARTS LIST--HEAVY UTILITY 4x4 WITH PERSONNEL BODY

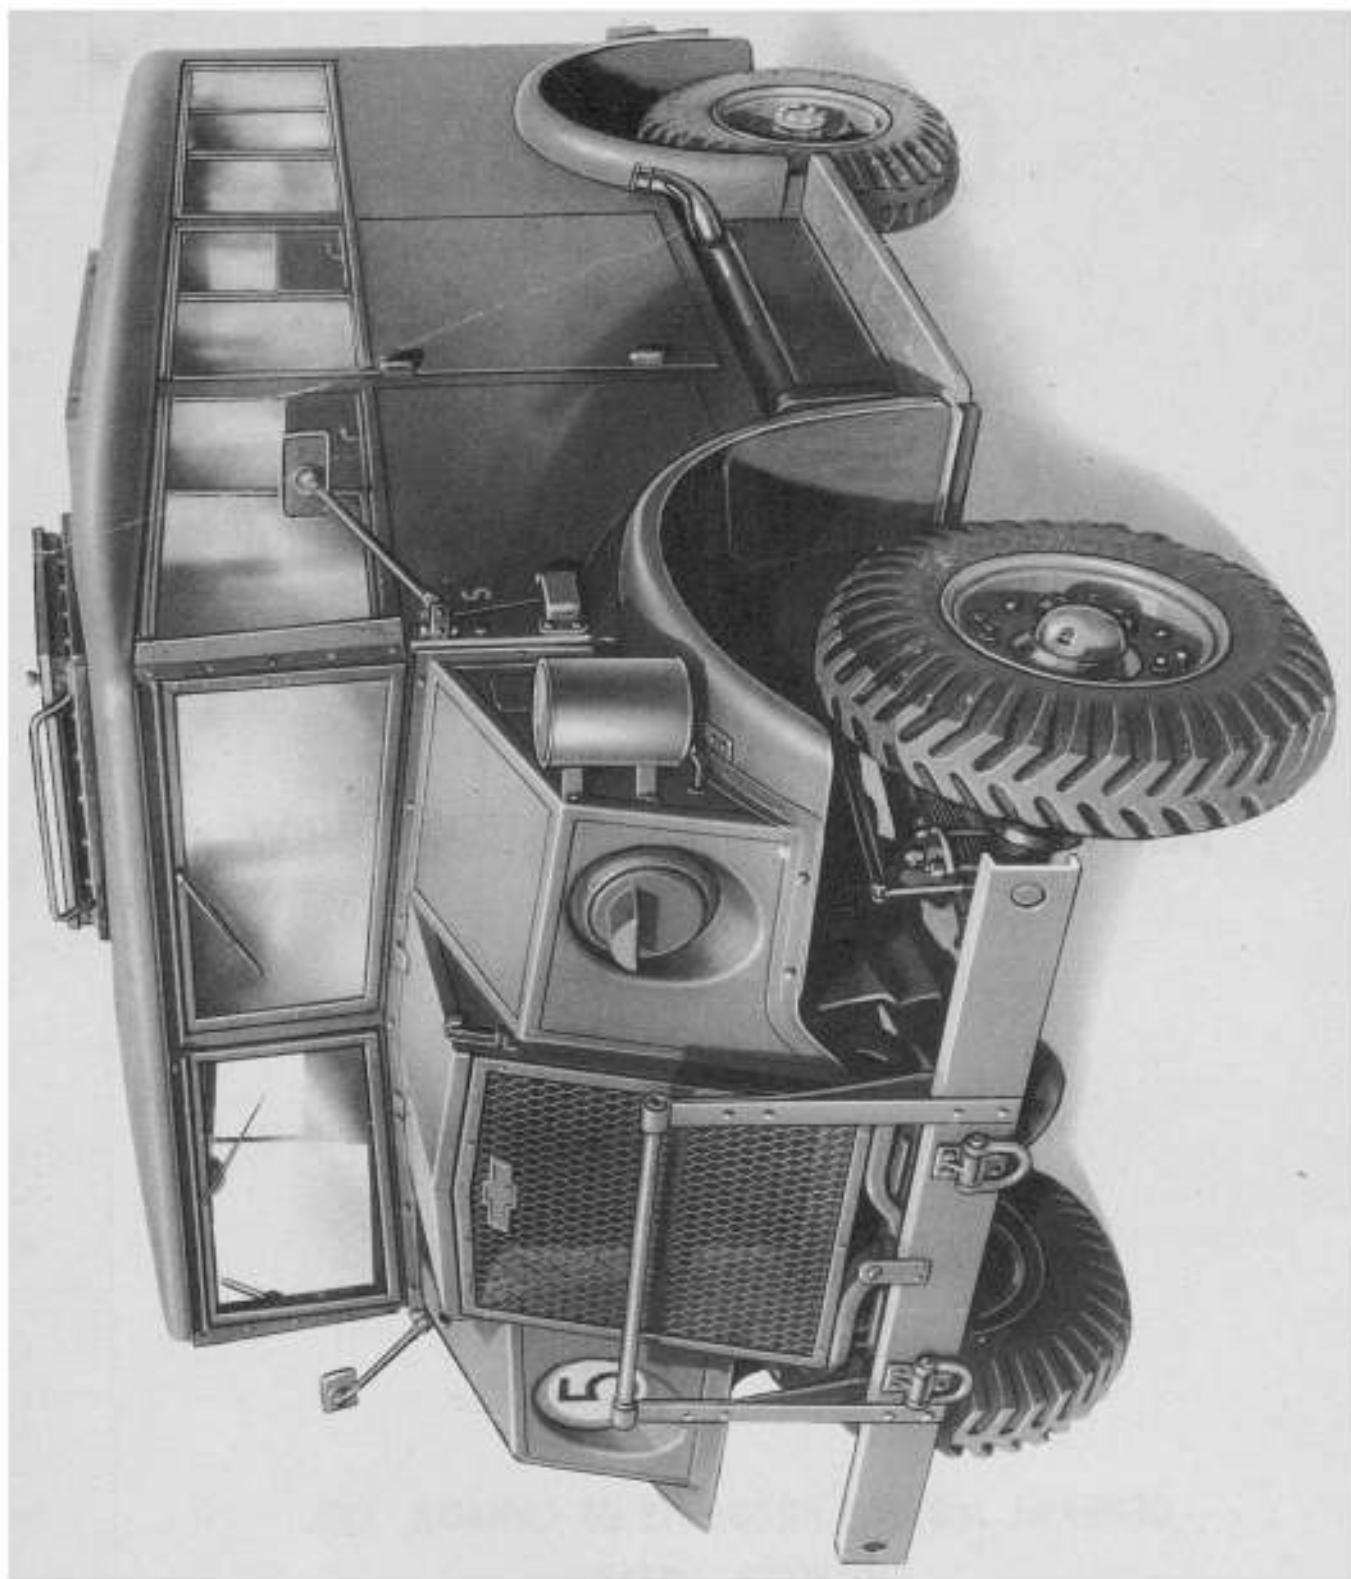

**HEAVY UTILITY 4X4 WITH PERSONNEL BODY
(MODEL 8A - CHASSIS 8445)**

SUGGESTIONS FOR EFFICIENT USE OF THE PARTS LIST

TO LOCATE THE LISTING OF A PART, REFER TO THE PARTS LIST UNDER THE GROUP NUMBER IDENTIFYING IT, WHICH MAY BE DETERMINED BY USING ANY OF THE FOLLOWING THREE METHODS -

1. CONSULT ALPHABETICAL INDEX AT "FRONT" OF PARTS LIST, WHICH LISTS PARTS BY NAME AND DESCRIPTIVE NAMES AND REFERS TO THE PAGE NUMBER WHERE ALL PARTS OF SIMILAR KIND MAY BE FOUND. IF NAME OF DESIRED PART IS NOT READILY FOUND IN THE INDEX, A CORRELATED PART NAME WILL SUGGEST APPROXIMATE LOCATION.
2. CONSULT ILLUSTRATIONS IN EACH GROUP SECTION, ON WHICH GROUP NUMBERS ARE SHOWN DIRECTING YOU TO THE PART OR ASSEMBLY WANTED. THESE ILLUSTRATIONS AND LINE DRAWINGS MAY NOT SHOW THE EXACT PART REQUIRED, BUT ARE FOR IDENTIFICATION PURPOSES.
3. CONSULT NUMERICAL INDEX AT "BACK" OF PARTS LIST, IF A PART NUMBER IS KNOWN, USE ITS PAGE NUMBER TO LOCATE A SIMILAR PART, OR BE DIRECTED TO THE APPROXIMATE LOCATION OF CORRELATED PARTS.

THE NUMERICAL INDEX SHOWS ALL SERVICE PART NUMBERS IN CONSECUTIVE ORDER.

THE GROUP SYSTEM OF LISTING PARTS, BRIEFLY, IS AS FOLLOWS -

MAIN UNITS OF THE CAR ARE IDENTIFIED BY THE NUMERAL PRECEDING THE DECIMAL, I.E.

ENGINE.....	0.-
COOLING AND OILING.....	1.-
ELECTRICAL.....	2.-
FUEL SYSTEM.....	3.-
ETC. (SEE THUMB INDEX ON FIRST TITLE PAGE)	

INDIVIDUAL PARTS ARE ASSIGNED A GROUP NUMBER, THE FIRST NUMERAL IDENTIFYING THE MAIN UNIT WITH WHICH IT IS AFFILIATED, AND FOLLOWING THE DECIMAL IS THE SUB-GROUP NUMBER UNDER WHICH ALL PARTS OF THE SAME NAME AND FUNCTION ARE LISTED. FOR INSTANCE: GROUP 0.0331 "0" INDICATES THAT IS AN ENGINE PART. ".033" IS THE LOCATION WHERE ALL PART NUMBERS OF CYLINDER BLOCKS NOW BEING SERVICED MAY BE FOUND.

ALL ILLUSTRATIONS HAVE PLATE NUMBERS. PARTS WHICH ARE ILLUSTRATED SHOW THE PLATE NUMBER IN A COLUMN FOLLOWING THE GROUP NUMBER.

CHEVROLET--SPARE PARTS LIST--HEAVY UTILITY 4x4 WITH PERSONNEL BODY

AN ASTERISK (*) PRECEDING A PART NUMBER DENOTES THAT THE PART IS PECULIAR TO CANADIAN MILITARY PATTERN VEHICLES.

INSTRUCTIONS FOR ORDERING PARTS

ALWAYS GIVE PART NUMBER, NAME AND MODEL OF EACH PART ORDERED.

THE GROUP NUMBERS SHOWN ON THE ILLUSTRATIONS ARE FOR REFERENCE PURPOSES ONLY; AFTER IDENTIFYING THE PART REQUIRED REFER TO THE LIST OF PARTS AND ORDER BY PART NUMBER AND DESCRIPTION.

"RIGHT" AND "LEFT" DESCRIPTIONS

THE DESIGNATION "RIGHT" AND "LEFT" AS USED IN THIS PARTS LIST ARE DETERMINED FROM THE DRIVER'S POSITION.

UNIDENTIFIED PARTS

IF YOU CANNOT IDENTIFY THE PART REQUIRED, BY PART NUMBER AND DESCRIPTION, USE ONE OF TWO ALTERNATIVES:

- A. SUBMIT THE OLD PART PROPERLY TAGGED WITH AS COMPLETE A DESCRIPTION OF THE ITEM AS POSSIBLE INCLUDING THE MODEL NUMBER. ALSO INDICATE THE LOCATION OF THE PART ON THE VEHICLE.
- B. FURNISH A SKETCH SHOWING THE SHAPE AND APPROXIMATE DIMENSIONS. ALSO GIVE COMPLETE INFORMATION INCLUDING MODEL NUMBER AND MENTION OR DRAW THE LOCATION OF THE PART ON THE VEHICLE.

WHENEVER IN DOUBT ABOUT THE PARTS REQUIRED GIVE THE CHASSIS SERIAL NUMBER WHICH IS SHOWN ON A PLATE (ILLUSTRATED BELOW) LOCATED ON THE RIGHT SIDE OF THE ENGINE ENCLOSURE, IN THE CAB ON FIRST JOBS, AND LOCATED ON TOP OF INSTRUMENT PANEL ON LATER JOBS.

GENERAL MOTORS OF CANADA LTD. OSHAWA, CANADA	
CHASSIS MODEL	C-60448 - M - W
CAB MODEL	13
CHASSIS SERIAL	2844300960
ENGINE SERIAL	XR3678541
ORDER No.	SPL/MECH - 2037 (4x4)
DATE OF MFG	MCH, 23 1942

CHEVROLET--SPARE PARTS LIST--HEAVY UTILITY 4x4 WITH PERSONNEL BODY**ALPHABETICAL INDEX**

Page	Page		
A			
ACCELERATOR CONTROL.....	60	CORE, Radiator.....	19
AIR CLEANER.....	59	COUNTERSHAFT & GEARS.....	74
AMMETER.....	128	COVER, Crankcase Front End.....	8
ARM, Steering.....	102	COVER, Radiator Grille.....	19
ARM, Valve Rocker.....	9	COVER, Transmission Power Take-off.....	74
AXLE, Front.....	101	COVER, Valve Rocker.....	10
AXLE, Rear.....	92	CRANK, Starting.....	8
B		CRANKSHAFT.....	13
BAFFLES, Radiator.....	21	CRANKSHAFT BALANCER & PULLEY.....	13
BALANCER, Crankshaft.....	13	CYLINDER BLOCK.....	6
BATTERY.....	39	CYLINDER, Brake Main.....	81
BEARINGS, Crankshaft.....	7	CYLINDER BRAKE WHEEL.....	82
BEARINGS, Pinion - Front Axle.....	103	CYLINDER HEAD.....	9
BEARINGS, Pinion - Rear Axle.....	94	D	
BEARINGS, Front Axle Differential.....	104	DEFROSTER.....	130
BEARINGS, Rear Axle Differential.....	95	DIFFERENTIAL & CARRIER, Front.....	104
BEARINGS, Rear Wheel.....	98	DIFFERENTIAL & CARRIER, Rear.....	94
BELT, Fan.....	18	DISTRIBUTOR, Ignition.....	41
BLOCK, Cylinder.....	6	DISTRIBUTOR, Oil.....	26
BOX, Battery.....	39	DRUMS, Brake.....	97
BOLTS, Spring Centre.....	116	DILUTER PUMP CRANKCASE.....	27
BONDING STRAP, Radio.....	47	DOLE PRIMER.....	56
BRACKET, Fuel Tank.....	58	E	
BRACKET, Front License.....	117	ENDS, Front Axle Steering.....	102
BRACKET, Spring.....	111	ENGINE.....	6
BRACKET, Transfer Case Support.....	79	ENGINE MOUNTING.....	6
BRACKET, Steering Gear.....	112	ENGINE REAR SUPPORT.....	112
BRACKET, Starting Crank.....	111	F	
BRAKE LEVER, Emergency.....	90	FAN.....	8
BRAKE DRUMS, Front.....	97	FENDERS, Front.....	119
BRAKE CABLES.....	86	FENDERS, Rear.....	120
BRAKE DRUMS, Rear.....	97	FILTER, Fuel.....	66
BRAKE FLUID.....	85	FILTER, Oil.....	26
BRAKE PEDAL.....	81	FIRST AID KIT.....	124
BRAKES, Front & Rear.....	88	FLANGES, Propeller Shaft.....	95
BUTTON, Horn.....	54	FLAP, Mud.....	121
BUMPER, Clutch Pedal.....	128	FLUID, Brake.....	85
BUMPER, Front.....	117	FLUID, Shock Absorber.....	114
BOX, Crankcase Oil Diluter Switch Panel.....	31	FLYWHEEL.....	13
C		FRAME.....	110
CABLES, Brake.....	86	G	
CABLES, Battery.....	40	GAUGE, Fuel.....	57
CAMSHAFT.....	11	GAUGE, Fuel (On Instrument Panel).....	128
CAP, Crankcase Ventilator.....	23	GEAR, Main Drive Or Clutch.....	73
CAP, Front Hub.....	98	GEAR & PINION, Drive - Front.....	104
CARBURETOR.....	63	GEAR & PINION, Drive - Rear.....	95
CARRIER, Rear Axle Differential.....	94	GEARS, Speedometer.....	72
CARRIER, Front Axle Differential.....	104	GEARSHIFT TRANSMISSION.....	71
CASE, Transfer.....	76	GEARS, Timing.....	14
CASE, Front Axle Differential.....	104	GEARS, Transfer Case Idler.....	77
CASE, Rear Axle Differential.....	94	GEARS, Transfer Case Driven.....	78
CHAINS, Tire.....	124	GENERATOR.....	36
CLEVIS, Front Towing.....	111	GOVERNOR.....	65
CLIPS, Spring Leaf.....	116	GRILLE, Radiator.....	21
CLUTCH.....	15		
CLUTCH RELEASE PARTS.....	14		
COIL, Ignition.....	33		
CONDENSERS, Radio.....	48		
CONNECTING ROD.....	11		
CONNECTOR, Valve Rocker Shaft Oil.....	27		

CHEVROLET--SPARE PARTS LIST--HEAVY UTILITY 4x4 WITH PERSONNEL BODY**ALPHABETICAL INDEX**

	Page		Page
G (Cont'd)		O	
GROMMETS, Rubber.....	130	OUTLET, Water.....	19
GUARD, Radiator.....	117		
H		P	
HANGER, Front Spring.....	112	PAN, Engine Side.....	119
HANGER, Rear Spring.....	111	PAN, Oil.....	22
HEATER, Body.....	126	PANEL, Instrument.....	128
HEAD, Cylinder.....	9	PEDAL, Brake.....	81
HEATER, Dash.....	125	PEDAL, Clutch.....	15
HORN.....	54	PIPES, Oil.....	23
HOSE, Brake.....	84	PIPES, Fuel.....	58
HOSE, Radiator.....	19	PIPE, Exhaust.....	62
HOUSING, Clutch.....	13	PIPES, Brake.....	85
HOUSING, Front Axle.....	103	PIPE, Muffler Tail.....	62
HOUSING, Rear Axle.....	92	PIPE, Steam Relief.....	22
HOOD.....	119	PISTONS.....	12
HUB, Front Wheel.....	105	PISTON PINS & BUSHINGS.....	12
HUB, Rear Wheel.....	97	PLUGS, Spark & Wires.....	35
I		PRIMER, Fuel Tank.....	56
INDICATOR, Heat (Gauge).....	128	PULLEY, Generator.....	36
INDICATOR, Oil Level.....	22	PULLEY, Crankshaft.....	13
INSTRUMENTS.....	128	PUMP, Fuel.....	65
		PUMP, Oil.....	24
		PUMP, Water.....	18
		PUMP, Oil Diluter.....	27
J		R	
JOINTS, Universal.....	96	RADIATOR.....	19
JOINT & SHAFT, Front Axle.....	101	RADIATOR NAME PLATE.....	21
K		REGULATOR, Voltage.....	44
KNUCKLE, Steering.....	101	RETAINER, Transmission Rear Bearing.....	72
L		RELAY, Current Limit.....	45
LAMPS, Head.....	53	RINGS, Piston.....	12
LAMP, Instrument.....	54	RODS, Connecting.....	11
LAMPS, Side.....	48	RODS, Hand Brake.....	86
LAMP, Rear Axle.....	51	ROD, Oil Level.....	22
LAMPS, Tail & Stop.....	49	ROD, Steering Connecting.....	109
LEVER, Gearshift.....	71	ROD, Front Axle Tie.....	102
LEVER, Hand Brake.....	80	RUNNING BOARDS.....	121
LINK, Drag.....	109	S	
LOCK, Ignition.....	33	SEAL, Transmission Mainshaft Oil.....	73
M		SHAFT, Speedometer.....	73
MANIFOLD, Exhaust.....	61	SHAFT & GEAR, Reverse Idler.....	74
MANIFOLD, Intake.....	58	SHAFT & GEAR, Transfer Case Main Drive.....	76
MEMBERS, Frame Side & Cross.....	110	SHAFT, Axle - Rear.....	92
MOUNTING, Engine.....	6	SHAFT, Propeller.....	92
MUFFLER.....	62	SHAFT, Hand Brake Cross.....	86
N		SHAFT, Transfer Case Driven.....	78
NUT, Drive Pinion Flange - Front Axle.....	105	SHAFT, Transfer Case Main Drive.....	76
NUT, Drive Pinion Flange - Rear Axle.....	97	SHAFT, Transfer Case Declutch.....	78
		SHAFT, Transfer Case Idler.....	77
		SHAFT, Steering Gear Pitman.....	109
		SHAFT, Valve Rocker Arm.....	9
		SHIELD, Distributor.....	43
		SHOCK ABSORBERS.....	113
		SHOCK ABSORBER FLUID.....	114
		SHROUD, Radiator Fan.....	21
		SOCKET, Steering End Ball.....	102
		SPEEDOMETER.....	128
		SPEEDOMETER GEARS.....	72

CHEVROLET--SPARE PARTS LIST--HEAVY UTILITY 4x4 WITH PERSONNEL BODY**ALPHABETICAL INDEX**

Page	Page
S (Cont'd)	
SPRINGS, Front.....	114
SPRINGS, Rear.....	116
SPRING ATTACHING PARTS, Front.....	115
SPRING ATTACHING PARTS, Rear.....	116
STARTER CONTROL.....	31
STARTING MOTOR.....	31
STEERING GEAR.....	107
STOVE, Chassis Heater.....	126
SUPPORT, Radiator.....	20
SIDE PAN, Engine.....	119
SWITCH, Instrument Panel.....	130
SWITCH, Tail & Rear Axle Lamp.....	44
SWITCH, Stop Lamp.....	44
SWITCH, Dimmer.....	44
SWITCH, Oil Diluter Safety.....	30
SWITCH, Oil Diluter Time.....	30
T	
TAPPET, Valve.....	11
TANK, Radiator Overflow.....	21
TANK, Fuel.....	55
THERMOSTAT.....	20
THROTTLE CONTROL.....	60
TOOLS.....	122
TOW ROPE.....	124
TRANSFER CASE AIR CLEANER.....	76
TRANSFER CASE.....	76
T (Cont'd)	
TRANSFER CASE CONTROL.....	79
TRANSFER CASE, Main Drive Shaft & Gear.....	76
TRANSMISSION.....	71
TRANSMISSION CASE & COVER.....	71
TRANSMISSION MAIN SHAFT & GEARS.....	73
U	
UNIVERSAL JOINTS.....	96
V	
VACUUM CONTROL, Distributor.....	43
VALVE, Exhaust Manifold.....	62
VALVES.....	9
VALVE, Push Rod & Tappet.....	11
VALVE, Engine Ventilator Metering.....	25
VENTILATOR, Crankcase.....	25
VENT, Rear Axle.....	94
VENT, Front Axle.....	104
W	
WHEELS.....	97
WIRES, Ignition.....	35
WIRING.....	45

B O D Y

Page	Page
BAG, Curtain.....	143
CLIP, Rifle.....	147
DOORS.....	136
FLOOR.....	145
HATCH, Front Roof.....	148
HATCH, Rear Roof.....	150
HOUSING, Motor.....	144
LIGHT, Dome.....	143
MIRROR, Rear View.....	135
MOUNTING, Body.....	128
MOUNTING, Front End Shell.....	147
PANEL, Instrument.....	135
PARTITION, Centre.....	143
ROD, Side Curtain.....	143
SEATS.....	147
SHROUD.....	152
SHELL, Front End.....	145
VENTILATOR, Side.....	136
WIPER, Windshield.....	134
WINDOW, Rear Quarter.....	142
WINDSHIELD.....	132
WIRELESS OPERATOR'S CRASH PAD.....	152

