

**DODGE TRUCK
PARTS LIST
FOR
BRITISH ARMY**

**SYMBOL D^{3/4}APT
3/4 TON 4 X 4 -98" W.B.**

**SUPPLY MECH. 6423
ISSUED APRIL 15, 1945**



**BUILT FOR
BRITISH WAR DEPARTMENT**

**CHRYSLER CORPORATION OF CANADA, LIMITED
(PARTS DIVISION)**

DODGE TRUCK PARTS LIST

ARMY SYMBOL D^{3/4} APT

GENERAL INFORMATION

Model	T-236
Wheel Base	98 Inches
Capacity	3/4 Ton
Drive	4 x 4
Hypoid Axle	5.83 to 1 ratio
No. Cylinders	6
Cylinder Bore	3 7/16 Inches
Stroke	4 1/4 Inches
Serial Nos.	91,151,283 to 91,156,282 91,166,034 to 91,172,783

WM 4143

Specifications
Vehicle Illustrations
Indexes
Group 1 Bumpers, Guards, Winch
Group 2 Front Axle
Group 3 Rear Axle
Group 4 Hand Brake
Group 5 Service Brake
Group 6 Clutch
Group 7 Cooling
Group 8 Electrical
Group 9 Engine
Group 10 Engine Oiling
Group 11 Exhaust
Group 12 Fenders & Sheet Metal
Group 13 Frame
Group 14 Fuel
Group 15 Hood
Group 16 Prop. Shaft & U. Joint
Group 17 Springs
Group 18 Standard Parts
Group 19 Steering
Group 20 Tools
Group 21 Transmission, Power Take Off, Transfer Case
Group 22 Wheels
Group 23 Body, Flat Face Cowl

INFORMATION

The information consolidated into this Parts List includes the following:

Part Name.	Part Number.
Model application.	Quantity used per truck.
Effective points of changes by truck serial number, engine number or body number.	Special notes necessary for proper identification of parts.

ARRANGEMENT

Each major group is divided into sub-groups which are numbered and lettered. The numbers used on the sub-groups are the same as the numbers of their respective major groups. The letters on the sub-groups are in alphabetical sequence in the major groups - for example:

Major Group No. 9 has sub-groups 9-A, 9-B, 9-C, etc.

Attaching parts such as bolts, nuts, studs, etc., can easily be identified as in most cases they follow the part or parts with which they are used and are shown indented from the margin.

ILLUSTRATIONS

Illustrations are included at the beginning of each major group. The correct names for parts in the illustrations are shown below or on the back of the picture and are keyed to the picture by reference numbers. Immediately following the part names will be

found the number of the parts list sub-group in which the part is listed.

An index of illustration plate numbers will be found immediately preceding the alphabetical index.

PAGE NUMBERING

To facilitate locating parts, all pages are numbered in consecutive order by major groups, the page number showing first the major group number followed by the number of

the page in the group -- for example:

Page 9-3, 9-4, 9-5, indicate: Group 9, page 3; Group 9, page 4; Group 9, page 5.

ALPHABETICAL INDEX

Quick reference to a part by name is provided in the alphabetical index. This index shows the number of the sub-group in which the parts are listed.

All important parts are listed in this index; small related parts not shown will be found immediately adjacent to the listed parts in their respective groups.

NUMERICAL INDEX

Reference to any part number is provided in the numerical index. This index lists all

parts in numerical sequence and shows the sub-group in which each part number is listed.

STANDARD PARTS

For illustrations and description of Standard Parts, such as screws, bolts, nuts, washers, etc., see Group 18.

April 15, 1945

DODGE TRUCK PARTS LIST—MODEL T236—SYMBOL D $\frac{1}{4}$ APT.

0-3

GENERAL SERVICE BODY WITH WINCH

SIDE VIEW - LEFT

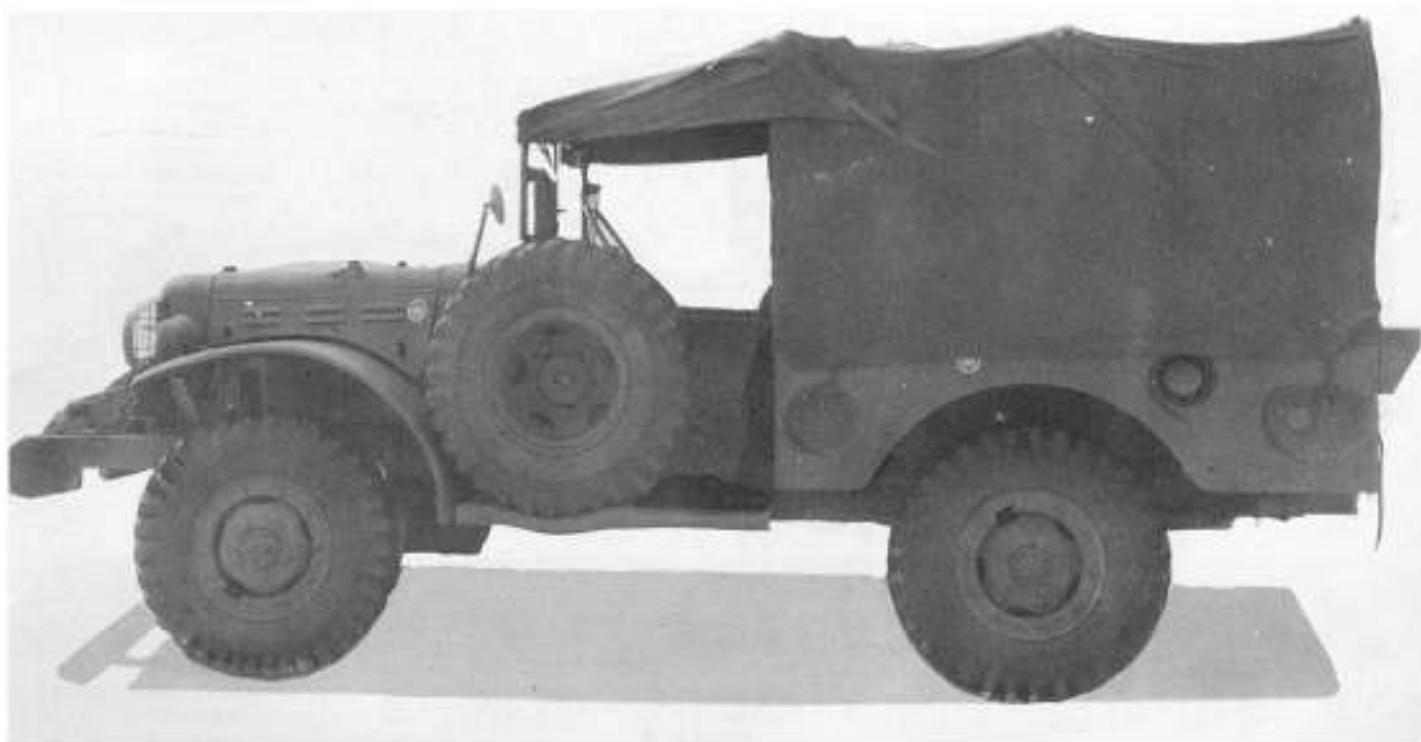


Plate 1.

FRONT VIEW



Plate 2

GENERAL SERVICE BODY WITH WINCH
SIDE VIEW - RIGHT



Plate 3

REAR VIEW



Plate 4

April 15, 1945

DODGE TRUCK PARTS LIST—MODEL T236—SYMBOL D $\frac{3}{4}$ APT.

0-5

ILLUSTRATION INDEX

Plate	Name	Page
1	General service body with winch - side view - left - - - - -	0-3
2	General service body with winch - front view - - - - -	0-3
3	General service body with winch - side view - right - - - - -	0-4
4	General service body with winch - rear view - - - - -	0-4
5	Winch - - - - -	1-3
6	Front axle - - - - -	2-1
7	Drag link - - - - -	2-3
8	Rear axle - - - - -	3-1
9	Rear axle housing - - - - -	3-2
10	Hand brake - - - - -	4-1
11	Wheel brake - - - - -	5-1
12	Master cylinder - - - - -	5-2
13	Wheel cylinder - - - - -	5-2
14	Clutch - - - - -	6-1
15	Clutch housing - - - - -	6-1
16	Water pump - - - - -	7-1
17	Distributor - - - - -	8-1
18	Generator - - - - -	8-2
19	Starting motor - - - - -	8-3
20	Engine - - - - -	9-1
21	Engine oiling - - - - -	10-1
22	Oil pump - - - - -	10-2
23	Exhaust system - - - - -	11-1
24	Carburetor - - - - -	14-1
25	Fuel pump - - - - -	14-2
26	Propeller shaft and universal joint - - - - -	16-1
27	Propeller shaft and universal joint - - - - -	16-1
28	Steering gear - - - - -	19-1
29	Steering gear - - - - -	19-2
30	Transmission - - - - -	21-1
31	Power take off - - - - -	21-5
32	Transfer case - - - - -	21-7
33	Front Wheel - - - - -	22-1
34	Rear wheel - - - - -	22-2

NOTES:

ALPHABETICAL INDEX

Group	Group	Group
A	B	C
Absorber - shock..... 17-K Accelerator pedal..... 14-A Accelerator shaft and bracket..... 14-A Accelerator shaft to bell crank rod..... 14-A Ammeter..... 8-A Arm - steering..... 2-F Arm - steering gear..... 19-D Arm - windshield adjusting..... 23-A Arm - windshield wiper.. 23-B Arrestor - front spring torque..... 17-E Axle - front..... 2-A Axle - rear..... 3-A	Bracket - liquid container..... 12-E Bracket - radiator support..... 7-B Bracket - rear spring... 13-C Bracket - rifle..... 23-S Bracket - steering gear housing..... 19-C Bracket - steering post to dash..... 19-E Bracket - windshield adjusting arm frame.... 23-A Bracket - windshield pivot..... 23-A Bracket - windshield toggle..... 23-A Brake drum..... 22-B Brake hose..... 5-M Brake lining package.... 5-B Brake pedal..... 5-H Brake pedal bracket.... 5-H Brake pedal pad..... 23-D Brake pedal return spring 5-H Brake shoe adjusting parts..... 5-E Brake shoe anchor parts. 5-D Brake shoe and lining... 5-B Brake shoe guide parts.. 5-F Brake shoe return spring 5-G Brake solution..... 5-A Brake support..... 5-C Brake tube..... 5-K Brake tube tee..... 5-L Breaker - circuit..... 8-H Breather pipe..... 10-A Bumper - front..... 1-A Bumper - front spring... 17-C Bumper - hood..... 15-E Bumper - rear..... 1-A Bumper - rear axle..... 17-J Button - horn..... 19-H Bracket - fender shield. 12-B Bracket - fender support 12-B Bracket - tail lamp.... 8-G Breaker - circuit..... 8-M	Carburetor gasket set... 14-E Carburetor repair package..... 14-E Carrier and cap - differential..... 2-C Carrier - spare wheel... 22-F Case - differential..... 2-C Case - transfer..... 21-I Catch - hood lock..... 15-C Catch - hood prop..... 23-I Catch - hood windshield. 15-F Chain case cover..... 9-K Chain case cover oil seal package..... 9-J Chain case cover plate.. 9-K Chain - lazy back 23-F Chain - tail gate..... 23-J Chain - timing..... 9-K Choke control wire..... 14-C Circuit breaker..... 8-H 8-M Clamp - battery hold down..... 23-E Clamp - exhaust pipe.... 11-A Clamp - steering post to instrument panel.... 19-E Clamp - universal joint. 16-B Clamp - windshield..... 23-A Cleaner - carburetor air 14-E Clip - front spring..... 17-D Clip - rear spring..... 17-I Clutch disc..... 6-B Clutch housing..... 6-A Clutch pedal..... 6-F Clutch pedal bracket.... 6-F Clutch pedal linkage.... 6-F Clutch pedal pad..... 23-D Clutch pedal return spring..... 6-F Clutch pedal shaft.... 6-F Clutch pressure plate... 6-C Clutch release bearing.. 6-D Clutch release fork..... 6-E Clutch release fork flange..... 6-E Clutch - sliding..... 1-E Cock - water jacket drain..... 9-B Coil..... 8-I Coil condenser..... 8-I Coil primary cable.... 8-I Companion flange..... 16-C Condenser - coil..... 8-I Condenser - starter motor..... 8-K Connecting rod..... 9-G Connecting rod bearings. 9-G Connector - trailer.... 8-N Core - radiator..... 7-A Cover - body side front compartment..... 23-L Cover - chain case..... 9-K Cover - drag link dust.. 2-H Cover - power take-off.. 21-E Cover - valve spring.... 9-L
B	C	
Back - front seat..... 23-F Battery hold down clamp. 23-E Battery terminal box.... 8-C Battery tray..... 23-E Bearing - camshaft..... 9-J Bearing - clutch release 6-D Bearing - connecting rod 9-G Bearing - crankshaft.... 9-E Bearing - differential.. 2-C 3-C Bearing - drive pinion.. 2-D 3-D Bearing - wheel..... 22-E Bell crank to carburetor rod..... 14-B Belt - fan..... 7-A Blackout driving lamp... 8-G Blade - fan..... 7-A Block - cylinder..... 9-B Block - trailer connector junction..... 8-N Board - floor..... 23-C Board - running..... 12-D Body hold down bolt.... 23-G Body reflector..... 23-Q Body side front compartment cover..... 23-L Body side panel..... 23-K Bolt - body hold down... 23-G Bolt - engine front support..... 9-N Bolt - engine rear support..... 9-N Bolt - front spring..... 17-B Bolt - rear spring..... 17-H Bow - roof top..... 23-P Box - battery terminal.. 8-C Box - glove..... 23-H Brace - cowl ventilator-ratchet..... 23-M Bracket - accelerator shaft..... 14-A Bracket - brake pedal... 5-H Bracket - cab hold down. 13-C Bracket - clutch pedal.. 6-F Bracket - engine rear support..... 13-C Bracket - ignition cable 8-I	Cab hold down bracket... 13-C Cable - coil primary.... 8-I Cable - ground..... 8-B Cable guide..... 1-D Cable - horn button.... 19-H Cable - ignition..... 8-I Cable - starter..... 8-B Cable terminal box to battery..... 8-C Cable - winch..... 1-D Camshaft..... 9-J Camshaft bearing..... 9-J Camshaft sprocket..... 9-J Cap - crankshaft bearing 9-E Cap - fuel tank filler.. 14-I Cap - radiator filler... 7-B Carburetor..... 14-E Carburetor air cleaner.. 14-E Carburetor air cleaner... 14-E	

April 15, 1945

DODGE TRUCK PARTS LIST—MODEL T236—SYMBOL D $\frac{3}{4}$ APT.

0-7

ALPHABETICAL INDEX

Group		Group		Group	
C		D		F	
Cowl.....	23-I	Drive pinion bearing....	2-D	Frame seat back pad.....	23-F
Cowl trim panel.....	23-N	Drive pinion bearing	3-D	Frame - windshield.....	23-A
Cowl trim panel support.....	23-I	spacer.....	2-D	Front axle.....	2-A
Cowl ventilator lid.....	23-M	Drum - brake.....	22-B	Front axle housing.....	2-B
Cowl ventilator ratchet and brace.....	23-M	Drum - winch.....	22-D	Front axle universal	
Crank - throttle control	14-B	Drum - winch safety	1-D	drive.....	2-E
Crankcase metering valve	9-M	brake.....	1-G	Front bumper.....	1-A
Crankcase ventilator....	9-M	Dust cover - tie rod end	2-G	Front fender.....	12-B
Crankcase ventilator tube.....	9-M	E		Front panel.....	23-K
Crankshaft.....	9-E	Elbow - carburetor air cleaner.....	14-E	Front seat.....	23-F
Crankshaft bearing.....	9-E	Elbow - cylinder head water outlet.....	9-B	Front seat back.....	23-F
Crankshaft bearing cap..	9-E	End - tie rod.....	2-G	Front spring.....	17-A
Crankshaft bearing cap oil seal package.....	9-E	Engine.....	9-A	Front spring bolt.....	17-B
Crankshaft bearing package.....	9-E	Engine dust pan.....	12-A	Front spring bumper.....	17-C
Crankshaft sprocket....	9-E	Engine front support bolt	9-N	Front spring clip.....	17-D
Crankshaft starting jaw.	9-E	Engine overhaul gasket package.....	9-B	Front spring hanger.....	13-C
Cross - universal joint.	16-B	Engine primer.....	14-J	Front spring shackle....	17-B
Cross - winch universal joint.....	1-I	Engine primer tube.....	14-J	Front spring torque arrestor.....	17-E
Crossmember - frame....	13-B	Engine rear support.....	9-N	Fuel pump.....	14-G
Curtain - roof paulin end.....	23-P	Engine rear support bracket.....	13-C	Fuel pump heat shield...	14-G
Cushion - front seat....	23-F	Engine to oil gauge tube.....	10-B	Fuel pump repair package	14-G
Cylinder block.....	9-B	Engine valve grind gasket package.....	9-B	Fuel tank.....	14-I
Cylinder block plug....	9-B	Exhaust pipe.....	11-A	Fuel tank filler cap....	14-I
Cylinder head.....	9-C	Exhaust pipe clamp.....	11-A	Fuel tank filler tube...	14-I
Cylinder head plug.....	9-C	F		Fuel tank filler tube hose.....	14-I
Cylinder head water out- let elbow.....	9-B	Fan belt.....	7-A	Fuel tank support strap	14-I
Cylinder - master.....	5-I	Fan blade.....	7-A	Fuel tank vent tube....	14-I
Cylinder - wheel.....	5-J	Fan pulley.....	7-A	Fuel tube.....	14-H
D		Fan shroud.....	7-A	G	
Dash clutch housing cover.....	23-I	Fender - front.....	12-B	Gasket - manifold.....	9-D
Dash liner.....	23-D	Fender shield bracket...	12-C	Gate - tail.....	23-J
Differential.....	2-C	Fender splash shield....	12-C	Gauge - oil.....	10-B
.	3-C	Fender splash shield filler.....	12-C	Gear - differential.....	2-C
Differential bearing....	2-C	Fender support bracket...	12-B	Gear - drive.....	3-C
.	3-C	Filler - fender splash shield.....	12-C	Gear - power take-off...	2-D
Differential carrier and cap.....	2-C	Filter - oil.....	10-C	Gear - steering.....	19-A
.	3-C	Filter - radiator inter- ference.....	8-Q	Gear - transfer case drive.....	21-I
Differential case.....	2-C	Flange - clutch release fork.....	6-E	Gear - winch.....	1-F
.	3-C	Flange - companion.....	16-C	Generator.....	8-E
Differential gears.....	2-C	Flange - steering knuckle.....	2-F	Generator - pulley.....	8-E
.	3-C	Floor board.....	23-C	Generator regulator.....	8-F
Disc - clutch.....	6-B	Floor board skid strip..	23-C	Glove box.....	23-H
Distributor.....	8-D	Flywheel.....	9-F	Ground cable.....	8-B
Distributor suppressor..	8-D	Fork - clutch release...	6-E	Ground strap.....	8-P
Drag link.....	2-H	Fork - transfer case shift.....	21-I	Guard - headlamp.....	1-B
Drag link dust cover....	2-H	Fork - winch shifter....	1-E	Guard - radiator.....	1-B
Drag link dust cover package.....	2-H	Frame.....	13-A	Guide - cable;.....	1-D
Drag link end package...	2-H	Frame crossmember.....	13-B	H	
Drive gear.....	2-D			Handle - hood lock.....	15-C
.	3-D			Hanger - front spring...	13-C
Drive gear and pinion...	2-D			Hanger - running board..	13-C
Drive pinion.....	2-D			Head - cylinder.....	9-C
.	3-D			Head lamp.....	8-G
				Head lamp guard.....	1-B
				Head lamp sealed beam unit.....	8-G
				Hinge - hood.....	15-B
				Hinge side compartment lid.....	23-L

ALPHABETICAL INDEX

Group	Group	Group
H	L	P
Hood.....15-A Hood bumper.....15-E Hood hinge.....15-B Hood hinge support.....15-B Hood lacing.....23-I Hood lock catch.....15-C Hood lock handle.....15-C Hood lock plate.....15-C Hood prop.....15-D Hood prop catch.....23-I Hood windshield catch...15-F Hood windshield support..15-F Hook - pintle.....13-D Hook - tow.....13-D Horn.....8-H Horn button.....8-H Horn button cable.....19-H Hose - brake.....5-M Hose - fuel tank filler tube.....14-I Hose - oil filter.....10-C Hose - radiator.....7-B Housing - clutch.....6-A Housing - front axle....2-B Housing - rear axle....3-B Housing - steering gear..19-B Housing - winch worm....1-F Hub stud.....22-C Hub-wheel.....22-B	Lining and brake shoe...5-B Liner - dash.....23-D Link - drag.....2-H Linkage - clutch pedal..6-F Liquid container bracket 12-E Lock - side compartment toggle.....23-L	Package - shock absorber repair.....17-K Package - tie rod end...2-G Package - transfer case gasket.....21-I Package - transfer case shim.....21-I Package - universal joint.....16-B Package - valve spring cover.....9-L Package - water pump service.....7-D Package - wheel cylinder service.....5-J Package - winch universal joint.....1-I Pad - brake pedal.....23-D Pad - clutch pedal.....23-D Pad - steering column draft.....23-D Pad - transmission cover.....23-D Pan - engine dust.....12-A Pan - oil.....10-G Pan - seat cushion.....23-F Panel - body side.....23-K Panel - cowl trim.....23-N Panel - dash clutch housing cover.....23-I Panel - front.....23-K Panel - instrument.....23-K Panel - seat back.....23-F Parts - brake shoe adjusting.....5-E Parts - brake shoe anchor.....5-D Parts - brake shoe guide.....5-F Parts - manifold attaching.....9-D Paulin - roof.....23-P Pedal - accelerator.....14-A Pedal - brake.....5-H Pedal - clutch.....6-F Pedal - starter.....8-L Pin - piston.....9-I Pinion bearing oil seal.....2-D Pinion - drive.....2-D Pintle hook.....13-D Pipe - breather.....10-A Pipe - exhaust.....11-A Pipe - oil pump outlet..10-D Pipe - oil pump suction..10-D Pipe - tail.....11-C Piston.....9-H Piston pin.....9-I Piston ring.....9-H Piston ring set.....9-H Plate - chain case cover 9-K Plate - clutch pressure..6-C Plate - hood lock.....15-C Plug - cylinder block...9-B Plug - cylinder head....9-C Pole - roof ridge.....23-P Power plant.....9-A Power take-off.....21-H Power take-off cover....21-E
I	M	
Ignition cable.....8-I Ignition cable bracket..8-I Indicator - oil level...10-G Instrument panel.....23-K Instrument panel lamp housing.....8-J Instrument panel lamp...8-G	Mainshaft - power take-off.....21-H Manifold.....9-D Manifold attaching parts 9-D Manifold gasket.....9-D Map table.....23-H Master cylinder.....5-I Master cylinder service package.....5-I Material - trim.....25-R Mirror - rear view.....23-0 Motor - windshield wiper 23-B Muffler.....11-B	
J	N	
Jacket - steering column 19-E Jaw - crankshaft starting.....9-E Joint - winch universal. 1-I	Nut - wheel adjusting...22-E	
K	O	
Knuckle - steering.....2-F	Oil container strap....23-T Oil filter.....10-C Oil filter hose.....10-C Oil filter tube.....10-C Oil gauge.....10-B Oil level indicator....10-G Oil pan.....10-G Oil pan gasket package..10-G Oil pump.....10-D Oil pump outlet pipe...10-D Oil pump suction pipe...10-D Oil strainer.....10-E	
L	P	
Lacing - hood.....23-I Lacing - radiator shell..7-C Lamp - blackout driving..8-G Lamp - tail.....8-G Lamp - switch.....8-M Latch - seat.....23-F Lazy back chain.....23-F Lazy back prop.....23-F Lazy back seat.....23-F Lever - transfer case control.....21-J Lid - cowl ventilator...23-M Lid - side compartment..23-L	Package - brake lining..5-B Package - carburetor repair.....14-E Package - chain case cover oil seal.....9-J Package - crankshaft bearing.....9-E Package - crankshaft bearing cap oil seal..9-E Package - drag link dust cover.....2-H Package - drag link end..2-H Package - engine overhaul gasket.....9-B Package - engine valve grind gasket.....9-B Package - fuel pump repair.....14-G Package - master cylinder service.....5-I Package - oil pan gasket.....10-G	

April 15, 1945

DODGE TRUCK PARTS LIST—MODEL T236—SYMBOL D $\frac{3}{4}$ APT.

0-9

ALPHABETICAL INDEX

Group	Group	Group
P	S	S
Power take-off gear.... 21-H Power take-off mainshaft 21-H Power take-off shifter shaft..... 21-H Pressure relief valve... 10-F Primer - engine..... 14-J Prop - hood..... 15-D Prop - lazy back..... 23-F Propeller shaft..... 16-A Propeller shaft sliding yoke..... 16-A Pulley - fan..... 7-A Pulley - generator..... 8-E Pump - fuel..... 14-G Pump - oil..... 10-D Pump - water..... 7-D	Safety brake band - winch..... 1-G Screw - windshield support frame pivot... 23-A Seal - pinion bearing oil..... 2-D Seal - transfer case oil..... 21-I Seat back pad frame.... 23-F Seat cushion pan..... 23-F Seat - front..... 23-F Seat latch..... 23-F Seat - lazy back..... 23-F Seat safety strap..... 23-F Set - carburetor gasket. 14-E Set - piston ring..... 9-H Shackle - front spring.. 17-B Shackle - rear spring... 17-G Shaft - clutch pedal.... 6-F Shaft - power take-off shifter..... 21-H Shaft - propeller..... 16-A Shaft - rear axle..... 3-E Shaft - steering gear cross..... 19-F Shell - radiator..... 7-C Shield - fender splash.. 12-C Shield - fuel pump heat. 14-G Shock absorber..... 17-K Shock absorber repair package..... 17-K Shoe & lining - winch brake..... 1-G Shroud - fan..... 7-A Side compartment lid.... 23-L Side compartment lid hinge..... 23-L Side compartment toggle lock..... 23-L Sliding clutch..... 1-E Solution - brake..... 5-A Spacer drive pinion bearing..... 2-D Spare wheel carrier.... 22-F Spark plug..... 8-I Spark plug suppressor.. 8-I Spring - brake pedal return..... 5-H Spring - brake shoe re- turn..... 5-G Spring - clutch pedal return..... 6-F Spring - front..... 17-A Spring - rear..... 17-F Spring - valve..... 9-L Sprocket - camshaft 9-J Sprocket - crankshaft... 9-E Starter cable..... 8-B Starter motor condenser. 8-K Starter pedal..... 8-L Starting crank support.. 1-A Steering arm..... 2-F Steering column draft pad..... 23-D Steering column jacket.. 19-E	Steering gear..... 19-A Steering gear arm..... 19-D Steering gear cross shaft..... 19-F Steering gear housing... 19-B Steering gear housing bracket..... 19-C Steering knuckle..... 2-F Steering knuckle flange. 2-F Steering post to dash bracket..... 19-E Steering post to instrument panel clamp 19-E Steering tie rod..... 2-G Steering tube and worm.. 19-G Steering wheel..... 19-H Strainer - oil..... 10-E Strap - fuel tank support..... 14-I Strap - ground..... 8-P Strap - oil container... 23-T Strap - seat safety.... 23-F Strip - floor board skid 23-C Stud - hub..... 22-C Stud - transfer case bearing, retainer..... 21-I Support - brake..... 5-C Support - cowl trim panel..... 23-I Support - hood hinge.... 15-B Support - hood windshield..... 15-F Support - radiator..... 7-B Support - radiator shell 7-C Support - starting crank 1-A Suppressor - distributor 8-D Suppressor - spark plug. 8-I Switch - lamp..... 8-M
R		T
Rack - tail gate tool... 23-J Radiator core..... 7-A Radiator filler cap.... 7-B Radiator guard..... 1-B Radiator hose... 7-B Radiator interference filter..... 8-G Radiator outlet tube.... 7-B Radiator overflow tank.. 7-B Radiator overflow tank. tube..... 7-B Radiator shell..... 7-C Radiator shell lacing... 7-C Radiator shell support.. 7-C Radiator support..... 7-B Radiator support bracket 7-B Radiator tie rod..... 7-B Rear axle..... 3-A Rear axle bumper..... 17-J Rear axle housing..... 3-B Rear axle shaft..... 3-E Rear bumper..... 1-A Rear spring..... 17-F Rear spring bolt..... 17-H Rear spring bracket.... 13-C Rear spring clip..... 17-I Rear spring shackle.... 17-G Rear view mirror..... 23-0 Reflector - body..... 23-Q Regulator - generator... 8-F Resistor - trailer connector..... 8-N Rifle bracket..... 23-S Ring - Piston..... 9-H Rod - accelerator shaft to bell crank..... 14-A Rod - bell crank to carburetor..... 14-B Rod - connecting..... 9-G Rod - radiator tie..... 7-B Roof paulin..... 23-P Roof paulin end curtain. 23-P Roof ridge pole..... 23-P Roof top bow..... 23-P Running - board..... 12-D Running board hanger.... 13-C	Table - map..... 23-H Tail gate..... 23-J Tail gate chain..... 23-J Tail gate tool rack.... 23-J Tail lamp..... 8-G Tail lamp bracket..... 8-G Tail lamp sealed beam unit..... 8-G Tail pipe..... 11-C Tank - fuel..... 14-I Tappet - valve..... 9-L Tee - brake tube..... 5-L Terminal box to battery cable..... 8-C Thermometer..... 7-E Thermostat..... 7-E Throttle control bell crank..... 14-B Throttle control wire... 14-B Tie rod end..... 2-G Tie rod end dust cover.. 2-G Tie rod end package.... 2-G Tie rod - steering..... 2-G Timing chain..... 9-K Tools..... 20-A Tow hook..... 13-D	