

PARTS LIST

1/2 Ton 4 x 2

DODGE TRUCK

Built for

UNITED STATES ARMY

MODEL NUMBERS

WC47, WC48, WC49, WC50

BID NUMBER 398-42-34

CONTRACT W-398-QM-11399

U. S. A. REGISTRATION NUMBERS

244725 to 245113 incl.
245114

2054363 to 2054736 Incl.
245115 to 245122 Incl.
006930

CHRYSLER CORPORATION

PARTS DIVISION

DETROIT, MICHIGAN, U. S. A.

FACTORY PARTS PLANT: - MARYSVILLE, MICHIGAN

D-10455

DODGE TRUCK

PARTS LIST

January 25, 1942

1/2 TON MODEL

BID NUMBER 398-42-34

CONTRACT NUMBER W-398-QM-11399

U. S. A. Registration No's.	MODEL	TYPE
244725 to 245114	245113 Incl. WC-47	Closed Cab and Express Body
245114	WC-47	Closed Cab and Pickup (Red)
2054363 to 245115	2054736 Incl. WC-48	Carryall
245115 to 006930	245122 Incl. WC-49	Panel Body
	WC-50	Cab and Telephone Installation Body

ENGINEERS' SYMBOL	T112
WHEELBASE	116"
CYLINDERS	6
STARTING SERIAL NO.	81,113,001

Group 01	Engine
Group 02	Clutch
Group 03	Fuel
Group 04	Exhaust
Group 05	Cooling
Group 06	Electrical
Group 07	Transmission
Group 09	Propeller Shaft
Group 10	Front Axle
Group 11	Rear Axle
Group 12	Brake
Group 13	Wheels, Hubs & Drums
Group 14	Steering
Group 15	Frame
Group 16	Springs & Shock Absorber
Group 17	Front Fender
Group 18	Body
Group 21	Bumpers
Group 22	Miscellaneous
Group 23	General Use, Standardized Parts
Group 24	Bearing Chart
Group 25	Specifications Lines, Base Tables
Group 26	Standard Parts

Instructions for Ordering Prime or Painted Sheet Metal Parts

Sheet metal parts which are indicated as "white" should be painted locally.

When local painting facilities are not available, prime or painted sheet metal parts may be ordered from Chrysler Corporation, Parts Division as follows:

To order primed parts specify "white" part number and in the description column on the parts order enter the "Prime Operation."

To order painted parts specify "white" part number and in the description column on the parts order enter the following: "Prime, Paint and Packing Operation." Also specify truck serial number.

PRIME FINISH AND SPECIAL PACKING OPERATIONS

Part No. Prime Operation	Description	Additional Net Price For Operation
830006	Front Fenders and Hood Top Panels	\$1.50
830007	Rear Fenders, Radiator Shells and Hood Halves	1.25
830010	Rear Wheel Shields (Per Shield), Radiator Air Scoop Pan, Radiator Grilles, Radiator Shell Panels, Running Boards, Running Board Splash Guards, Hood Side Panels, Body to Frame Splash Shields, Body Side Shields, Body to Rear Fender Splash Shields, Front Fender Splash Shield Assemblies, Fender Lower Grilles, Rear Bumper Stone Deflectors, Front Bumper Shields, Front Bumper End Plate.....	1.00

PRIME, PAINT AND SPECIAL PACKING OPERATIONS

Part No. Paint Operation	Description	Additional Net Price For Operation
830008	Front Fenders, Deck and Luggage Compartment Lids and Hood Top Panels.....	\$4.75
830009	Rear Fenders, Radiator Shells and Hood Halves	3.50
830011	Rear Wheel Shields (Per Shield), Radiator Air Scoop Pan, Radiator Grilles, Radiator Shell Panels, Running Boards, Running Board Splash Guards, Hood Side Panels, Body to Frame Splash Shields, Body Side Shields, Body to Rear Fender Splash Shields, Front Fender Splash Shield Assemblies, Fender Lower Grilles, Rear Bumper Stone Deflectors, Front Bumper Shields, Front Bumper End Plate.....	2.00
830004	Doors	5.00
None	Cab or Cab Shell (Painted).....	17.50
	Cab or Cab Shell (Crating Operation).....	7.50

The above net charges, not subject to discount, will be added to the net price of the part when a finish other than white is desired.

Prices and specifications subject to change without notice.

ILLUSTRATION INDEX

Plate No.	NAME	Page No.
1	Exploded View of Engine	01-1
2	Crankshaft Rear Bearing Cap Oil Seals	01-2
3	Center Section View of Engine	01-3
4	All Pressure Relief Valve	01-4
5	Clutch.	02-1
6	Clutch.	02-2
7	Carburetor.	03-1
8	Fuel Pump	03-2
9	Fuel Pump	03-2
10	Water Pump.	05-1
11	Water Pump.	05-1
12	Distributor	06-1
13	Starter Motor	06-2
14	Generator	06-3
15	Headlight Assembly.	06-4
16	Transmission (3 Speed) (Sectional View)	07-1
17	Transmission (3 Speed) (Exploded View).	07-2
18	Propeller Shaft and Universal Joint Assembly (Ball and Pin Type)	09-1
19	Propeller Shaft and Universal Joint Assembly (Ball and Pin Type)	09-1
20	Front Axle.	10-1
21	Front Axle.	10-1
23	Rear Axle (Exploded View)	11-1
24	Rear Axle (Sectional View).	11-2
25	Master Cylinder	12-1
26	Master Cylinder	12-1
27	Wheel Cylinder.	12-2
28	Wheel Cylinder.	12-2
29	Pedal Adjustment.	12-3
30	Rear Wheel Brakes	12-3
31	Front Wheel Mounting.	13-1
32	Rear Wheel Mounting	13-1
33	Steering Gear	14-1
34	Drag Link	14-2
35	Shock Absorber (Sectional View)	16-1
36	Shock Absorber (Exploded View).	16-2
37	Rear Spring Shackle	16-2
38	Carry-All Body.	18-2
39	Carry-All Body Detail	18-3
40	View of Express Body (With Longitudinal Seats).	18-4
41	Rear View of Panel Body	18-5
42	Interior View of Closed Cab	18-6
43	Detail Parts of Cab Door.	18-7

MAJOR GROUP INDEX

Group No.	NAME	Page No.
01	Engine.	01-1
02	Clutch.	02-1
03	Fuel System	03-1
04	Exhaust	04-1
05	Cooling	05-1
06	Electrical.	06-1
07	Transmission.	07-1
09	Propeller Shaft and Universal Joint	09-1
10	Axle - Front.	10-1
11	Axle - Rear	11-1
12	Brakes.	12-1
13	Wheels, Hubs and Drums.	13-1
14	Steering.	14-1
15	Frame and Brackets.	15-1
16	Springs and Shock Absorbers	16-1
17	Hoods, Fenders, Running Boards, Aprons (Miscellaneous, Sheet Metal).	17-1
18	Body Parts List	18-1
21	Bumpers and Guards.	21-1
22	Miscellaneous Body, Chassis and Accessories	22-1
23	General Use, Standardized Parts	23-1
24	Bearing Chart	24-1
25	Specification Lines, Hose and Tubes	25-1
26	Standard Parts Specifications	26-1

ALPHABETICAL INDEX-Continued

G (Cont'd.)	Group	H (Cont'd.)	Group	I (Cont'd.)	Group
Generator Regulator.....	0601	Hinge - Rear Door.....	18-0	Insulator - Exhaust Pipe	
Glass - Cab Back Window.....	18-M	Hinge - Tail Gate.....	18-K	Floor.....	18-V
Glass - Front Door.....	18-M	Hinge - Windshield.....	18-AI	Intake and Exhaust Manifold.....	0108
Glass - Front Side Window.....	18-M	Hinge Pillar Trim Panel.....	18-AL	Inverted Flared Tube	
Glass - Lift Gate.....	18-M	Hole - Fuel Filler Pipe.....	18-Z	Elbow.....	26-2
Glass - Rear Door.....	18-M	Hood Bumper.....	1704	Inverted Flared Tube Nut....	26-2
Glass - Rear Side Window.....	18-M	Hood Half.....	1704		
Glass - Windshield.....	18-M	Hood Hinge.....	1704	J	
Glove Box.....	18-D	Hood Hinge Rod.....	1704	Jack - Auto.....	2306
Glove Box Door.....	18-D	Hood Hinge Support.....	1704	Jacket - Steering Column....	1403
Glove Box Door Bumper.....	18-D	Hood Lock Catch.....	1704	Jet - Carburetor.....	0301
Glove Box Door Hinge.....	18-D	Hood Lock Handle.....	1704	Joint - Propeller Shaft	
Glove Box Door Spring.....	18-D	Hood Lock Plate.....	1704	Universal.....	0902
Governor.....	0305	Hood Locking Parts.....	1704		
Grease Gun.....	2306	Hood Name Plate.....	1704	K	
	26-1	Hood Panel.....	1704	Key - Front Door Lock	
Grille - Front Fender.....	1701	Hood Protector.....	1704	Cylinder.....	18-P
Grommet.....	26-1	Hook - Tow.....	1501	Key - Ignition.....	0604
Groove Pin.....	26-3	Horn.....	0609	Key - Ignition Coil Lock	
Guide - Brake Shoe.....	1203	Horn - Carburetor Air.....	0301	Cylinder.....	0604
Guide and Housing - Choke		Horn Bracket.....	0609	Key - Rear Door Lock	
Control.....	0303	Horn Button.....	0609	Cylinder.....	18-P
Guide and Housing - Throttle		Horn Button Cable.....	0609	Key - Tail Gate Lock	
Control.....	0303	Horn Wiring.....	0609	Cylinder.....	18-P
Gun - Grease.....	2306	Hose - Brake Flexible.....	1209	King Pin.....	1007
		Hose Clamp.....	26-1	Kit - Tool.....	2306
H		Hose - Engine.....	0505	Kit - Water Pump Repair.....	0503
Half - Hood.....	1704	Hose - Engine to Oil Gauge..	0107	Knob - Windshield Wiper....	18-AJ
Hammer.....	2306	Hose - Fuel Tank Filler		Knuckle - Front Axle	
Hand Brake Adjusting Parts..	1201	Tube.....	0304	Steering.....	1006
Hand Brake Band.....	1201	Hose - Fuel Tank To Fuel			
Hand Brake Can Lever.....	1201	Pump.....	0304	L	
Hand Brake Drum.....	1201	Hose - Radiator.....	0505	Lacing - Cowl Head.....	18-J
Hand Brake Lever.....	1201	Hose - Water Pump By-Pass...	0503	Lamp - Dome.....	0606
Hand Brake Rod.....	1201	Housing - Clutch.....	0207	Lamp - Instrument.....	0605
Hand Brake Spacer Link.....	1201	Housing - Fuel Filler Pipe..	18-Z	Lamp - Parking.....	0607
Hand Brake Support.....	1201	Housing - Instrument.....	0605	Lamp - Signal.....	0608
Handle - Auto Jack.....	2306	Housing - Rear Axle.....	1101	Lamp - Tail.....	0608
Handle - Front Door Outside..	18-N	Housing - Starting Motor		Latch - Dash Hood Lock.....	18-J
Handle - Front Door Remote		Pinion and Clutch.....	0602	Leaves - Rear Spring.....	1601
Control.....	18-N	Housing - Steering Gear.....	1403	Leaves - Front Spring.....	1601
Handle - Front Door Window		Housing - Transmission		Lens - Parking Lamp.....	0607
Regulator.....	18-N	Gearshift Lever.....	0706	Lever - Clutch Release.....	0203
Handle - Hood Lock.....	1704	Housing and Guide - Choke		Lever - Hand Brake.....	1201
Handle - Rear Door Outside..	18-N	Control.....	0303	Lever - Hand Brake Cam.....	1201
Handle - Side Window		Housing and Guide - Throttle		Lever - Throttle Control	
Regulator.....	18-N	Control.....	0303	Hand.....	0303
Handle - Tail Gate Lock.....	18-N	Hub.....	1302	Lid - Cowl Ventilator.....	18-AF
Handle - Windshield		Hub Bolt.....	1302	Lift Gate.....	18-L
Regulator.....	18-AI	Hub Pilot Rivet.....	1302	Lift Gate Check.....	18-L
Handle and Bracket - Seat		Hydraulic Brake Fluid.....	2301	Lift Gate Glass.....	18-M
Regulator.....	18-AD			Lift Gate Glass	
Hangers - Frane.....	1503	I		Weatherstrip.....	18-L
Hangers - Running Board ...	1504	Ignition Cable Tube.....	0604	Lift Gate Hinge.....	18-L
Head - Cylinder.....	0101	Ignition Coil.....	0604	Lift Gate Lock.....	18-L
Head - Generator Drive End..	0601	Ignition Coil Lock Cylinder..	0604	Lift Gate Lock Striker.....	18-L
Headless Pipe Plug.....	26-3	Ignition Coil Lock Cylinder		Light Switch.....	0606
Headlight.....	0607	Key.....	0604	Liner - Dash.....	18-V
Headlight Beam Indicator.....	0607	Ignition Coil Lock Switch		Lines, Hose and Tube	
Headlight Cable and Socket..	0607	and Cable.....	0604	Specifications.....	25-1
Headlight Door.....	0607	Ignition Coil Primary Cable..	0604	Link - Drag.....	1401
Headlight Sealed Beam Unit..	0607	Ignition Coil Secondary		Link - Hand Brake Spacer....	1201
Headlight Shell.....	0607	Cable.....	0604	Link and Lock - Front Door..	18-Q
Heater.....	2203	Ignition Key.....	0604	Lock - Lift Gate.....	18-L
Hexagon Head Cap Screw.....	26-2	Indicator - Headlight Beam..	0607	Lock - Rear Door.....	18-Q
Hexagon Head Pipe Plug	26-1	Indicator - Oil Level.....	0107	Lock and Link - Front Door..	18-Q
Hexagon Nut.....	26-1	Instrument Dial.....	0605	Lock Control - Tail Gate...	18-L
Hinge - Cowl Ventilator.....	18-AF	Instrument Face Plate.....	0605	Lockwasher.....	26-4
Hinge - Front Door.....	18-0	Instrument Lamp.....	0605	Longitudinal Seat.....	18-AD
Hinge - Glove Box Door.....	18-D	Instrument Lamp Switch.....	0605	Longitudinal Seat Clip.....	18-AD
Hinge - Hood.....	1704	Instrument Panel.....	18-W	Longitudinal Seat Hinge	
Hinge - Lift Gate.....	18-L	Instruments Housing.....	0605	Bracket.....	18-AD
Hinge - Longitudinal Seat		Insulator - Carburetor.....	0301	Longitudinal Seat Lazy Back..	18-AD
Lazy Back.....	18-AD	Insulator - Engine Front			
		Support.....	0110		