MAINTENANCE Manual



21/2 TON . 6 x 6

Built for

UNITED STATES ARMY
MODELS CCKW 352 & 353

General Motors Truck

TM 10-1269

FORM X-4202

TM 10-1269 WAR DEPARTMENT

Washington, January 19, 1942

TM 10-1269, Maintenance Manual, Truck, $2\frac{1}{2}$ -Ton, 6 x 6 GMC (Models CCKW-352—353) published by the Yellow Truck & Coach Manufacturing Company is furnished for the information and guidance of all concerned.

[AG 062.11 (4-26-41) PC (C), June 10, 1941.]

By order of the Secretary of War:

G. C. MARSHALL, Chief of Staff

Official:

J. A. ULIO,

Major General,

The Adjutant General

Maintenance Manual

GMC 21/2-TON 6 x 6 MODELS CCKW-352&353



TM 10-1269

FORM X-4202

Copyright 1942

GENERAL MOTORS TRUCK & COACH


YELLOW TRUCK & COACH MANUFACTURING COMPANY

PONTIAC, MICHIGAN

75C-6-42-DM5 (5th Printing)

Index

- DATA
- AXLE, FRONT
- AXLE, REAR
- BODY
- BRAKES
- CLUTCH
- COOLING
- ELECTRICAL
- ENGINE
- 11 FRAME
- 12 FUEL
- 13 LUBRICATION
- 15 SPRINGS
- 16 STEERING
- 17 TRANSMISSION
- 18 PROPELLER SHAF
- 19 WHEELS
- W WINCH
 - INDEX

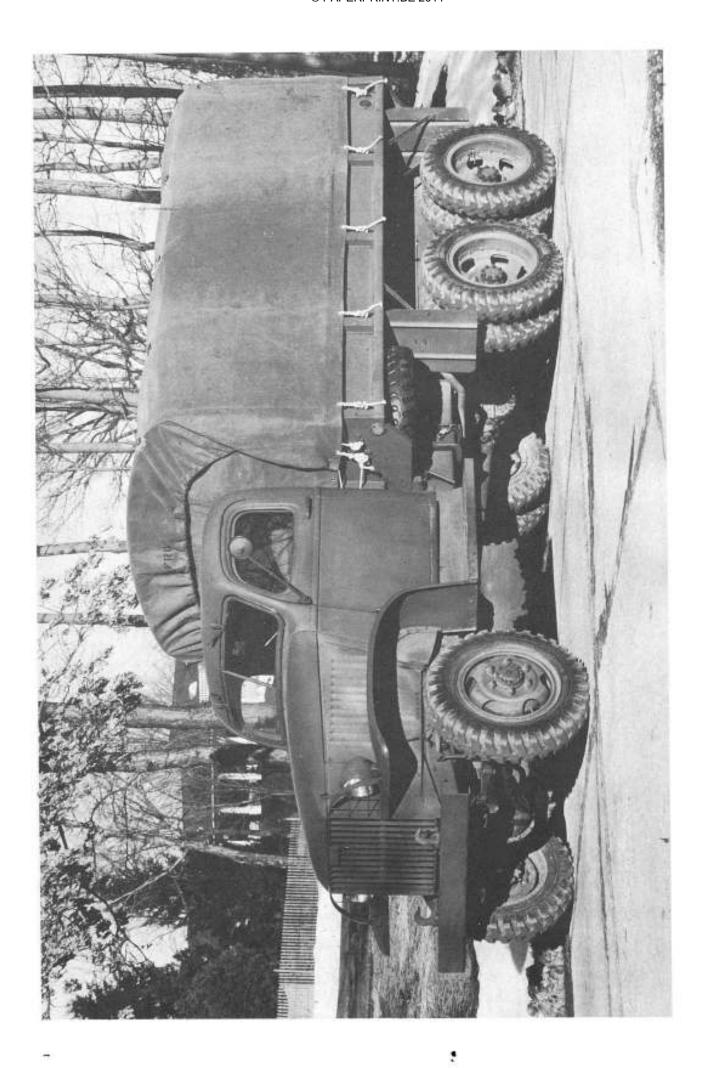

GMC TRUCK 21/2-TON 6x6 TRUCK

Introduction

This maintenance manual has been especially prepared to cover GMC trucks built for the United States Army and is published for the information and guidance of all concerned.

If the utmost in performance and reliability are to be expected, good driving practices should always be observed and each truck periodically inspected in order to make necessary adjustments and perform needed service at the right place at the right time.

All information essential to the proper maintenance and repair of these trucks is contained in this manual. All who are charged with the responsibility of performing such service or with driving the vehicles should study this book thoroughly and refer to it frequently.

MODEL IDENTIFICATION

THE MODEL OF EACH VEHICLE AFFORDS A POSITIVE MEANS
OF IDENTIFYING AXLE AND WINCH APPLICATION FOR EACH
TRUCK. THE BASIC MODEL (CCKW-352 OR 3) IS SUFFIXED
WITH A LETTER AND NUMBER, EACH OF WHICH INDICATE UNIT

APPLICATION:

"A" - CARGO BODY - NO WINCH

"B" - CARGO BODY - WITH WINCH

"C" - STOCK RACK

"D" - TANK - NO WINCH

"E" - TANK - WITH WINCH

"1" - SPLIT HOUSING TYPE AXLES

"2" - BANJO HOUSING TYPE AXLES

MODEL CCKW-352 - 145" WHEELBASE MODEL CCKW-353 - 164" WHEELBASE

A COMBINATION OF THE ABOVE SYMBOLS APPEARS WITH MODEL AND CHASSIS SERIAL NUMBER ON RIGHT HAND FRAME SIDE RAIL ABOVE FRONT SPRING.

Unit Index

FOLLOWING INDEX LISTS VARIOUS SECTION NUMBERS WHICH DESCRIBE UNITS USED ON THESE VEHICLES TOGETHER WITH TYPE OF VEHICLE TO WHICH THEY APPLY. REFERENCE SHOULD BE MADE TO "VEHICLE IDENTIFICATION" LISTING IN INTRODUCTORY PAGES OF THIS BOOK TO DETERMINE SERIAL NUMBERS OF VEHICLES EQUIPPED WITH BANJO OR SPLIT TYPE AXLE HOUSINGS.

Section Name	Type of Axle Housin	ng Used on Vehicle
In Order Shown	Banjo Type Housing	Split Type Housing
	Section Number	Section Number
DRIVER'S INSTRUCTIONS	DR.750	DR.750
FRONT AXLE	1,9001A	1.9401
REAR AXLE	2.10501	2.10601
CAB	3.3801	3.3801
BRAKES	4.11801	4.11801
CLUTCH	5.9101	5.9101
COOLING SYSTEM	6.9901	6.9901
WIRING	7W.1451	7W.1451
STARTING MOTOR AND BATTERY	7S.0551B	7S.0551B
DISTRIBUTOR, COIL, AND		
SPARK PLUGS	7D.0701	7D.0701
GENERATOR AND CONTROL	7G.0801	7G.0801
LIGHTING EQUIPMENT	7L.0751B	7L.0751B
MISCELLANEOUS ELECTRICAL	7M.0351	7M.0351
ENGINE	8.9901	8.9901
FRAME	11.6001	11.6001
FUEL SYSTEM	12.10701	12.10701
LUBRICATION	13.1351	13.1351
SPRINGS	15.6701	15.6701
STEERING GEAR	16.9201	16.9201
TRANSMISSION	17.14801	17.14801
TRANSFER CASE	17.14901	17.15001
POWER TAKE-OFF	17.15101	17.15101
PROPELLER SHAFTS	18.9601	18.9601
WHEELS, HUBS, AND BEARING	19.9801	19.9801
WINCH	W.051 .	W.051

General Data

Engine	
Type	270
	34.35
Displacement - Cu. In	269.5
Bore	3-25/32"
Stroke	4"
Cylinders	
Engine Governed Speed ()	R.P.M.)2750

Capacities


ruel rank - (Gais.)4	J
Engine Crankcase - Refill (Qts.)	0
Cooling System (Qts.)1	9
Transmission(Pts.or Lbs.)(Without Power Take-Off)1	3
Transmission(Pts.or Lbs.)(With Power Take-Off)	4
Oil Bath Air Cleaner (Qts.)	1
Winch(For Trucks So Equipped)(Pts.or Lbs.)3-3/	4
Models CCKW-352 & 3-Al and Bl	
Vehicles With Split Housing Type Axles(Refill)	
Transfer Case (Pts.or Lbs.)	
Front Axle Differential(Pts.or Lbs.)	7
Rear Axle Differential (ts.or Lbs.)	7
Models CCKW-352 & 3-A2 and B2	
Vehicles With Banjo Type Axles (Refill)	
Transfer Case (Pts. or Lbs.)	4
Front Axle Differential (Pts. or Lbs.)13-1/	2
Rear Axle Differential (Pts. or Lbs.)1	7

<u>IORQUE FOR</u> TIGHTENING BOLTS AND NUTS

REFER TO LAST PAGES OF BOOK FOR TORQUE IN FOOT POUNDS AT WHICH VARIOUS CHASSIS AND ENGINE BOLTS AND NUTS SHOULD BE TIGHTENED.

© PAPERPRINT.BE 2011

Serial Number and Model Number Locations

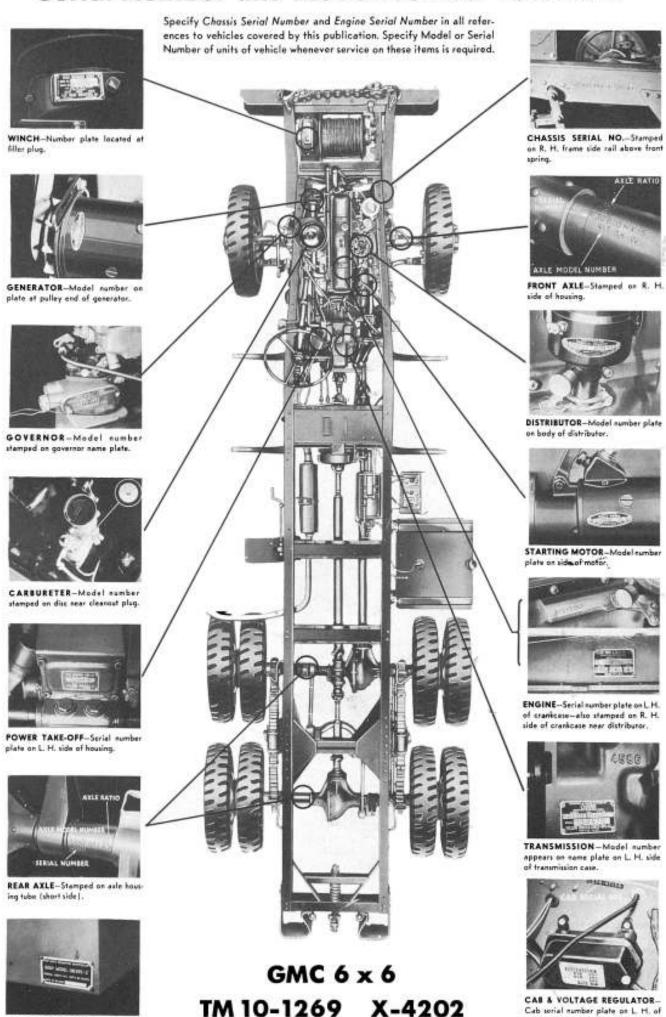

Cab sorial number plate on L. H. of cowl under hood. Regulator model

number plate appears on cover of

regulator.

CARGO BODY - Model number plate an lawer L. H. front corner of body.

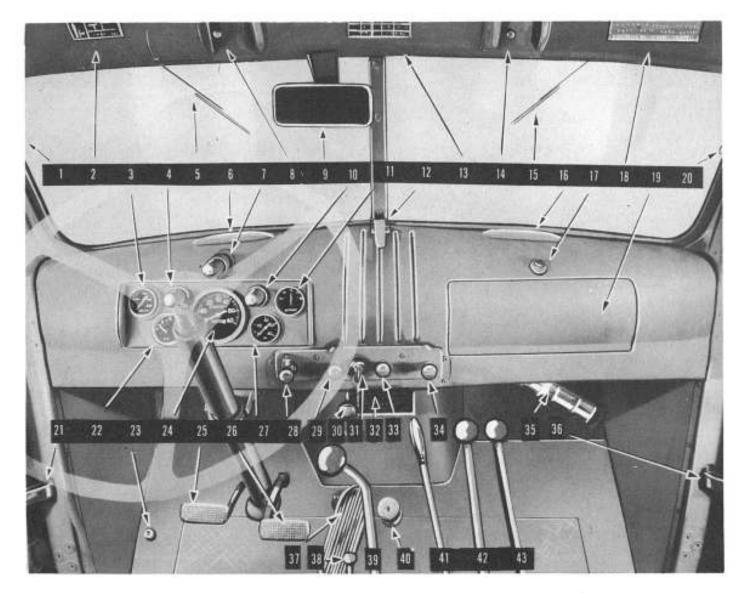


Fig. 1 Interior of Driver's Cab - Showing Controls and Instruments.

- L.H. Windshield Quadrant Thumb Screw
- 2. Shifting Instruction Plate
- 3. Temperature Gauge
- Temperature and Fuel Gauge Light
- 5. Windshield Wiper Blade L.H.
- 6. Defroster Opening L.H.
- 7. Instrument Light
- 8. L.H. Windshield Wiper Control Button
- 9. Rear View Mirror
- 10. Ammeter and 0il Gauge Light
- 11. Ammeter
- 12. Windshield Lock
- 13. Road Speed Caution Plate
- 14. R.H. Windshield Wiper Control Button

- Windshield Wiper Blade R.H.
- 16. Defroster Opening R.H.
- 17. Package Compartment Boor Lock
- Winch Operating Plate -(on trucks with winch)
- 19. Package Compartment
- 20. R.H. Windshield Quadrant Adjusting Screw
- 21. Door Check Strap
- 22. Fuel Gauge
- 23. Dimmer Switch
- 24. Speedometer
- 25. Clutch Pedal
- 26. Brake Pedal
- 27. Oil Gauge
- 28. Light Switch
- 29. Throttle Button

- 30. Ventilator Control Handle
- 31. Ignition Key and Switch
- 32. Serial Number Plate
- 33. Choke Button
- Instrument Panel Light Switch
- 35. Fire Extinguisher
- 36. Door Check Strap
- 37. Accelerator Pedal
- 38. Power Take-Off Lever -(on trucks with winch)
- 39. Transmission Shift Lever
- 40. Starter Button
- 41. Hand Brake Lever
- 42. Transfer Case High and Low Shift Lever
- 43. Transfer Case Front Axle Declutching Lever

PUBLICATIONS APPLYING TO THIS VEHICLE
PARTS LIST TM-10-1268
MAINTENANCE MANUAL TM-10-1269

"Publication Plate" - gives TM number of Maintenance Manual and Parts Book application to each vehicle.