

TM-10-1206
CHANGE NO. 4
DEC. 1, 1941

PARTS LIST

FOR

WILLYS TRUCK

MODEL MB
1/4 TON 4 X 4

Built For
U. S. GOVERNMENT



U.S.A. Reg. Number
W2031575 to W2047574
W2047614 to W2050213

Contract Number
W-398-QM-10757



WILLYS-OVERLAND MOTORS, INC.

TOLEDO, OHIO

U. S. A.

COPYRIGHT 1941

TM-10-1206
CHANGE NO. 4
DEC. 1, 1941

TM-10-1206

WAR DEPARTMENT

Washington, August 29, 1941

TM-10-1206, Parts List, Truck 1/4-Ton 4 x 4, Willys (Model MB) published by the Willys-Overland Motors, Inc., is furnished for the information and guidance of all concerned.

(AG 062.11) (4/26/41) PC (C), June 10, 1941.)

By order of the Secretary of War:

G. C. MARSHALL,
Chief of Staff.

Official:

E. S. ADAMS,
Major General,
The Adjutant General.

TM-10-1206CHANGE NO. 4
DEC. 1, 1941**INDEX** GOV'T PAGE
GROUP**PARTS LIST****FOR
WILLYS
TRUCKS****MODEL MB
¼ TON 4 x 4****Built For
U. S. GOVERNMENT**

★ ★ ★

U. S. A. Reg. Number
W2031575 to W2047574
W2047614 to W2050213Contract Number
W-398-QM-10757*Effective Oct. 15th, 1941***WILLYS-OVERLAND
MOTORS, INC.**

TOLEDO, OHIO, U. S. A.

Copyright 1941

TM-10-1206CHANGE NO. 4
DEC. 1, 1941

Engine	01	11	▶
Clutch	02	20	▶
Fuel	03	21	▶
Exhaust	04	29	▶
Cooling	05	30	▶
Electrical	06	31	▶
Transmission	07	45	▶
Transfer Case	08	47	▶
Propeller Shaft	09	51	▶
Front Axle	10	51	▶
Rear Axle	11	55	▶
Brakes	12	57	▶
Wheels	13	63	▶
Steering	14	65	▶
Frame	15	67	▶
Springs	16	69	▶
Hood - Fenders	17	70	▶
Body	18	71	▶
Bumper Guards	21	80	▶
Miscellaneous	22	80	▶
Standard Parts	23	81	▶
Bearing Chart		86	▶

Suggestions for Ordering and Use of Parts List

If the following instructions are adhered to in ordering parts, it will greatly facilitate the handling of orders and aid in rendering prompt and efficient service.

Much time will be saved by referring to index BEFORE ordering.

Observe notations made throughout the book for convenience in ordering.

All screws have hexagon heads unless otherwise specified.

When ordering parts for an individual truck, give model number, truck registration number, chassis serial number and engine serial number.

Parts must be ordered by part number and description in full as specified herein. State specifically whether left or right, front or rear, etc.

When ordering transmission gears, oil pump gears, timing sprockets, speedometer and differential gears, specify number of teeth. When differential drive gear sets are ordered, specify number of teeth in both ring gear and pinion.

Never order sets except when listed in this manner.

State definite shipping instructions—Express, Freight, Parcel Post or Air Mail.

All Parcel Post insurance charges are included in our invoice. We insure without instructions and at buyer's expense any shipment by Parcel Post valued at \$25.00 or over. Parcel Post shipments of less value, and on which insurance is not requested, are at purchaser's risk.

All claims for shortages or errors in packing must be made within ten (10) days from receipt of shipment, and must be accompanied by the original packing slip with proper notation of damage or shortage signed by the transportation company at destination.

SERIAL NUMBERS

CHASSIS. The vehicle serial number prefixed by the letters "MB" may be found located on the top flange of the frame side rail just back of the front bumper.

NAME. The nomenclature plate is located on the instrument panel.

NOMENCLATURE TRUCK ¼ TON 4 X 4	
SUPPLY ARM OR SERVICE	
MAINTAINING VEHICLE QUARTERMASTER CORPS	
MAKE AND MODEL	WILLYS MB.
SERIAL NUMBER:	_____
GROSS WEIGHT	_____ LBS.
MAXIMUM PAYLOAD	_____ 800 LBS.
MAXIMUM TRAILOLOAD	_____ 1000 LBS.
DATE OF DELIVERY.	_____
RECOMMENDED BY MANUFACTURER	
OCTANE RATING OF GASOLINE	68 MIN.
SAE GRADE OF OIL FOR SUMMER USE	30 SAE
SAE GRADE OF OIL FOR WINTER USE	10W SAE
PUBLICATIONS APPLYING TO THIS VEHICLE	
PARTS LIST T/M 10-	_____
MAINTENANCE MANUAL T/M 10-	_____

ENGINE. The motor serial number prefixed by the letters "MB" may be found on front upper corner of right side of cylinder block.

GOVERNMENT REGISTRATION. The Government serial number is stenciled on the body.

ALPHABETICAL INDEX

Name	Page No.	Name	Page No.
A		E	
Accelerator.....	25-29	Engine.....	11
Accelerator Treadle.....	29	Engine Crank (Starting).....	85
Air Cleaner.....	25	Engine Ground Strap.....	43
Ammeter.....	38	Engine Mounting Bracket, Rear.....	47
Axle, Front.....	51-54-55	Engine Plate, Front.....	20
Axle, Rear.....	55-57	Engine Plate, Rear.....	20
Axle Shaft (Front Axle).....	54	Engine Support Bracket, Front.....	69
Axle Shaft (Rear Axle).....	55	Engine Support Insulators.....	21
B		Exhaust Manifold.....	17
Battery.....	85	Exhaust Pipe.....	29
Battery Cables.....	43	F	
Battery Hold Down Frame.....	43	Fan.....	30
Battery Support.....	69	Fan Belt.....	30
Bearings (Chart).....	86	Fenders, Front.....	70-71
Bell Housing (Transmission).....	46	Fire Extinguisher.....	85
Belt (Fan and Generator).....	30	Flywheel.....	17
Bendix Drive.....	37	Flywheel Ring Gear.....	17
Blackout Lamp.....	42	Foot Rest (Rear).....	76
Blackout Head Lamp.....	42	Frame.....	67-69
Blackout Switch.....	39	Front Axle.....	51-54-55
Body.....	71-75-76-77	Front Axle Tie Rod.....	65
Body Handles.....	79	Front Brake.....	57
Body, Seats.....	78-79	Front Bumper.....	80
Bond Straps.....	45	Front Fenders.....	70-71
Brake Cylinder (Front Wheel).....	63	Front Springs.....	69-70
Brake Cylinder (Rear Wheel).....	63	Fuel Filter.....	21
Brake Cylinder (Hydraulic-Master).....	61-63	Fuel Gauge (Dash Unit).....	38
Brake, Dustshield.....	63	Fuel Pump.....	25
Brake, Front.....	57	Fuel Strainer.....	21
Brake, Hand.....	57-61	G	
Brake Hose.....	63	Gasoline Gauge (Tank Unit).....	21
Brake Lining.....	61	Gasoline Strainer.....	21
Brake Pedal.....	61	Gasoline Tank.....	21
Brake, Rear.....	57	Gasoline Tubes.....	29
Brake Shoes.....	61	Gauge, Fuel (Dash Unit).....	38
Brake, Transmission.....	50	Gauge, Oil (Dash Unit).....	38
Brake Tubes.....	63	Gear Shift (Transmission).....	46
Bumper (Front).....	80	Gear Shift (Transfer Case).....	50
Bumperette (Rear).....	80	Generator.....	31-35
C		Generator Wiring Harness.....	39
Cable (Hand Brake).....	57	Ground Strap (Engine).....	43
Camshaft.....	15	Guard, Radiator.....	80
Carburetor.....	21-24-25	H	
Chain Cover.....	11	Handles, Body.....	79
Choke Control.....	29	Hand Brake.....	57-61
Circuit Breaker (Voltage Regulator).....	31	Heat Control Valve.....	17
Clutch.....	20	Heat Indicator (Dash Unit).....	38
Clutch Control.....	20	Head Lamp.....	42
Clutch Housing (See Bell Housing).....	46	Head Light Foot Switch.....	38
Clutch Pedal.....	21	Hood.....	71
Clutch Release.....	20	Horn.....	43
Coil.....	38	Horn Button.....	43-67
Companion Flange (Transfer Case).....	50	Hose, Radiator.....	31
Connecting Rods.....	13	I	
Connecting Rods (Steering).....	65	Identification Plates.....	80
Control Choke.....	29	Ignition Switch.....	38
Control, Throttle.....	29	Instrument Lamp.....	42
Control (Transmission).....	46	Instrument Light Switch.....	39
Countershaft (Transmission).....	46	Instrument Panel (Body).....	75
Countershaft Gear (Transmission).....	45		
Crankshaft.....	13		
Cylinder Block.....	11		
Cylinder Head.....	11		
D			
Differential (Front Axle).....	51-54		
Differential (Rear Axle).....	57		
Distributor.....	37-38		

Name	Page No.	Name	Page No.
Insulator (Engine Support).....	20	Seals.....	78
Intake Manifold.....	17	Seats (Body).....	78-79
Intermediate Shaft (Transfer Case).....	47	Second Speed Gear (Transmission).....	45
		Shift Lever (Transfer Case).....	50
J		Shift Mechanism (Transfer Case).....	50
Junction Block.....	42	Shifting Mechanism (Transmission).....	46
		Shock Absorbers.....	70
K		Shock Absorber Brackets.....	51-55-69
King Pin.....	55	Side Curtains.....	80
		Spare Wheel Lock.....	76
L		Spark Plugs.....	38
Lamp, (Blackout).....	42	Speedometer.....	81
Lamp, (Head Blackout).....	42	Speedometer Gears.....	50
Lamp, (Tail and Stop).....	42-43	Springs, Front.....	69-70
		Springs, Rear.....	69-70
M		Spring Brackets.....	67
Main Drive Gear (Transmission).....	45	Standard Screws, Nuts, etc.....	81 to 85 Incl.
Main Shaft (Transmission).....	46	Starter Switch.....	35
Mainshaft Gear (Transfer Case).....	45	Starting Crank (Engine).....	85
Manifolds.....	17	Starting Motor.....	35-37
Master Cylinder (Hydraulic Brakes).....	61-63	Steering Arm (Front Axle).....	55
Mirror (Rear View).....	80	Steering Connecting Rod.....	65
Muffler.....	29	Steering Gear.....	65-67
		Steering Gear Arm.....	67
O		Steering Knuckle.....	54
Oil Filler Tube.....	15	Steering Knuckle Tie Rod.....	65
Oil Filter.....	17	Steering Wheel.....	67
Oil Float.....	17	Stop Light Switch.....	38
Oil Gauge.....	38	Switch, Blackout.....	39
Oil Level Indicator.....	15	Switch, Head Light Foot.....	38
Oil Pan.....	15	Switch, Ignition.....	38
Oil Pump.....	15	Switch, Instrument Light.....	39
Output Shaft (Transfer Case).....	47-50	Switch, Stop Light.....	38
		Synchronizer, (Transmission).....	45
P			
Pedal (Brake).....	61	T	
Pedal (Clutch).....	21	Tail and Stop Lamp.....	42-43
Pedal Shaft.....	61	Thermostat (Cylinder Head).....	11
Pintle Hook.....	67	Throttle Control.....	29
Pipe, Exhaust.....	29	Tie Rod (Front Axle).....	65
Pistons.....	13	Timing Chain.....	15
Piston Pins.....	13	Tools.....	85
Piston Rings.....	13	Tool Compartment.....	79
Propeller Shaft—Front.....	51	Top.....	80
Propeller Shaft—Rear.....	51	Transfer Case.....	47-50
		Transfer Case Support.....	47
R		Transmission.....	45-46-47
Radiator.....	30	Transmission Brake.....	50
Radiator Guard.....	80		
Radiator Filler Cap.....	30	U	
Radiator Hose.....	31	Universal Joint (Front Axle).....	54
Radiator Support Bracket.....	69	Universal Joint (Propeller Shaft).....	51
Radio Suppression.....	43-45		
Rear Axle.....	55-57	V	
Rear Brake.....	57	Valves.....	15
Rear Springs.....	70	Valve Cover.....	15
Rear View Mirror.....	80	Valve Spring.....	15
Reflex Unit.....	43	Valve Tappet.....	15
Reverse Idler Gear (Transmission).....	45	Ventilator (Crank Case).....	15
Reverse Idler Shaft (Transmission).....	46	Voltage Regulator (Circuit Breaker).....	31
Rim and Disc (Wheels).....	63		
		W	
		Water Pump.....	30
		Wheels.....	63-65
		Wheel Hubs.....	65
		Windshield.....	77-78
		Windshield Catch (See Group 1704).....	78
		Wiring Harness.....	39-42

GOVERNMENT INDEX

Covering Grouping as Recommended by the
Office of the
QUARTERMASTER GENERAL

ENGINE	GROUP 01	Page No.	TRANSMISSION	GROUP 07	Page No.
0100	Engine Assembly.....	11	0700	Transmission Assembly.....	45
0101	Cylinder Block and Head, and Chain Cover... 11		0701	Case.....	45
0102	Crankshaft, Bearings and Caps..... 11-13		0702	Gears.....	45
0103	Pistons, Rings and Piston Pins..... 13		0703	Main Drive Pinion and Bearings.....	46
0104	Connecting Rods and Bearings..... 13		0704	Main Shaft, Countershaft and Reverse Idler Gearshaft and Countershaft.....	46
0105	Valves, Springs, Guides, Tappets, Etc..... 15		0705	Speedometer Gears (See Group No. 807).....	
0106	Camshaft, Timing Bearings, Etc..... 15		0706	Shift Fork, Levers.....	46
0107	Oil Pump, Oil Pan, Gauge, Oil Filter and Oil Tank.....	15-17	0709	Bell Housing and Connecting Parts.....	46-47
0108	Manifolds.....	17	0710	Inspection Cover.....	47
0109	Flywheel, Ring Gear, Etc.....	17			
0110	Mountings.....	20			
			TRANSFER CASE	GROUP 08	
CLUTCH	GROUP 02		0800	Assembly.....	47
0201	Clutch Disc.....	20	0801	Case.....	47
0202	Cover, Pressure Plate and Springs.....	20	0802	Drive Gear.....	47
0203	Release Lever, Bearings, Forks, Etc.....	20	0804	Intermediate Gear, Shaft and Bearings.....	47
0204	Pedal.....	21	0805	Output and Clutch Shafts, Gears, Bearings and Couplings.....	47-50
0207	See Group 0709 for Clutch Housing.....		0806	Shift Shafts, Forks and Levers.....	50
			0807	Speedometer Gears.....	50
FUEL SYSTEM	GROUP 03		0808	Name Plate.....	50
0300	Gasoline Tank.....	21	0809	Transmission Brake Parts.....	50
0301	Carburetor, Air Cleaner.....	21-24-25			
0302	Fuel Pump, Fuel Pump Tube, Hose, Etc.....	25	PROPELLER SHAFT and UNIVERSAL JOINT	GROUP 09	
0303	Accelerator, Throttle and Choke.....	25-29	0901	Propeller Shaft Assembly, Front and Rear ...	51
0304	Fuel Tank Lines to Gauge.....	29	0902	Universal Joints.....	51
			0903	Propeller Shaft "U" Bolt.....	51
EXHAUST	GROUP 04				
0401	Muffler.....	29	FRONT AXLE	GROUP 10	
0402	Exhaust Pipe.....	29	1000	Front Axle Assembly.....	51
0403	Connecting Parts.....	30	1001	Housing.....	51
			1002	Differential and Bearings.....	51-54
COOLING SYSTEM	GROUP 05		1003	Pinion Bearings, Shims, Etc.....	54
0501	Radiator Shell and Core, Filler Cap.....	30	1005	Axle Shaft and Universal Joint.....	54
0503	Water Pump, Fan and Belt.....	30	1006	Steering Knuckle, Flange and Steering Arm (Front Wheel Drive Only).....	54-55
0504	Radiator Mountings.....	30	1007	King Pins, Spindle, Etc.....	55
0505	Engine Water Fittings and Hose.....	31			
ELECTRICAL	GROUP 06		REAR AXLE	GROUP 11	
0601	Generator and Regulator.....	31-35	1100	Rear Axle Assembly.....	55
0602	Starting Motor.....	35-37	1101	Housing Assembly.....	55
0603	Distributor and Condenser.....	37-38	1102	Axle Drive Shafts.....	55
0604	Ignition Coil and Wiring and Spark Plugs, and Ignition Switch.....	38	1103	Differential and Carrier Assembly and Bearings	57
0605	Instruments.....	38	1104	Pinion Bearings and Mounting Parts.....	57
0606	Light Switches and Cables.....	38-39-42			
0607	Headlamps, Sealed Beams.....	42	BRAKES	GROUP 12	
0608	Tail and Auxiliary Lamp.....	43	1200	Brake Assembly.....	57
0609	Horn.....	43	1201	Hand Brake.....	57-61
0610	Starting Cables and Connections for Battery See Group 2309.....	43	1202	Shoes and Lining.....	61
0611	Radio Supression.....	43-45			

BRAKES (Cont.)		Page No.	HOODS, FENDERS, and MISCELLANEOUS SHEET		Page No.
1203	Brake Shoe Support, Guide Springs, Adjusting Pins, Anchor Plate.....	61	METAL GROUP		
1204	Pedal and Pedal Shaft.....	61	GROUP 17		
1205	Master Cylinder.....	61-63	1701	Fenders.....	70-71
1207	Wheel Cylinders.....	63	1702	Splash Shield.....	71
1208	Brake Dust Shield or Backing Plate.....	63	1704	Hoods.....	71
1209	Brake Lines, Pipes and Hoses.....	63	BODY		
WHEELS, HUBS and DRUMS (Front and Rear)			GROUP 18		
GROUP 13			1800	Body and Attaching Parts.....	71-75-76-77
1301	Wheel Assembly, Bearings, Retainers, Etc....	63	1801	Windshield, Windshield Wiper and Parts....	75-78
1302	Hubs and Drums, Wheel Studs and Nuts....	65	1802	Floor Mats and Seals.....	78
STEERING			1804	Seats.....	78-79
GROUP 14			1805	Handles, Locks, Etc., Door Fittings.....	79
1401	Steering Connecting Rod or Drag Link.....	65	1806	Tool Box.....	79
1402	Steering Tie Rod.....	65	1810	Top.....	80
1403	Steering Gear Assembly.....	65, 67	BUMPERS and GUARDS		
1404	Steering Wheel Assembly.....	67	GROUP 21		
1405	Brackets and Attaching Parts.....	67	2101	Bumpers.....	80
FRAME and BRACKETS			2103	Radiator Guard.....	80
GROUP 15			MISCELLANEOUS BODY and CHASSIS, and ACCESSORIES		
1502	Pintle Hooks.....	67	GROUP 22		
1503	Spring Brackets.....	67	2201	Rear View Mirrors.....	80
1505	Spare Wheel Carrier—See Body Group No. 1800.....		2202	Identification and Caution Plates.....	80
1506	Frame and Brackets.....	67-69	2203	Speedometers and Parts.....	81
SPRINGS and SHOCK ABSORBERS			GENERAL USE, STANDARDIZED PARTS		
GROUP 16			GROUP 23		
1601	Front and Rear Springs.....	69-70	2304	Miscellaneous Nuts, Bolts, Screws and Washers.....	81-82-83-84
1602	Shackles and Spring Attaching Parts.....	70	2305	Miscellaneous Cotter Keys and Woodruff Keys.....	84-85
1603	Shock Absorbers.....	70	2306	Tools, Starting Crank and Equipment.....	85
			2308	Bulbs.....	85
			2309	Battery.....	85
			2311	Bearing Chart.....	86

INDEX OF ILLUSTRATIONS

	Page No.		Page No.
Fig. 1	Front Sectional View of Engine.....	Fig. 21	Head Lamp.....
Fig. 2	Cylinder Head, Manifold and Valve Cover.....	Fig. 22	Tail Lamp.....
Fig. 3	Timing Chain Cover, Cylinder Block and Bell Housing.....	Fig. 23	Transmission.....
Fig. 4	Side Sectional View of Engine.....	Fig. 24	Transfer Case.....
Fig. 5	Crankshaft and Connecting Rod.....	Fig. 25	Propeller Shaft—Rear.....
Fig. 6	Valve Mechanism.....	Fig. 26	Front Axle Assembly.....
Fig. 7	Oil Pump.....	Fig. 27	Front Axle, Steering Knuckle and Wheel Bearing.....
Fig. 8	Clutch.....	Fig. 28	Rear Axle Assembly.....
Fig. 9	Clutch Control.....	Fig. 29	Brake System.....
Fig. 10	Fuel Filter.....	Fig. 30	Brake.....
Fig. 11	Carburetor.....	Fig. 31	Brake Master Cylinder.....
Fig. 12	Fuel Pump.....	Fig. 32	Front Wheel Brake Cylinder.....
Fig. 13	Accelerator, Throttle and Choke Control.....	Fig. 33	Steering Connecting Rod.....
Fig. 14	Exhaust System.....	Fig. 34	Steering Gear.....
Fig. 15	Water Pump.....	Fig. 35	Frame.....
Fig. 16	Generator.....	Fig. 36	Spring Shackle.....
Fig. 17	Starting Motor.....	Fig. 37	Front Spring Bolt—Rear.....
Fig. 18	Distributor.....	Fig. 38	Truck Complete, Left Side.....
Fig. 19	Wiring Diagram.....	Fig. 39	Truck Complete, Right Side.....
Fig. 20	Blackout Lamp.....	Fig. 40	Body (Front Compartment).....

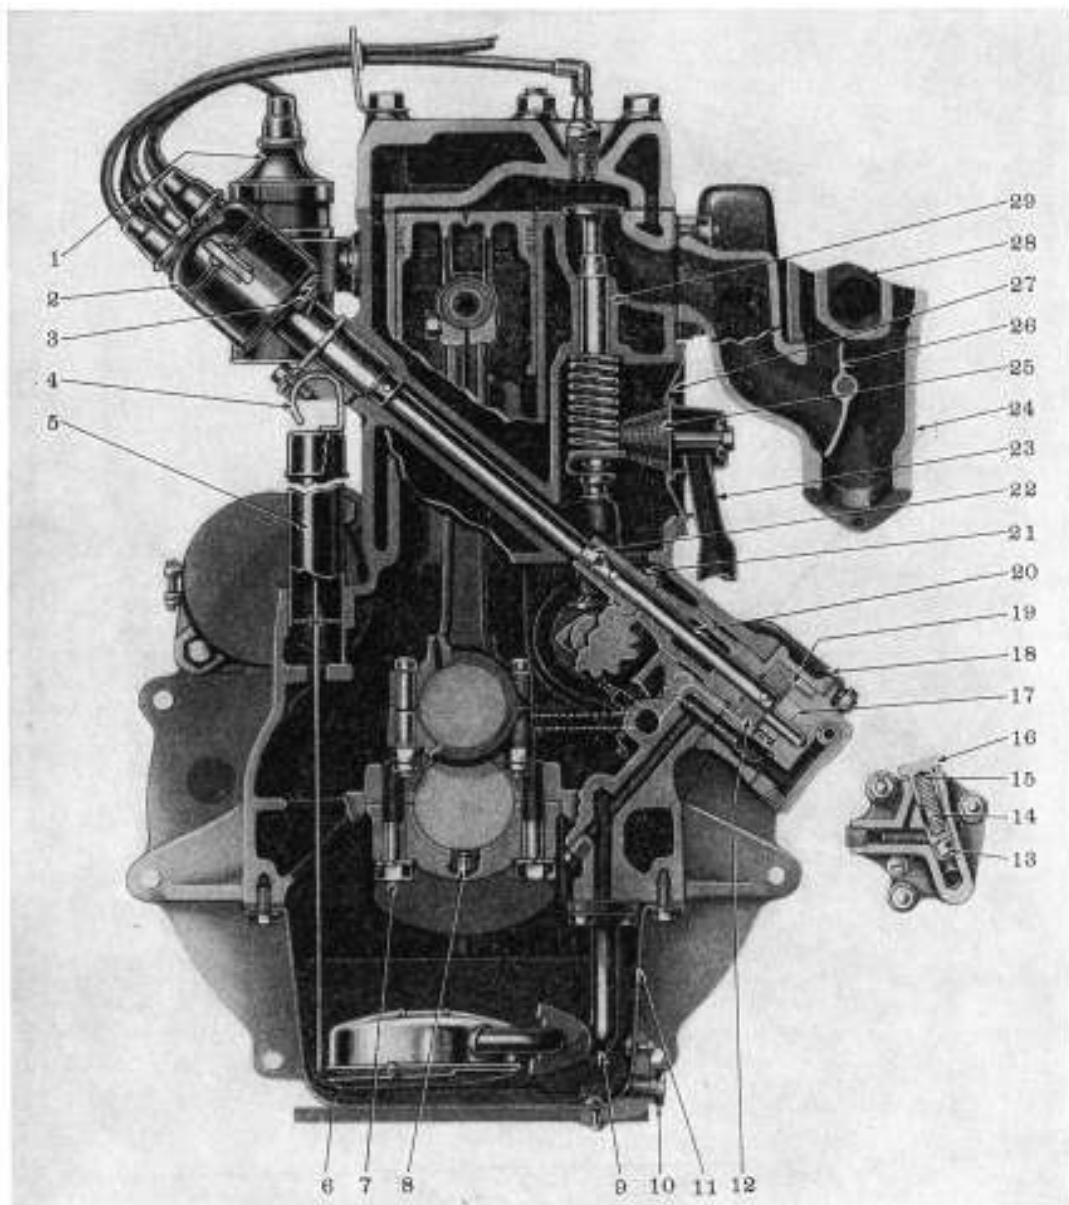


FIG. 1—FRONT SECTIONAL VIEW OF ENGINE

Item No.	Gov't Group	Part No.	Name	Item No.	Gov't Group	Part No.	Name
1	0604	A-1507	Ignition Coil	16	0107	630390	Oil Relief Plunger Spring Retainer
2	0605	A-1244	Ignition Distributor	17	0107	343306	Oil Pump Pinion
3	0605	107128	Distributor Oiler	18	0107	637636	Oil Pump Assembly
4	0107	639456	Oil Filter Cap and Level Indicator	19	0107	636630	Oil Pump Rotor Disc
5	0107	638556	Oil Filler Tube	21	0107	630394	Oil Pump Body to Cylinder Block Gasket
6	0107	630396	Oil Float Assembly	22	0603	637615	Distributor Shaft Friction Spring
7	0102	381519	Crankshaft Bearing Cap to Crankcase Screw	23	0105	A-1061	Crankcase Ventilator Assembly
8	0102	635377	Crankshaft Bearing Dowel	24	0108	A-012	Exhaust Manifold Assembly
9	0107	630397	Oil Float Support	25	0103	630398	Crankcase Ventilator Baffle
10	0107	639979	Oil Pan Drain Plug	26	0105	636439	Heat Control Valve
11	0107	A-1167	Oil Pan Assembly	27	0105	656554	Valve Spring Cover Assembly
12	0107	636399	Oil Pump Shaft Assembly	28	0108	A-1166	Intake Manifold Assembly
13	0107	630518	Oil Relief Plunger	29	0105	375811	Exhaust Valve Guide
14	0107	386155	Oil Relief Plunger Spring	30	0301	A-1290	Air Cleaner Tube and Bracket Assembly
15	0107	630389	Oil Relief Plunger Spring Shims				

