

**TM-10-1512**  
CHANGE NO. 3  
AUGUST 1, 1943

# **PARTS LIST**

**FOR**

# **WILLYS TRUCK**

**MODEL MB**  
**¼ TON 4 x 4**

**Built For**

**U. S. GOVERNMENT**

★ ★ ★

**U. S. A. Reg. Numbers**  
20298626 to 20364862 Inc.  
20443317 to 20458966 Inc.  
20467064 to 20512063 Inc.  
20561624 to 20570435 Inc.  
20604517 to 20660140 Inc.

**Contract Number**  
W-303-ORD-2529  
W-303-ORD-5792

★ ★ ★

**WILLYS-OVERLAND MOTORS, INC.**

**TOLEDO, OHIO**

**U. S. A.**

**COPYRIGHT 1943**

**TM-10-1512**  
CHANGE NO. 3  
AUGUST 1, 1943

# **TM-10-1512**

## **WAR DEPARTMENT**

**Washington, March 3, 1942**

**TM-10-1512, Parts and Price List, Truck 1/4-Ton, 4 x4 Willys (Model MB) published by the Willys-Overland Motors, Inc., is furnished for the information and guidance of all concerned.**

**(AG 062.11 (4/26/41) PC (C), June 10, 1941)**

**By order of the Secretary of War:**

**G. C. MARSHALL,**  
*Chief of Staff.*

**Official:**  
**E. S. ADAMS,**  
*Major General,*  
*The Adjutant General.*

**TM-10-1512****CHANGE NO. 3****AUGUST 1, 1943****INDEX** GOV'T  
GROUP PAGE

# PARTS LIST

**FOR**

## WILLYS TRUCKS

**MODEL MB****1/4 TON 4 x 4****Built For****U. S. GOVERNMENT**

Parts are designated in this book under both  
Willys-Overland and Ford Part Numbers,  
since these are interchangeable.

**U.S.A. Registration Numbers****WILLYS****Model MB**

Contract W-303-ORD-2529

Contract W-303-ORD-5792

20298626 to 20364862 Inc.

20443317 to 20458966 Inc.

20467064 to 20512063 Inc.

20561624 to 20570435 Inc.

20604517 to 20660140 Inc.

**FORD****Model GPW**

Contract W-374-ORD-2862

20364863 to 20443316 Inc.

TM-10-1348

This parts list covers all previous con-  
tracts on the Model "MB" 1/4-Ton 4x4  
Truck and supersedes TM-10-1512  
Dated April 1, 1943.

## WILLYS-OVERLAND MOTORS, INC.

**TOLEDO, OHIO, U. S. A.****TM-10-1512****CHANGE NO. 3****AUGUST 1, 1943**

Copyright 1943

Printed in U.S.A.

Engine	01	13
Clutch	02	23
Fuel	03	25
Exhaust	04	33
Cooling	05	33
Electrical	06	34
Transmission	07	51
Transfer Case	08	53
Propeller Shaft	09	58
Front Axle	10	58
Rear Axle	11	63
Brakes	12	66
Wheels	13	72
Steering	14	72
Frame	15	75
Springs	16	76
Hood - Fenders	17	79
Body	18	81
Bumper and Guards	21	87
Miscellaneous	22	87
Standard Parts	23	88
Tools	23	92
Bearing Chart		95
Discount Sheet, Numerical and Price List		96 97

## Suggestions for Ordering and Use of Parts List

If the following instructions are adhered to in ordering parts, it will greatly facilitate the handling of orders and aid in rendering prompt and efficient service.

Much time will be saved by referring to index BEFORE ordering.

Observe notations made throughout the book for convenience in ordering.

All screws have hexagon heads unless otherwise specified.

When ordering parts for an individual truck, give model number, truck registration number chassis serial number and engine serial number.

Parts must be ordered by part number and description in full as specified herein. State specifically whether left or right, front or rear, etc.

When ordering transmission gears, oil pump gears, timing sprockets, speedometer and differential gears, specify number of teeth. When differential drive gear sets are ordered, specify number of teeth in both ring gear and pinion.

Never order sets except when listed in this manner.

State definite shipping instructions—Express, Freight, Parcel Post or Air Mail.

All Parcel Post insurance charges are included in our invoice. We insure without instructions and at buyer's expense any shipment by Parcel Post valued at \$25.00 or over. Parcel Post shipments of less value, and on which insurance is not required, are at purchaser's risk.

All claims for shortages or errors in packing must be made within ten (10) days from receipt of shipment, and must be accompanied by the original packing slip with proper notation of damage or shortage signed by the transportation company at destination.

### SERIAL NUMBERS


**CHASSIS.** The vehicle serial number prefixed by the letters "MB" may be found located inside of the frame channel at left front end.

**NAME.** The nomenclature plate is located on the instrument panel.

<b>WILLYS</b>	
<b>NOMENCLATURE TRUCK ¼ TON 4 X 4</b>	
SUPPLY ARM OR SERVICE _____	
MAINTAINING VEHICLE	— ORDNANCE DEPT.
MAKE AND MODEL	WILLYS MB. _____
SERIAL NUMBER:	_____
GROSS WEIGHT	_____ LBS.
MAXIMUM PAYLOAD	_____ 800 LBS.
MAXIMUM TRAILOLDLOAD	_____ 1000 LBS.
DATE OF DELIVERY -	_____
RECOMMENDED BY MANUFACTURER	
OCTANE RATING OF GASOLINE	68 MIN.
S. A. E. GRADE OF OIL FOR SUMMER USE	30 S. A. E.
S. A. E. GRADE OF OIL FOR WINTER USE	10W-S. A. E.
PUBLICATIONS APPLYING TO THIS VEHICLE	
PARTS LIST T/M 10 -	_____
MAINTENANCE MANUAL T/M 10 -	_____


**ENGINE.** The motor serial number prefixed by the letters "MB" may be found on front upper corner of right side of cylinder block.

**GOVERNMENT REGISTRATION.** The Government serial number is stenciled on the body.

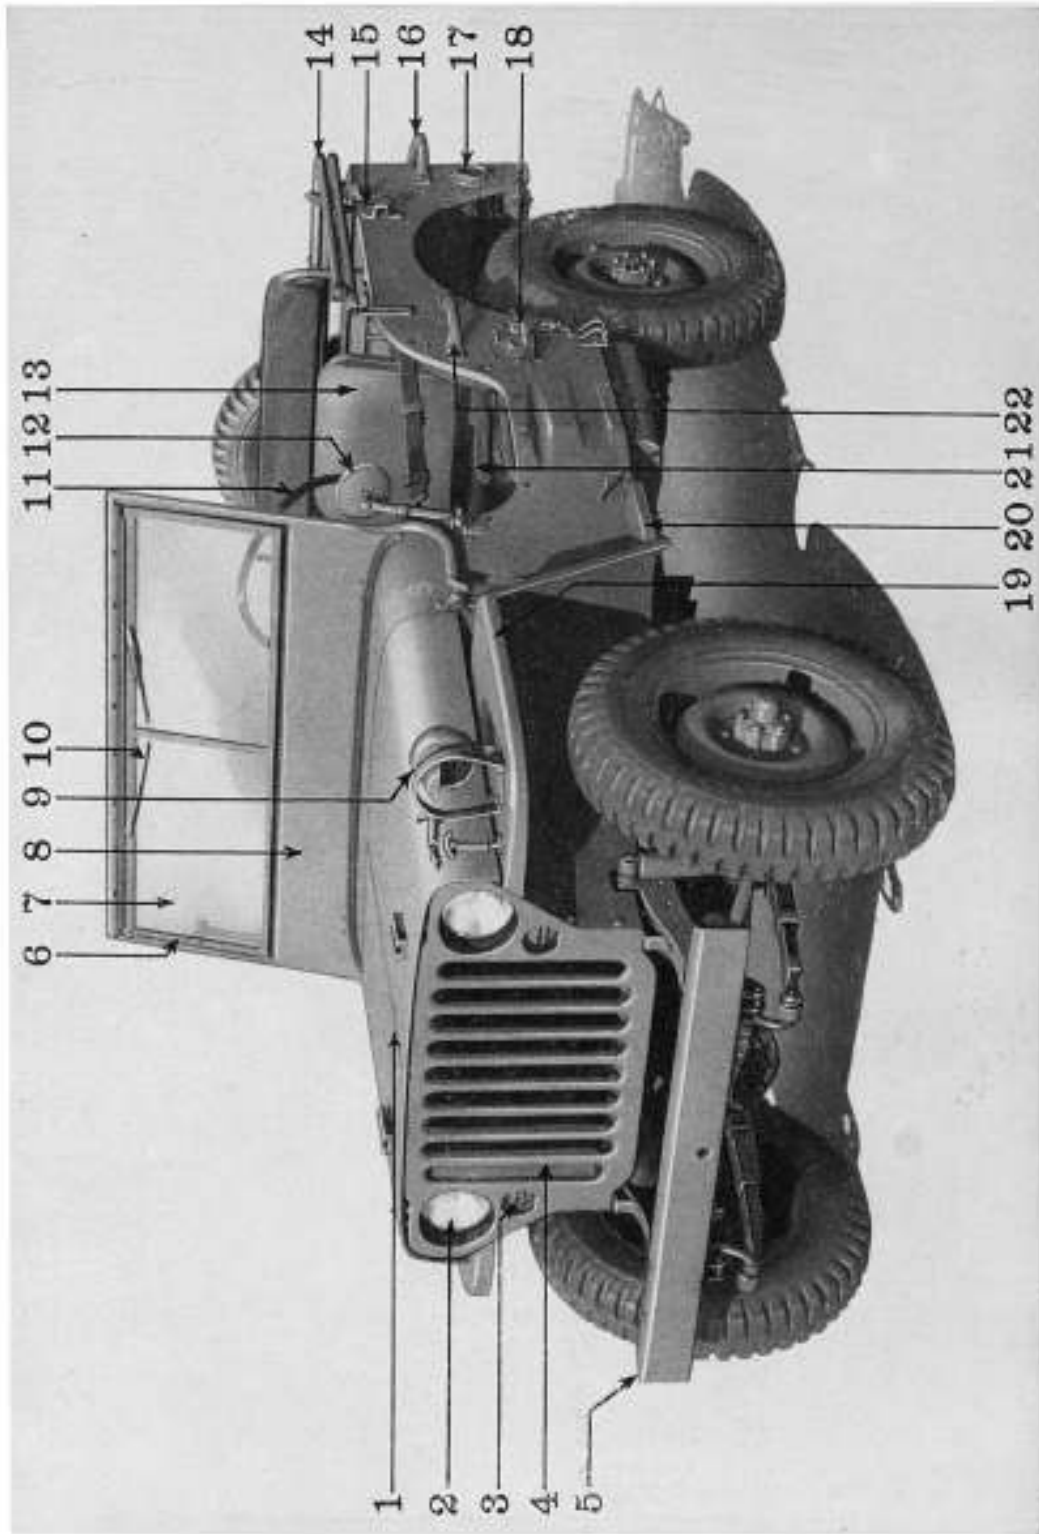

WILLYS MODEL "MB" 1/4-TON 4 x 4 GOVERNMENT TRUCK  
FIG. 1—TRUCK COMPLETE (Left Side)

Item No.	Gov't Group	Part No.	Name	Item No.	Gov't Group	Part No.	Name
1	1704	A-3225	Hood Assembly	11	1404	A-5853	Steering Wheel Assembly
2	0407	A-1305	Headlamp Assembly—Right (No. 0607—A-1304 Left)	12	2201	A-2934	Rear View Mirror Assembly
3	0407	A-1437	Blackout Headlamp—Right (No. 0507—A-1436 Left)	13	1804	A-3105	Front Seat Complete—Driver's Side
4	2103	A-9815	Radiator Guard Assembly Complete	14	2318	A-2947	Top Bow Assembly Complete
5	2101	A-1117	Front Bumper Bar	15	1807	A-2764	Top Bow Pivot Bracket
6	1801	A-3210	Windshield Assembly Complete	16	1807	A-2380	Body Outside Handle—Rear Corner
7	1801	A-2478	Windshield Glass	17	6608	A-1306	Reflex Reflector Assembly
8	1801	A-3190	Windshield Panel Outer	18	1807	A-3139	Axe Strap Assembly
9	0647	A-6142	Blackout Driving Lamp Assembly	19	1701	A-2942	Front Fender and Splasher Assembly—Left
10	1801	A-11533	Windshield Wiper Arm and Blade Assembly	20	1807	A-3008	Cowl Side Panel—Left
				21	1804	A-2985	Front Seat Cushion Complete
				22	1807	A-2390	Body Outside Front Handle

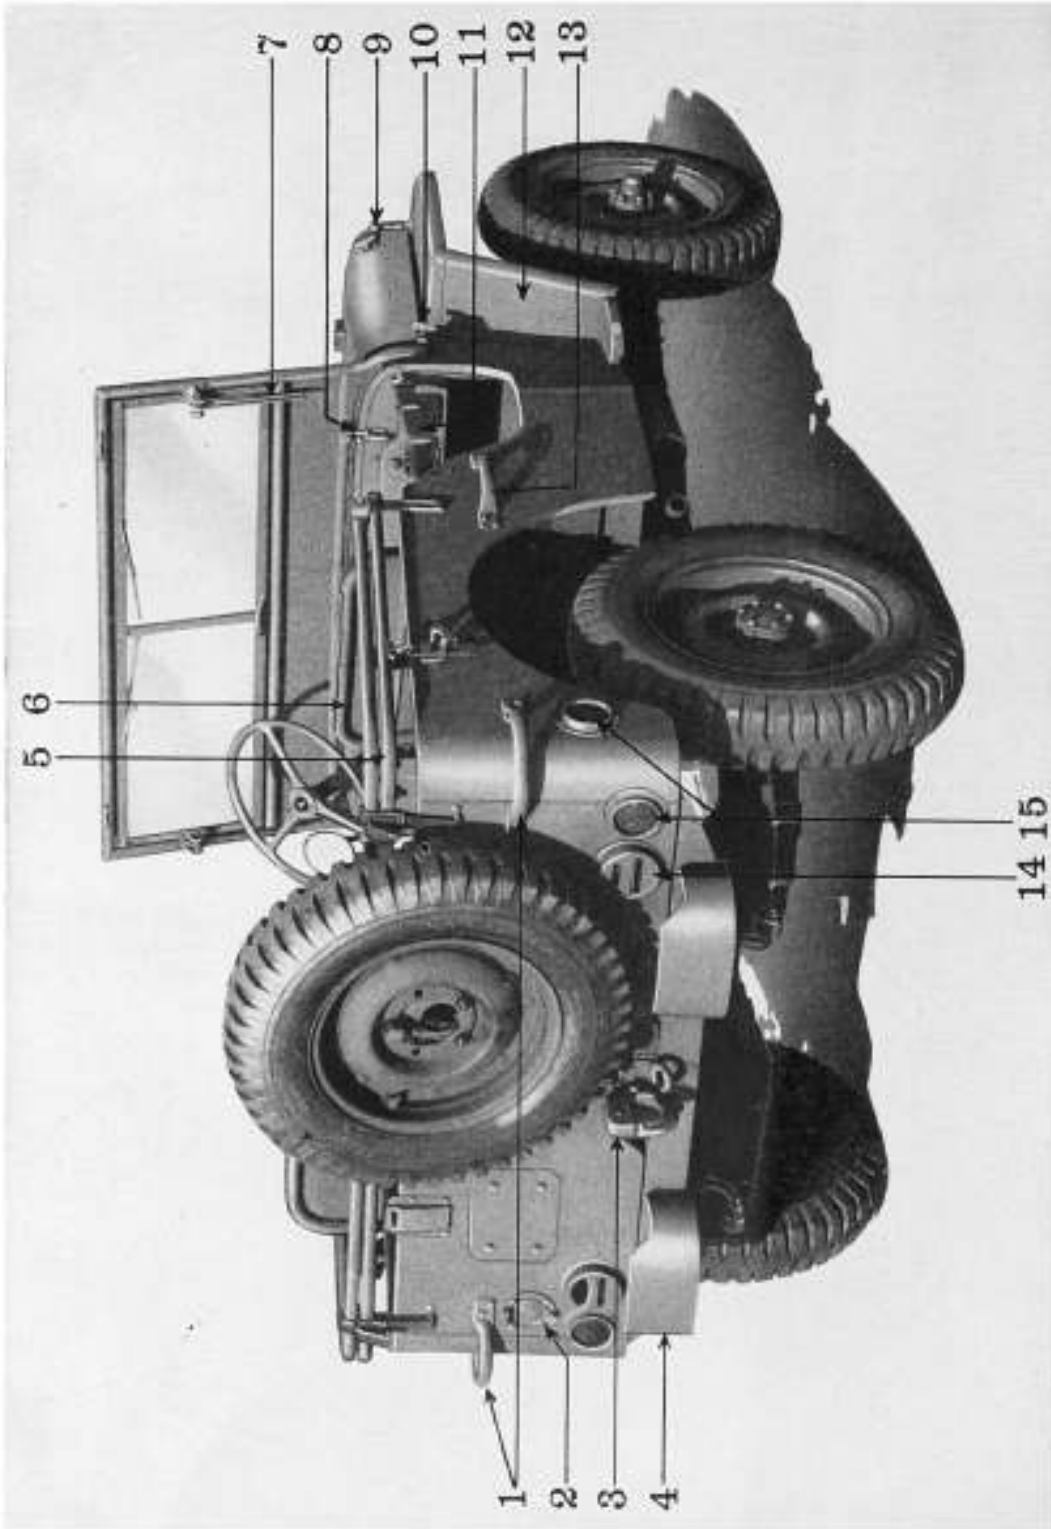

WILLYS MODEL "MB" ¼-TON 4 x 4 U. S. GOVERNMENT TRUCK

FIG. 2—TRUCK COMPLETE (Right Side)

Item No.	Gov't Group	Part No.	Name	Item No.	Gov't Group	Part No.	Name
1	1807	A-2389	Body Outside Handle—Rear Corner	9	1704	A-2906	Hood Catch Assembly
2	6606	A-5019	Coupling Socket Assembly	10	1801	A-2314	Windshield Pivot Thumb Screw
3	1502	A-563	Pintle Hook	11	1804	A-2883	Safety Strap Assembly—Complete
4	2101	A-1157	Rear Bumper	12	1701	A-2943	Front Fender and Splasher Assembly—Right
5	2319	A-2897	Top Bar Assembly—Complete	13	1807	A-2390	Body Outside Front Handle
6	1804	A-3107	Front Seat Complete—Passenger Side	14	6608	A-1065	Tail and Stop Lamp Assembly—Right
7	1801	A-2335	Windshield Adjusting Arm	15	6608	A-1306	Reflex Reflector Assembly
8	1801	A-2227	Windshield Clasp Assembly				

## ALPHABETICAL INDEX

Name	Gov't. Group No.	Page No.	Name	Gov't. Group No.	Page No.
<b>A</b>			<b>E</b>		
Accelerator	0303	29-31	Engine	0100	13
Accelerator Treadle	0303	31	Engine Crank (Starting)	2306	92
Air Cleaner	0301	29	Engine Ground Strap	0610	48
Ammeter	0605	43	Engine Mounting Bracket, Rear	0709	53
Axle, Front	1000	58-63	Engine Plate, Front	0110	23
Axle, Rear	1100	63, 66	Engine Plate, Rear	0110	23
Axle Shaft (Front Axle)	1005	60, 61	Engine Support Bracket, Front	1506	75
Axle Shaft (Rear Axle)	1102	63	Engine Support Insulators	0110	20
<b>B</b>			Exhaust Manifold	0108	20
Battery	2309	93	Exhaust Pipe	0402	33
Battery Cables	0610	49	<b>F</b>		
Battery Hold Down Frame	0610	49	Fan	0503	34
Battery Support	1506	76	Fan Belt	0503	34
Bearings (Chart)		95	Fenders, Front	1701	79
Bell Housing (Transmission)	0709	53	Fire Extinguisher	2306	93
Belt (Fan and Generator)	0503	34	Flywheel	0109	20
Bendix Drive	0602	41	Flywheel Ring Gear	0109	20
Blackout Lamp	0607	47	Foot Rest (Rear)	1807	86
Blackout Switch	0606	43	Frame	1506	75, 76
Body	1807	84 to 87 Inc.	Front Axle	1000	58-63
Body Handles	1807	85	Front Axle Tie Rod	1402	72, 73
Body, Seats	1804	82, 83	Front Brake	1200	66
Bond Straps	0612	49-50	Front Bumper	2101	87
Brake Cylinder (Front Wheel)	1207	70	Front Fenders	1701	79
Brake Cylinder (Rear Wheel)	1207	70	Front Springs	1601	76, 78
Brake Cylinder (Hydraulic-Master)	1205	68, 70	Fuel Filter	0304	29, 31
Brake, Dustshield	1208	70	Fuel Gauge (Dash Unit)	0605	43
Brake, Front	1200	68	Fuel Pump	0302	28
Brake, Hand	1201	56, 66	Fuel Strainer	0304	31
Brake Hose	1209	70, 72	<b>G</b>		
Brake Lining	1202	68	Gasoline Gauge (Tank Unit)	0304	31
Brake Pedal	1204	25, 68	Gasoline Strainer	0304	31
Brake, Rear	1200	68	Gasoline Tank	0304	35
Brake Shoes	1202	68	Gasoline Tubes	0304	33
Brake, Transmission	0809	57, 58	Gauge, Fuel (Dash Unit)	0605	43
Brake Tubes	1209	70, 72	Gauge, Oil (Dash Unit)	0605	43
Bumper (Front)	2101	87	Gear Shift (Transmission)	0706	52, 53
Bumperette (Rear)	2101	87	Gear Shift (Transfer Case)	0806	56
<b>C</b>			Generator	0601	34, 37, 39
Cable (Hand Brake)	1201	66	Generator Wiring Harness	0606	45
Camshaft	0106	19	Ground Strap (Engine)	0610	49
Carburetor	0301	25, 29	Guard, Radiator	2103	87
Chain Cover	0101	13	<b>H</b>		
Choke Control	0303	31	Handles, Body	1807	85
Circuit Breaker (Voltage Regulator)	0601	34	Hand Brake	1201	66, 68
Clutch	0202	23	Heat Control Valve	0108	20
Clutch Control	0203	23, 25	Heat Indicator (Dash Unit)	0605	43
Clutch Housing (See Bell Housing)	0706	53	Head Lamp	0607	48
Clutch Pedal	0204	25	Head Light Foot Switch	0606	43
Clutch Release	0203	23	Hood	1704	81
Coil	0604	42	Horn	0609	48
Companion Flange (Transfer Case)	0805	56	Horn Button	0609	48
Connecting Rods	0104	17	Hose, Radiator	0505	34
Connecting Rods (Steering)	1401	72	<b>I</b>		
Control Choke	0303	31	Identification Plates	2202	87
Control, Throttle	0303	31	Ignition Cables	0604	43
Control (Transmission)	0706	52	Ignition Switch	0604	43
Countershaft (Transmission)	0704	52	Instrument Lamp	0606	43
Countershaft Gear (Transmission)	0702	52	Instrument Light Switch	0606	43
Crankshaft	0102	13, 15	Instrument Panel (Body)	1807	84
Cylinder Block	0101	13	<b>D</b>		
Cylinder Head	0101	13	Differential (Front Axle)	1002	60
<b>D</b>			Differential (Rear Axle)	1103	63
Differential (Front Axle)	1002	60	Distributor	0603	41, 42
Differential (Rear Axle)	1103	63			
Distributor	0603	41, 42			

Name	Gov't. Group No.	Page No.	Name	Gov't. Group No.	Page No.
Insulator (Engine Support).....	0110	20-23			
Intake Manifold.....	0108	20			
Intermediate Shaft (Transfer Case).....	0804	56			
<b>J</b>					
Junction Block.....	0606	47			
<b>K</b>					
King Pin.....	1007	63			
<b>L</b>					
Lamp, (Blackout).....	0607	47			
Lamp, (Head).....	0607	47			
Lamp, (Tail and Stop).....	0608	48			
Lamp (Instrument).....	0606	43-47			
<b>M</b>					
Main Drive Gear (Transmission).....	0702	52			
Main Shaft (Transmission).....	0704	52			
Mainshaft Gear (Transfer Case).....	0802	56			
Manifolds.....	0108	20			
Master Cylinder (Hydraulic Brakes).....	1205	68, 70			
Mirror (Rear View).....	2201	87			
Muffler.....	0401	33			
<b>O</b>					
Oil Filler Tube.....	0107	19			
Oil Filter.....	0107	19-20			
Oil Float.....	0107	20			
Oil Gauge.....	0605	43			
Oil Level Indicator.....	0107	19			
Oil Pan.....	0107	19			
Oil Pump.....	0107	19			
Output Shaft (Transfer Case).....	0805	56			
<b>P</b>					
Pedal (Brake).....	1204	25, 68			
Pedal (Clutch).....	0204	25			
Pedal Shaft.....	1204	67			
Pintle Hook.....	1502	75			
Pipe, Exhaust.....	0402	33			
Pistons.....	0103	15			
Piston Pins.....	0103	15			
Piston Rings.....	0103	15-17			
Propeller Shaft—Front.....	0901	58			
Propeller Shaft—Rear.....	0901	58			
<b>R</b>					
Radiator.....	0501	33-34			
Radiator Guard.....	2103	87			
Radiator Filler Cap.....	0501	33			
Radiator Hose.....	0505	34			
Radiator Support Bracket.....	1506	75			
Radio Suppression.....	0612	49-51			
Rear Axle.....	1100	63, 66			
Rear Brake.....	1200	66			
Rear Springs.....	1601	76, 78			
Rear View Mirror.....	2201	87			
Reflex Reflector.....	0608	48			
Reverse Idler Gear (Transmission).....	0702	51			
Reverse Idler Shaft (Transmission).....	0704	52			
Rim and Disc (Wheels).....	1301	72			
<b>S</b>					
Seals.....	1802	81			
Seats (Body).....	1804	83			
Second Speed Gear (Transmission).....	0702	52			
Shift Lever (Transfer Case).....	0806	56			
Shift Mechanism (Transfer Case).....	0806	56			
Shifting Mechanism (Transmission).....	0706	55			
Shock Absorbers.....	1603	78, 79			
Shock Absorber Brackets.....	1506	76			
Side Curtains.....	2310	94			
Spare Wheel Lock.....	1807	85			
Spark Plugs.....	0604	42			
Speedometer.....	2203	87, 88			
Speedometer Gears.....	0807	56			
Springs, Front.....	1601	76, 78			
Springs, Rear.....	1601	76, 78			
Spring Brackets.....	1503	75			
Standard Screws, Nuts, etc.....	2304	88 to 92			
Starter Switch.....	0602	39			
Starting Crank (Engine).....	2306	92			
Starting Motor.....	0602	39-41			
Steering Arm (Front Axle).....	1006	62			
Steering Connecting Rod.....	1401	72			
Steering Gear.....	1403	73			
Steering Gear Arm.....	1403	73			
Steering Knuckle.....	1006	61			
Steering Knuckle Tie Rod.....	1402	72, 73			
Steering Wheel.....	1404	73			
Stop Light Switch.....	0606	43			
Switch, Blackout.....	0606	43			
Switch, Head Light Foot.....	0606	43			
Switch, Ignition.....	0604	43			
Switch, Instrument Light.....	0606	43			
Switch, Stop Light.....	0606	43			
Synchronizer, (Transmission).....	0702	52			
<b>T</b>					
Tail and Stop Lamp.....	0608	48, 49			
Thermostat (Cylinder Head).....	0101	13			
Throttle Control.....	0303	31			
Tie Rod (Front Axle).....	1402	72, 73			
Timing Chain.....	0106	19			
Tools.....	2306	92, 93			
Tool Compartment.....	1806	83			
Top.....	2310	94			
Transfer Case.....	0800	53			
Transfer Case Support.....	0709	53			
Transmission.....	0700	51 to 53 Inc.			
Transmission Brake.....	0809	56, 58			
<b>U</b>					
Universal Joint (Front Axle).....	1005	61			
Universal Joint (Propeller Shaft).....	0902	58			
<b>V</b>					
Valves.....	0105	17			
Valve Cover.....	0105	17			
Valve Spring.....	0105	17			
Valve Tappet.....	0105	17			
Ventilator (Crank Case).....	0105	17			
Voltage Regulator (Circuit Breaker).....	0601	34			
<b>W</b>					
Water Pump.....	0503	34			
Wheels.....	1301	72			
Wheel Hubs.....	1302	72			
Windshield.....	1801	81, 82			
Windshield Catch.....	1704	81			
Wiring Harness.....	0606	43 to 47			



# GOVERNMENT INDEX

## Covering Grouping as Recommended by the Office of the QUARTERMASTER GENERAL

ENGINE	GROUP 01	Page No.	TRANSMISSION	GROUP 07	Page No.
0100	Engine Assembly	13	0700	Transmission Assembly	51
0101	Cylinder Block and Head, and Chain Cover	13	0701	Case	51
0102	Crankshaft, Bearings and Caps	13-15	0702	Gears	52
0103	Pistons, Rings and Piston Pins	15-17	0703	Main Drive Pinion and Bearings	52
0104	Connecting Rods and Bearings	17	0704	Main Shaft, Countershaft and Reverse Idler Gear and Countershaft	52
0105	Valves, Springs, Guides, Tappets, Etc.	17	0705	Speedometer Gears (See Group No. 0807)	57
0106	Camshaft, Timing Bearings, Etc.	19	0706	Shift Fork, Levers	52
0107	Oil Pump, Oil Pan, Gauge, Oil Filter and Oil Tank	19-20	0709	Bell Housing and Connecting Parts	53
0108	Manifolds	20	0710	Inspection Cover	53
0109	Flywheel, Ring Gear, Etc.	20			
0110	Mountings	20-23			
<b>CLUTCH</b>			<b>TRANSFER CASE</b>		
	GROUP 02			GROUP 08	
0201	Clutch Disc	23	0800	Assembly	53
0202	Cover, Pressure Plate and Springs	23	0801	Case	55
0203	Release Lever, Bearings, Forks, Etc.	23	0802	Drive Gear	56
0204	Pedal	25	0804	Intermediate Gear, Shaft and Bearings	56
0207	See Group 0709 for Clutch Housing	54	0805	Output and Clutch Shafts, Gears, Bearings and Couplings	56
			0806	Shift Shafts, Fork and Levers	56
			0807	Speedometer Gears	56
			0809	Transmission Brake Parts	56-58
<b>FUEL SYSTEM</b>			<b>PROPELLER SHAFT and UNIVERSAL JOINT</b>		
	GROUP 03			GROUP 09	
0301	Carburetor, Air Cleaner	25 to 29	0901	Propeller Shaft Assembly, Front and Rear	58
0302	Fuel Pump, Fuel Pump Tube, Hose, Etc.	29	0902	Universal Joints	58
0303	Accelerator, Throttle and Choke	29-31	0903	Propeller Shaft "U" Bolt	58
0304	Fuel Tank and Lines	31-33			
<b>EXHAUST</b>			<b>FRONT AXLE</b>		
	GROUP 04			GROUP 10	
0401	Muffler	33	1000	Font Axle Assembly	58
0402	Exhaust Pipe	33	1001	Housing	60
0403	Connecting Parts	33	1002	Differential and Bearings	60
			1003	Pinion Bearings, Shims, Etc.	60
			1005	Axle and Universal Joint	60, 61
			1006	Steering Knuckle, Flange and Steering Arm (Front Wheel Drive Only)	61, 63
			1007	King Pins, Spindle, Etc.	63
<b>COOLING SYSTEM</b>			<b>REAR AXLE</b>		
	GROUP 05			GROUP 11	
0501	Radiator Shell and Core, Filler Cap	33-34	1100	Rear Axle Assembly	63
0503	Water Pump, Fan and Belt	34	1101	Housing Assembly	63
0504	Radiator Mountings	34	1102	Axle Drive Shafts	63
0505	Engine Water Fittings and Hose	34	1103	Differential and Carrier Assembly and Bearings	63-66
			1104	Pinion Bearings and Mounting Parts	66
<b>ELECTRICAL</b>			<b>BRAKES</b>		
	GROUP 06			GROUP 12	
0601	Generator and Regulator	34-37-39	1200	Brake Assembly	66
0602	Starting Motor	39-41	1201	Hand Brake	66-68
0603	Distributor and Condenser	41-42	1202	Shoes and Lining	68
0604	Ignition Coil and Wiring and Spark Plugs, and Ignition Switch	42-43			
0605	Instruments	43			
0606	Light Switches and Cables	43-47			
0607	Headlamps, Sealed Beams	47-48			
0608	Tail and Auxiliary Lamp	48			
0609	Horn	48			
0610	Starting Cables and Connections (For Battery See Group 2309)	48-49			
0612	Radio Suppression	49 to 51			

<b>BRAKES (Cont.)</b>		Page No.	<b>HOODS, FENDERS, and MISCELLANEOUS SHEET</b>		Page No.
<b>1203</b>	Brake Shoe Support, Guide Spring, Adjusting Pins, Anchor Plate.....	68	<b>METAL GROUP</b>		
<b>1204</b>	Pedal and Pedal Shaft.....	68	<b>GROUP 17</b>		
<b>1205</b>	Master Cylinder.....	68, 70	<b>1701</b>	Fenders.....	79
<b>1207</b>	Wheel Cylinders.....	70	<b>1702</b>	Splash Shield.....	79
<b>1208</b>	Brake Dust Shield or Backing Plate.....	70	<b>1704</b>	Hood.....	81
<b>1209</b>	Brake Lines, Pipes and Hoses.....	70, 72	<b>BODY</b>		
<b>WHEELS, HUBS and DRUMS (Front and Rear)</b>			<b>GROUP 18</b>		
<b>GROUP 13</b>			<b>1801</b>	Windshield, Windshield Wiper and Parts ..	81, 82
<b>1301</b>	Wheel Assembly, Bearings, Retainers, Etc.....	72	<b>1802</b>	Floor Mats and Seals.....	82
<b>1302</b>	Hubs and Drums, Wheel Studs and Nuts .....	72	<b>1804</b>	Seats.....	82, 83
<b>STEERING</b>			<b>1806</b>	Tool Box.....	83
<b>GROUP 14</b>			<b>1807</b>	Body and Attaching Parts .....	84 to 87
<b>1401</b>	Steering Connecting Rod or Drag Link.....	72	<b>BUMPERS and GUARDS</b>		
<b>1402</b>	Steering Tie Rod.....	72, 73	<b>GROUP 21</b>		
<b>1403</b>	Steering Gear Assembly.....	73	<b>2101</b>	Bumpers.....	87
<b>1404</b>	Steering Wheel Assembly.....	73	<b>2103</b>	Radiator Guard.....	87
<b>1405</b>	Brackets and Attaching Parts.....	73, 75	<b>MISCELLANEOUS BODY and CHASSIS, and ACCESSORIES</b>		
<b>FRAME AND BRACKETS</b>			<b>GROUP 22</b>		
<b>GROUP 15</b>			<b>2201</b>	Rear View Mirrors.....	87
<b>1502</b>	Pintle Hooks.....	75	<b>2202</b>	Identification and Caution Plates.....	87
<b>1503</b>	Spring Brackets.....	75	<b>2203</b>	Speedometers and Parts.....	87-88
<b>1505</b>	Spare Wheel Carrier—See Body Group No. 1800.....	83-84	<b>GENERAL USE, STANDARDIZED PARTS</b>		
<b>1506</b>	Frame and Brackets.....	75, 76	<b>GROUP 23</b>		
<b>SPRING and SHOCK ABSORBERS</b>			<b>2304</b>	Miscellaneous Nuts, Bolts, Screws and Washers .....	88 to 92
<b>GROUP 16</b>			<b>2305</b>	Miscellaneous Cotter Keys and Woodruff Keys.....	92
<b>1601</b>	Front and Rear Springs.....	76, 78	<b>2306</b>	Tools, Starting Crank and Equipment .....	92, 93
<b>1602</b>	Shackles and Spring Attaching Parts.....	78	<b>2308</b>	Bulbs.....	93
<b>1603</b>	Shock Absorbers.....	78, 79	<b>2309</b>	Battery.....	93
			<b>2310</b>	Tarpaulins, Bows, Corners, Covers, and End Curtains .....	94
			<b>2317</b>	Brake Lining.....	94

## INDEX OF ILLUSTRATIONS

	Page No.		Page No.		
Fig. 1	Truck Complete Left Side.....	3	Fig. 22	Blackout Driving Lamp.....	46
Fig. 2	Truck Complete Right Side.....	4	Fig. 23	Blackout Fender Lamp.....	46
Fig. 3	Front Sectional View of Engine.....	9	Fig. 24	Head Lamp.....	46
Fig. 4	Cylinder Head, Manifold and Valve Cover.....	10	Fig. 25	Tail Lamp.....	46
Fig. 5	Timing Chain Cover, Cylinder Block and Bell Housing.....	11	Fig. 26	Transmission.....	50
Fig. 6	Side Sectional View of Engine.....	12	Fig. 27	Transfer Case.....	54-55
Fig. 7	Crankshaft and Connecting Rod.....	14	Fig. 28	Propeller Shaft—Rear.....	57
Fig. 8	Valve Mechanism.....	16	Fig. 29	Front Axle Assembly.....	57
Fig. 9	Oil Pump.....	18	Fig. 30	Front Axle, Steering Knuckle and Wheel Bearing.....	59
Fig. 10	Clutch.....	21	Fig. 31	Rear Axle Assembly.....	62
Fig. 11	Clutch Control.....	22	Fig. 32	Brake System.....	64-65
Fig. 12	Carburetor.....	24	Fig. 33	Brake.....	67
Fig. 13	Fuel Pump.....	27	Fig. 34	Brake Master Cylinder.....	67
Fig. 14	Accelerator, Throttle and Choke Control.....	29	Fig. 35	Front Wheel Brake Cylinder.....	69
Fig. 15	Fuel Filter.....	30	Fig. 36	Steering Connecting Rod.....	69
Fig. 16	Exhaust System.....	32	Fig. 37	Steering Gear.....	71
Fig. 17	Water Pump.....	32	Fig. 38	Frame.....	74
Fig. 18	Generator.....	36-37	Fig. 39	Spring Shackles.....	77
Fig. 19	Starting Motor.....	38	Fig. 40	Front Spring Bolt—Rear.....	77
Fig. 20	Distributor.....	40	Fig. 41	Body (Front Compartment).....	80
Fig. 21	Wiring Diagram.....	44	Fig. 42	Shock Absorber.....	80