TM 9-767

WAR DEPARTMENT TECHNICAL MANUAL

40-TON TANK TRANSPORTER TRUCK-TRAILER M25

WAR DEPARTMENT

FEBRUARY 1944

WAR DEPARTMENT TECHNICAL MANUAL TM 9-767

40-TON TANK TRANSPORTER TRUCK-TRAILER M25



WAR DEPARTMENT
February 1944

WAR DEPARTMENT Washington 25, D. C., 23 February 1944

TM 9-767, 40-Ton Tank Transporter Truck-trailer M25, is published for the information and guidance of all concerned.

[A.G. 300.7 (6-14-43)]

By Order of the Secretary of War:

G. C. MARSHALL, Chief of Staff.

Official:

J. A. ULIO,

Major General,

The Adjutant General.

DISTRIBUTION: R9 (4); Bn 9 (2); IC 9 (10).

(For explanation of symbols, see FM 21-6.)

CONTENTS

Paragraphs Pages	PAR1	ONE-VEHICLE OPERATING INST	RUCTIONS	;
II			Paragraphs	Pages
III	SECTION I	Introduction	1	5
IV Auxiliary equipment, controls and operation 7-18 44-72 V Operation under unusual conditions 19-23 73-77 VI First echelon preventive maintenance services 24-28 78-90 VII Lubrication 29-30 91-108 VIII Tools and equipment stowage on the vehicle 31-32 109-131 VIII Tools and equipment stowage on the vehicle 31-32 109-131 VIII Tools and equipment 33-34 132-136 X Second echelon preventive maintenance 35 137-162 XI Organization, tools and equipment 36-37 163 XIII Trouble shooting 38-63 164-180 XIII Engine, description, data, maintenance and adjustment in vehicle 64-76 181-209 XIV Clutch and linkage 77-82 210-216 XV Fuel air intake, and exhaust systems 83-93 247-236 XVII Ignition system 94-101 237-262 XVIII Starting and generating system 107-111 272-276 XIX Battery and lighting system 107-111 272-276 XIX Battery and lighting system 107-111 272-276 XIX Battery and lighting system 112-128 277-304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit 129-137 305-333 XXII Propeller shafts and universal joint assemblies 138-140 334-338 XXII Front axle 141-144 339-345 XXIII Rear axle tandem unit 145-151 346-357 XXIII Toole a tandem unit 145-151 346-357 XXIII Toole at a tandem unit 145-151 346-357 XXIIII Toole at a tandem unit	II	Description and tabulated data.	2-3	6–15
And operation 7-18 44-72	III	Driving controls and operation	4–6	16-43
V Operation under unusual conditions 19-23 73-77 VI First echelon preventive maintenance services 24-28 78-90 VII Lubrication 29-30 91-108 VIII Tools and equipment stowage on the vehicle 31-32 109-131 PART TWO—TRACTOR MAINTENANCE INSTRUCTIONS IX New vehicle run-in test 33-34 132-136 X Second echelon preventive maintenance 35 137-162 XI Organization, tools and equipment 36-37 163 XIII Trouble shooting 38-63 164-180 XIII Engine, description, data, maintenance and adjustment in vehicle 64-76 181-209 XIV Clutch and linkage 77-82 210-216 XV Fuel air intake, and exhaust systems 83-93 247-236 XVI Cooling system 94-101 237-262 XVIII Starting and generating system 102-106 263-271 XVIII Starting and generating system 107-111 272-276 XIX Battery and lighting system 107-111 272-276 XIX Battery and lighting system 112-128 277-304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit 129-137 305-333 XXII Propeller shafts and universal joint assemblies 138-140 334-338 XXII Front axle 141-144 339-345 XXIII Rear axle tandem unit 145-151 346-357	IV	J + -1 ,	•	
ditions			7–18	44-72
VI First echelon preventive maintenance services 24–28 78–90 VII Lubrication 29–30 91–108 VIII Tools and equipment stowage on the vehicle 31–32 109–131 PART TWO—TRACTOR MAINTENANCE INSTRUCTIONS IX New vehicle run-in test 33–34 132–136 X Second echelon preventive maintenance 35 137–162 XI Organization, tools and equipment 36–37 163 XIII Trouble shooting 38–63 164–180 XIII Engine, description, data, maintenance and adjustment in vehicle 64–76 181–209 XIV Clutch and linkage 77–82 210–216 XV Fuel air intake, and exhaust systems 83–93 217–236 XVI Cooling system 94–101 237–262 XVIII Ignition system 102–106 263–271 XVIII Starting and generating system 107–111 272–276 XIX Battery and lighting system 112–128 277–304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit 129–137 305–33	V	- L	19-23	73-77
Maintenance services	VI		13 10	,
VIII Tools and equipment stowage on the vehicle 31–32 109–131	•		24-28	78-90
VIII Tools and equipment stowage on the vehicle 31–32 109–131	VII	Lubrication	29-30	91-108
on the vehicle 31–32 109–131 PART TWO—TRACTOR MAINTENANCE INSTRUCTIONS IX New vehicle run-in test 33–34 132–136 X Second echelon preventive maintenance 35 137–162 XI Organization, tools and equipment 36–37 163 XII Trouble shooting 38–63 164–180 XIII Engine, description, data, maintenance and adjustment in vehicle 64–76 181–209 XIV Clutch and linkage 77–82 210–216 XV Fuel air intake, and exhaust systems 83–93 217–236 XVI Cooling system 94–101 237–262 XVII Ignition system 102–106 263–271 XVIII Starting and generating system 107–111 272–276 XIX Battery and lighting system 112–128 277–304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit 129–137 305–333 XXI Propeller shafts and universal joint assemblies 138–140 334–338 XXII Front axle 141–144 339–345 <td>VIII</td> <td></td> <td></td> <td></td>	VIII			
IX New vehicle run-in test 33–34 132–136 X Second echelon preventive maintenance 35 137–162 XI Organization, tools and equipment 36–37 163 XII Trouble shooting 38–63 164–180 XIII Engine, description, data, maintenance and adjustment in vehicle 64–76 181–209 XIV Clutch and linkage 77–82 210–216 XV Fuel air intake, and exhaust systems 83–93 217–236 XVI Cooling system 94–101 237–262 XVII Ignition system 102–106 263–271 XVIII Starting and generating system 107–111 272–276 XIX Battery and lighting system 112–128 277–304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit 129–137 305–333 XXI Propeller shafts and universal joint assemblies 138–140 334–338 XXII Front axle 141–144 339–345 XXIII Rear axle tandem unit 145–151 346–357			31–32	109-131
X Second echelon preventive maintenance 35 137–162 XI Organization, tools and equipment 36–37 163 XII Trouble shooting 38–63 164–180 XIII Engine, description, data, maintenance and adjustment in vehicle 64–76 181–209 XIV Clutch and linkage 77–82 210–216 XV Fuel air intake, and exhaust systems 83–93 217–236 XVI Cooling system 94–101 237–262 XVII Ignition system 102–106 263–271 XVIII Starting and generating system 107–111 272–276 XIX Battery and lighting system 112–128 277–304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit 129–137 305–333 XXII Propeller shafts and universal joint assemblies 138–140 334–338 XXIII Front axle 141–144 339–345 XXIII Rear axle tandem unit 145–151 346–357	PART T	WO-TRACTOR MAINTENANCE IN	STRUCTIO	NS
X Second echelon preventive maintenance 35 137–162 XI Organization, tools and equipment 36–37 163 XII Trouble shooting 38–63 164–180 XIII Engine, description, data, maintenance and adjustment in vehicle 64–76 181–209 XIV Clutch and linkage 77–82 210–216 XV Fuel air intake, and exhaust systems 83–93 217–236 XVI Cooling system 94–101 237–262 XVII Ignition system 102–106 263–271 XVIII Starting and generating system 107–111 272–276 XIX Battery and lighting system 112–128 277–304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit 129–137 305–333 XXII Propeller shafts and universal joint assemblies 138–140 334–338 XXIII Front axle 141–144 339–345 XXIII Rear axle tandem unit 145–151 346–357	ıx	New vehicle run-in test	33_34	132-136
maintenance 35 137-162 XI Organization, tools and equipment 36-37 163 XII Trouble shooting 38-63 164-180 XIII Engine, description, data, maintenance and adjustment in vehicle 64-76 181-209 XIV Clutch and linkage 77-82 210-216 XV Fuel air intake, and exhaust systems 83-93 217-236 XVI Cooling system 94-101 237-262 XVII Ignition system 102-106 263-271 XVIII Starting and generating system 107-111 272-276 XIX Battery and lighting system 112-128 277-304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit 129-137 305-333 XXI Propeller shafts and universal joint assemblies 138-140 334-338 XXII Front axle 141-144 339-345 XXIII Rear axle tandem unit 145-151 346-357			33 3 1	152 150
XI Organization, tools and equipment 36–37 163 XII Trouble shooting 38–63 164–180 XIII Engine, description, data, maintenance and adjustment in vehicle 64–76 181–209 XIV Clutch and linkage 77–82 210–216 XV Fuel air intake, and exhaust systems 83–93 247–236 XVI Cooling system 94–101 237–262 XVIII Ignition system 102–106 263–271 XVIII Starting and generating system 107–111 272–276 XIX Battery and lighting system 112–128 277–304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit 129–137 305–333 XXI Propeller shafts and universal joint assemblies 138–140 334–338 XXII Front axle 141–144 339–345 XXIII Rear axle tandem unit 145–151 346–357	71		35	137-162
XII Trouble shooting 38-63 164-180 XIII Engine, description, data, maintenance and adjustment in vehicle 64-76 181-209 XIV Clutch and linkage 77-82 210-216 XV Fuel air intake, and exhaust systems 83-93 217-236 XVI Cooling system 94-101 237-262 XVII Ignition system 102-106 263-271 XVIII Starting and generating system 107-111 272-276 XIX Battery and lighting system 112-128 277-304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit 129-137 305-333 XXI Propeller shafts and universal joint assemblies 138-140 334-338 XXII Front axle 141-144 339-345 XXIII Rear axle tandem unit 145-151 346-357	XI		36-37	
XIII Engine, description, data,	XII			-
in vehicle	XIII	Engine, description, data,		
XIV Clutch and linkage 77-82 210-216 XV Fuel air intake, and exhaust systems 83-93 247-236 XVI Cooling system 94-101 237-262 XVII Ignition system 102-106 263-271 XVIII Starting and generating system 107-111 272-276 XIX Battery and lighting system 112-128 277-304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit 129-137 305-333 XXI Propeller shafts and universal joint assemblies 138-140 334-338 XXII Front axle 141-144 339-345 XXIII Rear axle tandem unit 145-151 346-357		in vehicle	64-76	181-209
XV Fuel air intake, and exhaust systems 83-93 217-236 XVI Cooling system 94-101 237-262 XVII Ignition system 102-106 263-271 XVIII Starting and generating system 107-111 272-276 XIX Battery and lighting system 112-128 277-304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit 129-137 305-333 XXI Propeller shafts and universal joint assemblies 138-140 334-338 XXII Front axle 141-144 339-345 XXIII Rear axle tandem unit 145-151 346-357	XIV			
systems 83-93 217-236 XVI Cooling system 94-101 237-262 XVII Ignition system 102-106 263-271 XVIII Starting and generating system 107-111 272-276 XIX Battery and lighting system 112-128 277-304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit 129-137 305-333 XXI Propeller shafts and universal joint assemblies 138-140 334-338 XXII Front axle 141-144 339-345 XXIII Rear axle tandem unit 145-151 346-357			,, 02	210 210
XVI Cooling system 94-101 237-262 XVII Ignition system 102-106 263-271 XVIII Starting and generating system 107-111 272-276 XIX Battery and lighting system 112-128 277-304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit 129-137 305-333 XXI Propeller shafts and universal joint assemblies 138-140 334-338 XXII Front axle 141-144 339-345 XXIII Rear axle tandem unit 145-151 346-357		,,,	83-93	217-236
XVII Ignition system	XVI	_	94-101	237-262
XVIII Starting and generating system. 107-111 272-276 XIX Battery and lighting system. 112-128 277-304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit	XVII		102-106	263-271
XIX Battery and lighting system 112-128 277-304 XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit 129-137 305-333 XXI Propeller shafts and universal joint assemblies 138-140 334-338 XXII Front axle 141-144 339-345 XXIII Rear axle tandem unit 145-151 346-357	XVIII	_	107-111	272-276
XX Main and auxiliary transmissions, transfer case, power take-offs, and declutch unit	XIX		112-128	277-304
and declutch unit	xx	Main and auxiliary transmissions,		
XXI Propeller shafts and universal joint assemblies		transfer case, power take-offs,	100 107	205 222
joint assemblies	37377		129-137	305-333
XXII Front axle	XXI		138-140	334-338
XXIII Rear axle tandem unit 145-151 346-357	XXII	<u>-</u>		
	XXIV		152–171	358–377

TM 9-767

40-TON TANK TRANSPORTER TRUCK-TRAILER M25

		Paragraphs	Pages
CTION XXV	Propeller shaft brake and linkage	172-174	378-382
XXVI	Wheels, hubs, wheel bearings, and		
	tires	175–177	383-392
XXVII	Springs and shock absorbers	178-180	393-399
XXVIII	Steering gear and hydraulic		
	system	181–189	400–410
XXIX	Cab and frame	190–197	411–417
XXX	Instruments	198–199	418–426
XXXI	Front winch	200-206	427-433
XXXII	Tandem rear winches	207-214	434-449
XXXIII	Fifth wheel	215-217	450–451
PART THRE	EE-SEMITRAILER MAINTENANCE	INSTRUCT	IONS
XXXIV	Organization tools and equipment	218	452
XXXV	Brake system	219-233	453-476
XXXVI	Electrical system	234-240	477-483
XXXVII	Supports	241-243	484-485
XXXVIII	Trunnion axle	244-246	486-489
XXXIX	Walking beam (rocker beam)	247-250	490-497
XL	Wheels, hubs, and tires	251-256	498-512
PART FO	OUR—SHIPMENT AND TEMPORAR	Y STORA	GE
XLI	Shipment and temporary storage	257-259	513-519
Reference	s		520-522
INDEX			523-532

PART I—VEHICLE OPERATING INSTRUCTIONS

Section I

INTRODUCTION

					1	Paragraph
Scope	 	 	 	.	 	. 1

1. SCOPE.

- a. This technical manual is published for the information and guidance of the using arm personnel charged with the operation and maintenance of this materiel.
- b. In addition to a description of the 40-ton, Tank Transporter Truck-trailer M25, this manual contains technical information required for the identification, use, and care of materiel. The manual is divided into four parts. Part One, section I through section VIII, contains vehicle operating instructions. Part Two, section IX through section XXXIII, contains vehicle maintenance instructions for using arm personnel charged with the responsibility of doing tractor maintenance work within their jurisdiction. Part Three, section XXXIV through section XL, contains semitrailer maintenance instructions for using arm personnel. Part Four, section XLI, contains instructions for shipment, and temporary storage.
- c. In all cases where the nature of the repair, modifications, or adjustment is beyond the scope or facilities of the unit, the responsible ordnance service should be informed so that trained personnel with suitable tools and equipment may be provided, or proper instructions issued.

d. MWO and Major Unit Assembly Replacement Record.

- (1) DESCRIPTION. Every vehicle is supplied with a copy of A.G.O. Form No. 478, which provides a means of keeping a record of each MWO (FSMWO) completed or major unit assembly replaced. This form includes spaces for the vehicle name and U. S. A. Registration Number, instructions for use, and information pertinent to the work accomplished. It is very important that the form be used as directed and that it remain with the vehicle until the vehicle is removed from service.
- (2) Instructions for Use. Personnel performing modifications or major unit assembly replacements must record clearly on the form a description of the work completed and must initial the form in the columns provided. When each modification is completed, record the date, hours and/or mileage, and MWO number. When major unit assemblies, such as engines, transmissions, transfer cases, are replaced, record the date, hours and/or mileage and nomenclature of the unit assembly. Minor repairs and minor parts and accessory replacements need not be recorded.
- (3) EARLY MODIFICATIONS. Upon receipt by a third or fourth echelon repair facility of a vehicle for modification or repair, maintenance personnel will record the MWO numbers of modifications applied prior to the date of the A.G.O. Form No. 478.

40-TON TANK TRANSPORTER TRUCK-TRAILER M25

Section II

DESCRIPTION AND TABULATED DATA

																	Pc	araş	gra	ام
Description		 	 						 										2	
Data	 	 	 				. .		 		 								3	

2. DESCRIPTION.

- a. The 40-ton, Tank Transporter Truck-trailer M25 is designed for use in recovering a piece of damaged materiel and transporting it to a place where necessary repairs can be accomplished. The M25 unit consists of the tractor truck (M26) and semitrailer (M15), the semitrailer being coupled to the tractor by means of a fifth wheel on the tractor, which automatically locks the trailer to the tractor. Air brakes on the trailer wheels and lighting equipment on the trailer are connected to the tractor air and lighting systems by means of air hose and a jumper cable (carried on the trailer). The trailer air brakes and lights are controlled by the driver of the tractor. The trailer air brakes are automatically set in case the trailer is accidentally, or purposely, disconnected from the tractor.
- The tractor truck M26 is a self-propelled motor vehicle, powered by a 6-cylinder internal-combustion gasoline engine. There are two front and eight rear dual wheels equipped with desert, or combat type, pneumatic tires. The rear wheels are driven by roller type chains operating on sprockets fastened to the wheel hubs. The power to drive the rear wheels is obtained from the engine, through the clutch, main and auxiliary transmissions, rear differential and jackshafts to the drive sprockets which are bolted to the jackshaft hubs, Roller chains on the jackshaft hub sprockets and on the wheel hub sprockets, drive the wheels. The tractor can be used as a recovery vehicle without the semitrailer, since it is equipped with a front mounting winch, a rear tandem winch, and a vertical lifting device. The cab is armor plated and has hinged armor plate covers for the windshield, radiator, doors, and cab windows. All of these armor plate covers are operated from inside the cab and have peep ports. A pintle hook is bolted to the rear end of the frame. Towing shackles are fastened to the front and rear of the frame. A drawbar and whiffletree are carried on the tractor, for recovery operations. Oxygen and acetylene tanks with equipment for welding or cuttings; vise, Pioneer, and maintenance tools are also carried on the tractor.
- c. The semitrailer (M15) is designed to be pulled by the tractor truck (M26) and consists of a low drop frame having a low bed-type platform. Eight single wheels equipped with pneumatic tires are used to carry the semitrailer, which has a maximum pay load of 40 tons to be carried at a maximum speed of 26 miles per hour. The use of walking beams operating on trunnion shafts, allows any one wheel to pass over a 9-inch obstacle while all other wheels remain


DESCRIPTION AND TABULATED DATA

RA PD 48208

Figure 1—Right Front Three-quarter View of 40-ton Tank Transporter Truck-Trailer M25

LEGI

40-TON TANK TRANSPORTER TRUCK-TRAILER M25

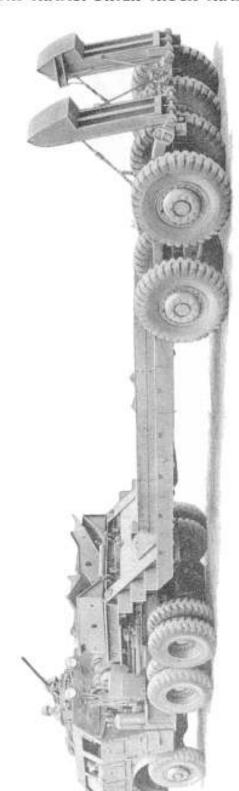

RA PD 48207

Figure 2—Left Rear Three-quarter View of 40-ton Tank Transporter Truck-Trailer M25