

TM5-3020

WAR DEPARTMENT MAINTENANCE MANUAL AND PARTS CATALOG

**TRACTOR, CRAWLER TYPE, GASOLINE, 20 D. B. H. P.,
WITH BULLDOZER AND TOWING WINCH,
MODEL CA-1 "CLARKAIR"**

CLARK TRUCTRACTOR DIV.
CLARK EQUIPMENT CO.
BATTLE CREEK, MICHIGAN

APRIL 22, 1943

TM5-3020

WAR DEPARTMENT

TM5-3020, Maintenance Manual and Parts Catalog, Tractor, Crawler type, Gasoline, 20 D.B.H.P. with Bulldozer and Towing Winch, Model CA-1 "Clarkair," published by the Clark Trutractor Div., Clark Equipment Company, is furnished for the information and guidance of all concerned.

AG062.11 (March 25, 1943)

G. C. MARSHALL
Chief of Staff

Official:

J. A. ULIO,
Major General,
The Adjutant General

1st Printing — April, 1943
2nd Printing — August, 1943

MAINTENANCE MANUAL AND PARTS CATALOG

CLARKAIR Model CA-1

As supplied

U. S. ENGINEERS

Contract No. W-145-A eng.-511
W-1088 eng. (MSP)-2460
W-1088 eng. 2155
W-1088 eng. 2165

Tractor Serials No. CA-1431 to No. CA-143162, Incl.
CA-143193 to No. CA-143228, Incl.
CA-143229 to No. CA-1431015, Incl.
CA-1431016 to No. CA-1431121, Incl.

Army Registration No. 953463 to 953624, Incl.
977511 to 977546, Incl.
963300 to 964086, Incl.
963144 to 963249, Incl.

by

CLARK TRUCTRACTOR DIV.
CLARK EQUIPMENT CO.
BATTLE CREEK, MICH.

INDEX

OPERATIONS SECTION

Location of Controls and Instruments	1
Preparing Tractor for Storage and Procedure for Handling	2
Lubrication Chart for "Clarkair"	3
Instructions for Oil, Greases and Lubricants	3-4-5
Engine Oil Recommendations	6
Capacities	7
Condensed Instructions for Putting Tractor into Service	8
To Keep Tractor in Service	8
Detailed Instructions	9 to 12
Putting the Tractor Into Service	9-10
Driving the "Clarkair"	10
Operate Winch	11
Repairs and Maintenance	13-14
Engine Maintenance Instructions	15 to 22
Oiling System	15-16-17
Cooling System	17-18
Overheating	18-19-20
Fuel Sediment Trap	20
Carburetor	21-22
Care of Spark Plugs	23
Forward and Reverse Clutch	24
Steering Clutches and Brakes	24-25
To Adjust Track	25-26
Trouble Chart	27 to 31
Engine	27-28-29-30
Transmission	30
Clutches	31
Track	31

INDEX — Continued

DETAILED REPAIR SECTION

Condensed Instructions for Dismantling the "Clarkair"	1- 2
Engine Assembly	3
Valve Mechanism	3-4- 6-7-8
Camshaft and Bushings	9
Crankshaft and Flywheel	
Bearings	10-11
Reconditioning Cylinder Walls	11
Piston, Rings and Pins	12-13-14
Oil Pump	14-15
Governor	15
Repair of the Carburetor	
To Re-assemble Carburetor	20-21-22
Water Pump Disassembly	23
Water Pump Reassembly	24
Engine Tabulated Data	25-26
Repair and Maintenance of Electrical Equipment	27 to 67
Tools Required for Complete Maintenance of Electrical Equipment	27
Generator Assembly	27 to 39
128 Hour General Inspection	30-31
256 Hour Tune-up Inspection	31-32-33-34
512 Hour Overhaul	34-35-36-37-38-39
Generator Assembly Tabulated Data	39
Voltage Regulator	40-41
128 Hour General Inspection	42
256 Hour Tune-up Inspection	42-43-44
512 Hour Overhaul	44-45
Voltage Regulator Tabulated Data	45

INDEX — Continued

DETAILED REPAIR SECTION

Starting Motor Assembly	46
128 Hour General Inspection	46-47
256 Hour Tune-up Inspection	47-48-49
512 Hour Overhaul	50-51-52-53-54
Starting Motor Assembly Tabulated Data	55
Distributor Assembly	56-57
128 Hour General Inspection	57-58-59
256 Hour Tune-up Inspection	60-61
512 Hour Overhaul	61-62-63-64
Fitting the Distributor to the Engine	64
Distributor Assembly Tabulated Data	65
Ignition Coil	66
Ignition Coil Tabulated Data	66
Spark Plugs	66
Electrical Connections	67
Transmission — Forward and Reverse Unit Instructions	68-69-70-71
Forward and Reverse Unit Reassembly Instructions	72-73
Instructions on Forward and Reverse Clutch Assembly	74-75
Transmission Dismantling Instructions	76-77
Transmission Reassembly Instructions	77-78
Dismantling and Reassembly Instructions for Transmission Control Cover Assembly	78-79
Disassembly Instructions for Final Drive Assembly	80-81-82-83-84
Reassembly Instructions for Final Drive Assembly	84-85-86-87-88
Repair and Overhaul of Undercarriage and Track	89-90-91-92-93-94
Dismantling and Reassembling Instructions for Winch Assembly	95-96-97-98

INDEX — Continued

PARTS CATALOG

Final Drive Assembly	2
Final Drive Parts	31-32-33-34-35-36-37-38
Winch Assembly	2
Winch Parts	40-41
Power Take-Off Parts	38
Transmission Assembly (with Forward and Reverse Assembly)	2
Transmission Parts (with Forward and Reverse Parts)	22-23-24-25-26-27-28-29-30
Forward and Reverse Assembly (with Transmission Assembly)	2
Forward and Reverse Parts (with Transmission Parts)	22-23-24-25-26-27-28-29-30
Engine Assembly	2
Engine Parts	9-10-11-12-13-14-15-16-17-18-19-20-21
Engine Auxiliary Parts	8-9-10-11-12-14-20-21
Motor Frame	3
Motor Frame Parts	47
Undercarriage Assembly	3
Undercarriage Parts	42-43-44-45-46-47
Fenders	4-5
Throttle Control	5
Starter Switch	5
Battery	5
Cables	4-5
Forward and Reverse Lever and Parts	4
Seat Assembly and Parts	6
Instrument Panel	7
Gauges — Oil, Temperature, Ammeter	7
Switches — Ignition and Light	7
Air Cleaner	8
Gas Tank	8
Radiator	8
Radiator Guard	8
Hood	8
Exhaust Pipe	8
Side Panels	8

INDEX — Continued

PARTS CATALOG

Hoses — Radiator, Air Cleaner	8
Gas Line	8
Oil Filler Pipe	8
Flood Lamps	6-8
Ignition Coil	8
Starting Motor	9
Generator	10-11
Regulator	11
Distributor	12
Oil Pump and Parts	13
Governor and Parts	14
Water Pump and Parts	15
Cylinder Block	16
Cylinder Head	16
Oil Pan	16
Flywheel Housing	16
Spark Plugs	16
Cylinder Door Parts	16
Engine Gaskets	16-17
Camshaft and Parts	18
Valves and Valve Parts	18
Flywheel	19
Flywheel Ring Gear	19
Crankshaft and Crankshaft Parts	19
Pistons	19
Piston Rings	19
Piston Pins	19
Connecting Rods	19
Crankshaft Bearings	19
Connecting Rod Bearings	19
Carburetor and Parts	20-21
Forward and Reverse Case	22
Forward and Reverse Shifter Mechanism	22
Forward and Reverse Case Cover	22
Forward and Reverse Gears and Parts	23-24-25-26

INDEX—Continued

PARTS CATALOG

Forward and Reverse Clutch and Parts	24-25
Transmission Control Cover Assembly	27
Transmission Case	28
Transmission Countershaft and Parts	29
Transmission Mainshaft and Parts	30
Final Drive Pinion	30
Final Drive Covers	31
Final Drive Levers and Controls	31
Final Drive Housing	32
Final Drive Gears	32
Final Drive Gear Covers	32
Final Drive Sprockets	32
Final Drive Sprocket Shafts	32
Final Drive Steering Clutches	33-36-37
Final Drive Steering Clutch Shifter Mechanism	33-35
Final Drive Steering Brakes	33-34
Final Drive Clutch Shaft	33
Final Drive Drive Gear Ring	33
Final Drive Steering Clutch Drum and Pinion	33
Winch Chain and Cable	39
Winch Drive Sprocket	39
Track and Track Parts	42
Track Idler Wheel and Parts	43
Track Roller and Parts	44
Track Frames	45
Track Guards	45
Lead Axle	46
Swing Frames	46
Trunnion Blocks	46
Engine Support Springs	46
Engine Crankcase Guard	47
Draw Bar and Draw Bar Parts	47
Tool Kit Assembly	48
Numerical Parts Price List	49 to 99
Miscellaneous Engine Bulk Parts	99-100-101
Tool Kit and Parts	101