

TM 5-7044

**WAR DEPARTMENT
MAINTENANCE MANUAL
AND PARTS CATALOG**

**SEARCHLIGHT TRAILER
MODEL 1131 SPECIAL**

**FRUEHAUF TRAILER COMPANY
DETROIT, MICHIGAN
MAY 20, 1943**

TM 5-7044

WAR DEPARTMENT

TM 5—7044, Maintenance Manual and Parts Catalog, Searchlight Trailer, Model 1131 Special, published by the Fruehauf Trailer Co., is furnished for the information and guidance of all concerned.

(AG 062.11 (4/26/41) PC (C) June 10, 1941.)

G. C. MARSHALL,
Chief of Staff.

Official:

J. A. ULIO,
Major General,
The Adjutant General.

TM 5-7044

Combined

**OPERATOR'S MANUAL,
MAINTENANCE MANUAL**

and

SPARE PARTS LIST

for

SEARCHLIGHT TRAILER

Model 1131 Special

Manufactured for

CORPS OF ENGINEERS

by

THE FRUEHAUF TRAILER COMPANY

Detroit, Michigan

THIS BOOK COVERS:

Purchase Order No. 55599
Serial Nos. K-9863 thru KC-11212
U. S. Registration Nos. W-066382 thru W-067731

Purchase Order No. 57069 (DA)
Serial Nos. KC-12213 thru KC-14337

Purchase Order No. 59514 — P.O. C-44-OCE
Serial Nos. KC-14378 thru KC-16618
U. S. Registration Nos. 0210704 thru 0212944

Purchase Order No. SL-1127
Serial Nos. KC-19279 thru KC-19848
U. S. Registration Nos. 0539252 thru 0539821

MAY 20, 1943

I N D E X

PART I — OPERATOR'S MANUAL

<i>Section</i>	<i>Paragraph</i>	<i>Page Nos.</i>
I	INTRODUCTION	
	1 Purpose and Scope	3
II	DESCRIPTION AND CHARACTERISTICS	
	1 General Description	4
	2 Brakes	4
	3 Canvas Cover and Bows	4
	4 Drawbar	4
	5 Frame and Body	5
	6 Tailgate	5
	7 Tires	5
	8 Underconstruction	5
	9 Wiring and Electrical Equipment	5
	10 Wheels	6
	11 Miscellaneous	6
III	CONTROLS AND OPERATING INSTRUCTIONS	
	1 Controls	7
	2 Coupling Trailer to Truck	9
	3 Driving Truck and Trailer	9
	4 Braking Truck and Trailer	10
	5 Uncoupling Trailer from Truck	10
IV	INSPECTION—LUBRICATION—ADJUSTMENT	
	1 Daily Inspection When in Operation	11
	a. Purpose	11
	b. Prestarting Inspection	11
	c. Inspection During Operation	11
	d. Inspection at the Halt	11
	e. Inspection after Operation	11
	2 Monthly Lubrication	12
	3 Mechanical Inspection and Adjustments	12
	4 Four Months Inspection	14
V	TOOLS AND EQUIPMENT	
	1 Introduction	15
	2 Tools	15
	3 Equipment	16

PART II — MAINTENANCE MANUAL

I	SAFETY INSTRUCTIONS FOR THE SHOP	
	1 Safety Instructions	17

INDEX (Continued)

II	ELECTRIC BRAKES	
	1	General Description and Operation 18
	2	Use of Instruments in Detecting and Correcting Troubles 19
	3	Replacing the Armature, Removing, Undercutting and Replacing the Magnet 24
	4	Replacing Brake Bands 26
	5	Brake Drum Replacement 26
	6	Resurfacing Scored Drums 27
	7	Trouble Shooting 27
	8	Notes 28
III	HAND BRAKE	
	1	General Description 29
	2	Hand Brake Adjustment 29
	3	Hand Parking Brake—Disassembly 31
	4	Cause of Possible Failure and Remedy 31
IV	CORNER LIFT JACKS	
	1	General Discussion of Jacks 32
	2	Replacing Jack Handle 32
	3	Removing the Unit 32
	4	Servicing the Unit 33
V	DRAWBAR	
	1	Disassembly of Drawbar 35
	2	Repairing the Drawbar 35
	3	Disassembly of Drawbar Tongue Unit 36
	4	Reassembling the Drawbar Tongue Unit 36
	5	Rebushing the Drawbar at the Hinge 36
VI	ELECTRICAL SYSTEM AND LIGHTS	
	1	Wiring 40
	2	Lights and Equipment 40
VII	FRAME AND BODY	
	1	General Discussion of Frame and Body 41
	2	Repairing Damaged Frame and Body 41
VIII	SPRINGS	
	1	Spring Replacement 43
	2	Spring Repair 43
	3	Spring Maintenance Suggestions 43
IX	RETRACTABLE LANDING WHEEL SUPPORT	
	1	Removing Unit 44
	2	Disassembly 44
X	UNDERCONSTRUCTION	
	1	Removing Truss Bar 47
	2	Removing the Rocker Arm 48
	3	Servicing the Rocker Arm 52

INDEX (Continued)

XI	WHEELS, TIRES, HUBS AND DRUMS	
	1 Wheels	54
	2 Tires	55
	3 Hubs	56
	4 Drums	60
XII	HAND WINCH	
	1 Description	61
	2 Removing the Hand Winch	61
	3 Installing the Pinion Gear	61
	4 Replacing the Pawl	61
	5 Disassembling the Unit	61
	6 Inspecting the Unit	62
	7 Chain Repair	62

PART III — PARTS LIST

<i>Section</i>		<i>Page Nos.</i>
I	BRAKES	63- 71
	Hand Controller	63- 65
	Hand Parking Brake	66- 67
	Internal—Front and Rear (Electrical)	68- 69
	Safety Switch and Chain (Electrical)	70- 71
II	DRAW-BAR	72- 75
	Landing Wheel	76- 77
III	ELECTRICAL	78- 83
	Coupling Socket	78- 79
	Lights	80- 81
	Wiring Diagram	82- 83
IV	FRAME	84- 93
	Frame and Tailgate	84- 91
	Parking Leg (Leveling Jack)	82- 93
V	TOOLS	94- 95
VI	UNDERCONSTRUCTION	96- 99
VII	WHEELS, HUBS and DRUMS	100-101
VIII	WINCH, HAND	102-103
IX	NUMERICAL PARTS LIST	104-108

INDEX OF ILLUSTRATIONS

<i>Fig. No.</i>	<i>Title</i>	<i>Page</i>
1	Trailer, Searchlight	1
2	Trailer, Searchlight	2
3	Controls—Blackout Switch, Corner Lift Jacks, Drawbar Tongue, Emergency Brake Switch, Hand Brake, Light and Service Brake; Connection and Retractable Landing Wheel Support	7
4	Controls—Hand Controller, Controller Lock, Load Control	8
5	Inspection, Lubrication, Adjustment—Lubrication Chart	13
6	Tools and Equipment—Tools	15
7	Electric Brakes—Magnet	18
8	Electric Brakes—Armature	19
9	Electric Brakes—Checking the Amperage at the Controller	20
10	Electric Brakes—Checking the Amperage at the Brake	21
11	Electric Brakes—Measuring Armature Depression	22
12	Electric Brakes—Measuring Armature Depression	23
13	Electric Brakes—Removing the Armature	24
14	Electric Brakes—Removing the Magnet	25
15	Electric Brakes—Removing Brake Band	26
16	Hand Brake—Adjusting Hand Brake	29
16A	Exploded View—Hand Parking Brake	30
17	Corner Lift Jack—Removing the Handle	32
18	Corner Lift Jack—Removing the Screw	33
18A	Corner Lift Jack (Retractable Parking Leg)	34
19	Drawbar—Drawbar Tongue	35
20	Wiring Diagram	38
21	Electrical System and Lights—Blackout Stop and Tail Lamp and Combined Service Stop and Tail and Blackout Tail Lamp	39
22	Springs—Removing the Spring	42
22A	Retractable Landing Wheel Support	44
23	Underconstruction—Removing the Truss Bar	46
24	Underconstruction—Removing Parking Brake Cable	47
25	Underconstruction—Removing Brake Wires	48
26	Underconstruction—Removing Brake Assembly	49
27	Underconstruction—Removing Gib Plates, Spacers, and Shims	50
28	Underconstruction—Removing Spring Hanger	50
29	Underconstruction—Replacing Gib Plates	51
30	Wheels, Tires, Hubs and Drums—Removing Wheel	53
31	Wheels, Tires, Hubs and Drums—Removing Lock Ring	53
32	Wheels, Tires, Hubs and Drums—Removing Tire from Wheel	54
33	Wheels, Tires, Hubs and Drums—Replacing Tire on Wheel	55
34	Wheels, Tires, Hubs and Drums—Replacing Lock Ring	56
35	Wheels, Tires, Hubs and Drums—Hub and Drum Assembly	57
36	Wheels, Tires, Hubs and Drums—Testing for End Play	58
37	Wheels, Tires, Hubs and Drums—Removing Bearing	58
38	Wheels, Tires, Hubs and Drums—Installing Bearing	59
39	Hand Winch—Exploded View of Winch	62
40	Tractor Hand Controller	63
41	Hand Parking Brake	66
42	Electric Brakes 14" x 2"	68
43	Safety Switch and Chain	70
44	Drawbar	72
45	Retractable Landing Wheel 16"	76
46	Coupling Socket and Cover	78
47	Lights	80
48	Wiring	82
49	Frame	84
50	Frame and Tailgate	85
51	Retractable Parking Leg	92
52	Tool Kit	94
53	Underconstruction	96
54	Wheels, Hubs and Drums	100
55	Hand Winch	103

PART I

OPERATOR'S MANUAL

