

TM 5-9032

**WAR DEPARTMENT
MAINTENANCE MANUAL
AND PARTS CATALOG**

**TRAILER, FULL, FLAT BED,
8-TON, MODEL CPT8 SPECIAL**

JULY 29, 1943

**THE TRAILERS COVERED BY THIS MANUAL ARE
MANUFACTURED BY THE FOLLOWING CONTRACTORS**

**THE FRUEHAUF TRAILER COMPANY
DETROIT, MICH.**

**THE WINTER-WEISS COMPANY
DENVER COLORADO**

TM5-9032

WAR DEPARTMENT

TM5-9032, Maintenance Manual and Parts Catalog, Trailer, Full, Flat Bed, 8-Ton, Model CPT 8 Special, published by the Fruehauf Trailer Co., is furnished for the information and guidance of all concerned.

(AG 300.7, (29 July 1943))

G. C. MARSHAL,
Chief of Staff.

Official:

J. A. ULIO,
*Major General,
The Adjutant General.*

TM 5-9032

Combined
OPERATOR'S MANUAL
MAINTENANCE MANUAL
and
PARTS CATALOG
for
TRAILER, FULL, FLAT BED
8-TON, MODEL CPT-8 SPECIAL

Manufactured for
CORPS OF ENGINEERS
by
THE FRUEHAUF TRAILER COMPANY
Detroit, Michigan

This Book Covers:
Purchase Order No. C-3196
Serial Nos. FW 5103 thru FW 5802
U. S. Registration Nos. W-0157348 thru W-0158047
Serial Nos. FW 7295 thru FW 8151
U. S. Registration Nos. W-0251612 thru W-0252468
Purchase Order No. C-3790
Serial Nos. FW 9433 thru FW 11507
U. S. Registration Nos. 0358267 thru 0360341

●
THE WINTER WEISS COMPANY
Denver, Colorado

This Book Covers:
Purchase Order No. C-3809
Serial Nos. FWW-1 thru FWW-750
U. S. Registration Nos. W-0357517 thru W-0358266

JULY 29, 1943

I N D E X

PART I—Operator's Manual

Section	Paragraph		Page Nos.
I		INTRODUCTION	1
	1	Purpose and Scope	1
II		DESCRIPTION AND CHARACTERISTICS	3-4
	1	General Description	3
	2	Axles	3
	3	Brakes	3
	4	Drawbar	3-4
	5	Electrical System	4
	6	Frame and Low Bed Platform	4
	7	Springs	4
	8	Tire Carrier	4
	9	Wheels and Tires	4
III		OPERATING INSTRUCTIONS AND CONTROLS.....	5-6
	1	Controls	5
	2	Coupling Trailer to Truck	5
	3	Driving Truck and Trailer	6
	4	Braking Truck and Trailer	6
	5	Uncoupling Trailer from Truck	6
IV		INSPECTION—LUBRICATION—ADJUSTMENT	7-11
	1	Daily Inspections, when in Operation	7
		a. Purpose	7
		b. Prestarting Inspection	7
		c. Inspection During Operation	7
		d. Inspection at the Halt	7
		e. Inspection after Operation	7-8
	2	Monthly Lubrications	8
	3	Mechanical Inspection and Adjustment	8-9
	4	Every 4 Months	9
	5	Lubrication Chart	10-11
V		TOOLS AND EQUIPMENT	12-13
	1	Introduction	12
	2	Tools	12
	3	Equipment	13
VI		SHIPMENT AND STORAGE	14-15
	1	Shipment by Rail	14-15
	2	Shipment by Water	15
	3	Limited Storage	15
	4	Indefinite Storage	15

PART II—Maintenance Manual

I		SAFETY INSTRUCTIONS	17
	1	Safety Instructions	17
11		AXLES	18-22
	1	Axle Alignment, Front	18
	2	Axle Alignment, Rear	18
	3	Disassembly to Check Axle Camber or Bent Axle.....	18-19
	4	Checking for Bend	19
	5	Checking for Camber	19
	6	Axle Replacement	19-22
	7	Drilling Dowel Pin Holes in Replacement Axles.....	22
	8	Axle Service, Diagnosis and Remedy	22

Section	Paragraph	Page No.
III	BRAKES	23-35
	1 Minor Brake Adjustment	23
	2 Brake Relining	23-24
	3 Brake Drum Replacement	24-25
	4 Major Brake Adjustment	25
	5 Hand Parking Brake	25
	6 Adjusting Hand Parking Brake	25-27
	7 Brake Shoes	27-28
	8 Cam	28-30
	a. Replacing Cam	28-29
	b. Replacing Cam Needle Bearing	29
	c. Replacing Nice Ball Bearing in Cam Bracket	29-30
	9 Servicing Slack Adjuster	30
	10 The Brake Operating System	30
	11 Brake Diaphragm	30-31
	12 Emergency Relay Valve	31-32
	13 Test for Leakage—Relay Valve Diaphragm "A" and and Intake Valve	32-34
	14 Test for Leakage—Emergency Calve Diaphragm "C"	34
	15 Brake Lines	34
	16 Repair of Damaged Tubing	34
	17 Replacement of Hose Coupling Packing Rings.....	34
	18 Brake Service Diagnosis and Remedy.....	35
IV	DRAWBAR	37-38
	1 Rebushing Drawbar	37
	2 Replacing Eye	37
	3 Replacing and Repairing Safety Chains	37
	4 Installing Drawbar Frame Brackets	37-38
	5 Riveting and Installing Hinge Brackets	38
V	ELECTRICAL SYSTEM, LIGHTS	38-40
	1 Wiring	39
	2 Lights	39-40
VI	FRAME AND PLATFORM	41-42
	1 General	41
	2 Straightening Bent Frame Members	41
	3 Replacing Frame Members	41
	4 Repairing Section of a Member	41
	5 Replacing Hangers	41
	6 Replacing Bolster Plates	41-42
	7 Rebushing Upper Bolster Plate	42
	8 Replacing Platform Flooring	42
VII	SPRINGS	43-46
	1 Removing Main Spring	43
	2 Removing the Auxiliary Spring	44
	3 Spring Repair	44
	4 Replacing Both Springs	44
	5 Rebushing Springs and Hangers	44-45
	6 Maintenance Suggestions	45-46
	7 Radius Rods	46
	8 Replacement of Radius Rods	46
	9 Spring Service Diagnosis and Remedy	46

Section	Paragraph	Page Nos.
VIII	WHEELS	47-52
	1 Introduction	47
	2 Replacement of Worn or Broken Studs	47
	3 Tire Repairs	47
	4 Removing Tire from Wheel	47-48
	5 Care and Inspection of Tires and Tubes.....	48
	6 Replacing Tire Carrier	48-49
	7 Removing Hub Assembly, Rear Axle.....	49
	8 Removing Hub Assembly, Front Axle.....	50
	9 Installing Hub Assembly	50-51
	10 Removing Bearing Cups	52
	11 Installing Bearing Cups	52
	12 Loose Cups	52
	13 Bearing and Cup Inspection	52

PART III—Parts List

I	AXLE	53
II	BRAKES	54-63
	Hand Parking Brake	54-55
	Internal—Front and Rear	56-57
	Operating Parts	58-59
	Relay Valve	60-61
	Brake Chamber	62-63
III	STRAINER	65
IV	DRAWBAR	66-67
V	FRAME	68-75
	Main (Platform)	68-71
	Gear (Dolly)	72-73
	Flooring	74-75
	Miscellaneous	75
VI	LIGHTS AND WIRING EQUIPMENT	76-79
VII	LIGHTS	80
VIII	TIRE CARRIER	82-83
IX	TOOLS	84-85
X	UNDERCONSTRUCTION	86-87
XI	WHEELS, HUBS and DRUMS	88-89
XII	NUMERICAL PRICED PARTS LIST	91-

Index of Illustrations

<i>Figure No</i>		<i>Page No.</i>
1	8-Ton, Low Bed, Platform Trailer	2
2	Air Filter—Assembled	9
3	Air Filter—Disassembled	9
4	Lubrication Chart	10-11
5	Tools	12
6	Equipment	13
7	Front and Rear Axle Alignment	18
8	Checking Axle for Bend	19
9	Checking for Camber	20
10	Replacing Axle	20
11	Removing Brake Assemblies	21
12	Axle Layout Diagram	22
13	Relining Brake Shoes	23
14	Replacing Brake Drums	24
15	Hand Parking Brake Assembly	26
16	Replacing Brake Shoes	27
17	Replacing Cam Shaft	28
18	Slack Adjuster Assembly	29
19	Brake Chamber—Disassembly	31
20	Brake Chamber—Replacing Spring	31
21	Relay Emergency Valve	32
22	Removing Valve Cover	32
23	Removing Guide Ring	32
24	Removing Intake Valve	32
25	Removing Diaphragm Cover Body	33
26	Lifting Out Spring and Strainer	33
27	Removing Valve	33
28	Reassembling Valve	33
29	Draw Bar Assembly	36
30	Schematic Wiring Diagram	38
31	Blackout Stop and Tail Light	40
32	Service Stop and Tail, Blackout Tail Light	40
33	Removing Bolster Plate Cap Screws	42
34	Trailer and Gear—Disassembled	42
35	Removing Springs	43
36	Radius Rod Assembly	45
37	Tire Carrier	48
38	Removing Rear Tire	49
39	Removing D Washer	50
40	Axle—Cut-away View	51
41	Axle Assembly	53
42	Hand Parking Brake Assembly	54
43	Internal Brake Assembly	56
44	Slack Adjuster Assembly	56
45	Brake—Operating Parts Assembly	58
46	Relay Valve	60
47	Brake Chamber	62
48	Strainer	65
49	Drawbar Assembly	66
50	Frame Main (Platform)	68
51	Frame Gear (Dolly)	72
52	Flooring	74
53	Light and Wiring Equipment	76
54	Lights	80
55	Tire Carrier Assembly	82
56	Tools	84
57	Underconstruction Assembly	86
58	Wheels, Hubs and Drum Assembly	88

PART I
OPERATOR'S MANUAL

