

TM 5-9462

WAR DEPARTMENT TECHNICAL MANUAL

TRAILER, 2-WHEEL

UTILITY, POLE-TYPE, 2½-TON,

TYPE V, STORM BOAT, ELECTRIC

WHEEL, MODEL D-2476



MAINTENANCE INSTRUCTIONS AND PARTS CATALOG

WAR DEPARTMENT • MARCH, 1944

TM5-9462

MAINTENANCE MANUAL
and
PARTS CATALOG
for
TRAILER, 2-WHEEL UTILITY, POLE-
TYPE, 2½-TON, TYPE V, STORM
BOAT, ELECTRIC WHEEL,
MODEL D-2476

*Note:—See pages 51-54 for description and spare parts
list for Storm Boat Adapters for D-2476 Trailer.*

Manufactured for
CORPS OF ENGINEERS
by
ELECTRIC WHEEL COMPANY
QUINCY, ILLINOIS

THIS BOOK COVERS:

PURCHASE
ORDER No.

U.S.A. REGISTRATION Nos.

32-1137.....0745636 thru 0745740

WAR DEPARTMENT
Washington 25, D. C., (10 Mar. 1944)

**TM5-9462 War Department Technical Manual,
Trailer, 2-Wheel Utility, Pole-Type, 2 1/2-Ton,
Type V, Storm Boat, Electric Wheel, Model
D-2476 is published for the information and
guidance of all concerned.**

A.G. 300.7 (1 Mar. 44).

By order of the Secretary of War.

**G. C. MARSHALL,
Chief of Staff.**

Official:

**J. A. ULIO,
Major General,
The Adjutant General.**

Distribution:

X (For Explanation of Symbol see FM 21-6)

INDEX

	<i>Page No.</i>	<i>Paragraph No.</i>
SECTION I—INTRODUCTION.....	1	
SECTION II—DESCRIPTION AND CHARACTERISTICS	4-5	
Axle.....	4	3
Boxes for Tools and Cable.....	5	8
Clamping Beams.....	5	6
Electrical System.....	5	7
Frame.....	4	2
General Description.....	4	1
Pole Assembly.....	4	4
Tools.....	5	8
Specifications.....	5	9
Wheels and Tires.....	4	5

PART I—Operator's Manual

	<i>Page No.</i>	<i>Paragraph No.</i>
PART I, SECTION I—OPERATING INSTRUCTIONS AND CONTROLS.....	6-12	
Connecting to Prime Mover.....	7	1
Disconnecting from Prime Mover.....	7	2
Lights.....	8	3
Loading Load on Trailer.....	8	4
Mounting Wheel.....	12	7
Removing Wheel.....	12	6
Unloading Load from Trailer.....	9	5
PART I, SECTION II—TOOLS AND EQUIPMENT.....	13	
PART I, SECTION III—INSPECTION, LUBRICATION AND ADJUSTMENT.....	14-17	
Inspection—Daily—When in Operation.....	14	1
“ —Before Starting.....	14	2
“ —During Operation.....	14	3
“ —During the Halt.....	14	4
“ —After Operation.....	14	5
“ —After Every 1000 Miles.....	15	6
“ —After Every 10,000 Miles.....	15	7
Lubrication Schedule.....	17	8
PART I, SECTION IV—TRANSPORTING AND STOR- AGE.....	17-18	
Dead Storage.....	18	3
Storage.....	17	2
Transporting.....	17	1

INDEX—(Cont'd)

PART II—Maintenance Manual

	<i>Page No.</i>	<i>Paragraph No.</i>
PART II, SECTION I—SAFETY INSTRUCTIONS.....	19	
PART II, SECTION II—WHEEL HUB AND BEARINGS.	20-21	
Removing Hub Assembly.....	20	2
Replacing Bearing Cups.....	20	3
Replacement of Worn or Broken Studs.....	21	4
Wheels.....	20	1
PART II, SECTION III—SPRINGS.....	22-23	
Rebushing Springs and Shackles.....	23	3
Removing Springs.....	22	1
Spring Repair.....	22	2
PART II, SECTION IV—AXLES.....	24	
Axle Alignment.....	24	1
Disassembly of Axle from Trailer.....	24	2
PART II, SECTION V—TIRES.....	25-26	
Changing Tires.....	25	1
Mounting Tires on Rims.....	26	3
Removing Tires from Rims.....	25	2
PART II, SECTION VI—ELECTRICAL SYSTEM—LIGHTS	27-28	
Broken Coupling or Switch.....	28	3
Electrical Replacement and Repair.....	28	2
Lights not Working.....	28	4
Wiring.....	27	1
PART II, SECTION VII—FRAME.....	29	
Repairing Pole Handles, Lashing Loops, and Chain Hooks.....	29	3
Replacing Frame Members.....	29	2
Straightening Bent Frame Member.....	29	1
PART II, SECTION VIII—BINDING SCREWS.....	29	

PART III—Spare Parts List

	<i>Page No.</i>	<i>Paragraph No.</i>
PART III, NUMERICAL PRICED PARTS LIST.....	44-50	
Preparation of Requisitions.....	31	

Note:—See pages 51-54 for description and spare parts list for Storm Boat Adapters for D-2476 Trailer.

INDEX TO ILLUSTRATIONS

<i>Description</i>	<i>Page No.</i>	<i>Figure No.</i>
Front View—Two-Wheel Trailer.....	2	1
Rear View—Two-Wheel Trailer.....	3	2
<i>PART I—Operator's Manual</i>		
Adjusting Pole.....	9	6
Attaching Cable.....	7	3
Beams in Position.....	11	8
Extending Pole.....	8	5
Folding Up Pole Stand.....	7	3
Lubrication Chart.....	16	11
Overhead View of Trailer.....	10	7
Pole Stand Folded Down.....	7	4
Removing Wheel.....	12	9
Telescoping Pole.....	8	5
Tools.....	13	10
<i>PART II—Maintenance Manual</i>		
Blackout Lamp Assembly.....	28	21
Electrical System.....	27	19
Mounting Tire on Rim.....	26	16, 17, 18
Removing Axle.....	23	14
" Hub.....	20	12
" Spring.....	22	13
" Tire.....	25	15
Service Lamp Assembly.....	28	20
<i>PART III—Spare Parts</i>		
Auxiliary Spacer.....	33	26
Axle Assembly.....	35	29
Beam Assembly, Balk Clamping.....	38	33
" " , Longitudinal.....	39	36
Beam Clamping Chain.....	38	35
" " Screw.....	38	34
Coupling Socket.....	42	41
Frame Assembly.....	32	22
Hub Assembly.....	35	29
Lamp, Blackout Tail and Stop.....	41	38
" , Blackout Tail and Service Stop.....	41	39
" , Service and Blackout, Clearance.....	41	40
Name Plate.....	33	27
Pole Assembly.....	36	31
Pole Clamp.....	33	23
Pole Draft Pin.....	33	24
Pole Draft Pin Retainer Pin and Snap.....	33	25
Pole Stand Assembly.....	37	32
Reflectors.....	42	43
Spring and Shackle Assembly.....	34	28
Switch Assembly.....	42	42
Tires, Tubes and Accessories.....	35	30
Tools.....	43	44
Tool Box Assembly.....	33	27
Wheel Assembly.....	35	30
Wiring Set.....	40	37

PART I
OPERATOR'S MANUAL

