ARMY SERVICE FORCES CATALOG

ORD-9

SNL G-116

For Ord-8-See Ord 8-6-116 dated-July 48

ORDNANCE SUPPLY CATALOG

Group G

Technical Reference TM 9-795 TM 9-796

(Standard Nomenclature List No. G-116)
(Combined)

Higher Echelon Spare Parts and Equipment (Addendum)

and

List of All Part

for

Truck, Wrecking, Heavy, M1

(Ward LaFrance Model 1000, Series 1, 2, 3, and 4) (Kenworth Models 570, 571, and 572)

Truck, Wrecking, Heavy, M1A1

(Ward LaFrance Model 1000, Series 5)
. (Kenworth Model 573)

Supersedes SNL G-116, Parts and Equipment (primarily an Addendum) dated 13 April 1942, and all SNL G-116, Service Parts Catalogs by Kenworth Motor Truck Corp., and Ward LaFrance Truck Div., dated prior to 15 May 1945.

REPRODUCTION INTEGRALE DU DOCUMENT AMERICAIN COMPORTANT LES "CHANGES" N. I ET 2.

HEADQUARTERS, ARMY SERVICE FORCES, 15 MAY 1945

Headquarters, Army Service Forces,

Washington 25, D. C., 15 May 1945

Army Service Forces Ordnance Supply Catalog, ORD 8-9, SNL G-116, Combined Higher Echelon Spare Parts and Equipment (Addendum), List of all Parts, for Truck, Wrecking, Heavy, M1 and M1A1, has been prepared under the supervision of the Chief of Ordnance and is published for the information and guidance of all concerned.

SPX 461 (DATE: 25 March 1945).

By command of General SOMERVELL: W. D. STYER,

Lieutenant General, General Staff Corps, Chief of Staff.

OFFICIAL:

J. A. ULIO,

Major General,

The Adjutant General.

Distribution:

AAF (10); AGF (10); ASF (2); T of Opn (10); Arm & Sv Bd (2); S Div ASF (1); Tech Sv (2); SvC (10); PC&S (1) except Air Bases (O); PE 9 (5); Dist O, 9 (5); Dist Br O, 9 (3); Reg O, 9 (3); Establishments, 9, (5); Decentralized Sub-O, 9 (3); Tk Dep, 9 (5); Gen & Sp Sv Sch (10); USMA (2); A (10); CHQ (10); D (2); R 9 (2); Bn 9 (2); C 9 (3).

ARMY SERVICE FORCES CATALOG

ORD-9

SNL G-116

ORDNANCE SUPPLY CATALOG

Group G

Technical Reference TM 9-795
TM 9-796

(Standard Nomenclature List No. G-116)
(Combined)

Higher Echelon Spare Parts and Equipment (Addendum)

and

List of All Parts

for

Truck, Wrecking, Heavy, M1

(Ward LaFrance Model 1000, Series 1, 2, 3 and 4) (Kenworth Models 570, 571 and 572)

Truck, Wrecking, Heavy, M1A1

(Ward Lafrance Model 1000, Series 5) (Kenworth Model 573)

Supersedes SNL G-116, Parts and Equipment (primarily an Addendum) dated 13 April 1942, and all SNL G-116, Service Parts Catalogs by Kenworth Motor Truck Corp., and Ward LaFrance Truck Div., dated prior to 15 May 1945.

HEADQUARTERS, ARMY SERVICE FORCES, 15 MAY 1945

Quick Reference Index

GENERAL INFORMATION

ORD 8-9

HIGHER ECHELON SPARE PARTS AND EQUIPMENT ADDENDUM

LIST OF ALL PARTS

- OI ENGINE
- 02 CLUTCH
- 03 FUEL SYSTEM
- 04 EXHAUST
- 05 COOLING
- 06 ELECTRICAL
- 07 TRANSMISSION
- OR TRANSFER CASE
- 09 PROPELLER SHAFT AND UNIVERSAL JOINT
- 10 AXLE-FRONT
-]] AXLE-REAR
- 12 ERAKES
- 13 WHEELS, HUBS AND DRUMS
- 14 STEERING
- 15 FRAME AND BRACKETS
- 16 SPRINGS AND SHOCK ABSORBERS
- 17 HOODS, FENDERS, RUNNING BOARDS, APRONS AND MISC. SHEET METAL
- 18 BODY
- 20 WINCH ASSEMBLY, HOIST AND POWER TAKE-OFF
- 21 BUMPERS AND GUARDS
- 22 MISCELLANEOUS BODY, AND CHASSIS ACCESSORIES
- 23 GENERAL USE STANDARDIZED PARTS
- 26 RADIO

MAINTENANCE TOOLS FOR ORDNANCE PERSONNEL

MAINTENANCE PARTS FOR ARMAMENT, SIGHTING AND FIRE CONTROL EQUIPMENT

NOTES

INDEXES

GENERAL INFORMATION

INTRODUCTION

For full information relative to Standard Nomenclature Lists, the procedure followed and principles employed in the compilation, together with the purposes and uses thereof, see the Introduction to the Ordnance Catalog (ORD 1 IOC), the Ordnance Provision System Regulations (OPSR) and the Ordnance Publications for Supply Index (ORD 2 OPSI).

The Standard Nomenclature Lists for major items consists of three main parts: The Organizational Spare Parts and Equipment (ORD 7), the Higher Echelon Spare Parts and Equipment (Addendum) (ORD 8), and the List of All Parts (ORD 9). These three sub-divisions may be published separately or may be combined. In this publication, ORD 8, and 9 are combined into one publication.

On the flyleaf of ORD 8-9 will be found appropriate explanation of its contents.

FEATURES OF THIS PUBLICATION

The following paragraphs explain various important details with which the user should be familiar for proper understanding of the catalog and practices peculiar to this individual book.

Standardized Government Grouping:

The Parts listed in this catalog are divided into groups and sub-groups in accordance with the Standardized Government Grouping. This division into groups facilitates the location and identification of each part. The Standardized Government Grouping as adapted to this catalog is outlined on pages 6, 7, 8 & 9.

Illustrations:

Assembly views, exploded views and cross sectional drawings are used throughout this catalog to aid the user in locating and identifying parts. All illustrations are placed as closely as possible to the groups to which they apply. On each illustration or separate reference legend, the noun name, piece mark and appropriate group number of each part illustrated are given. This promotes the quick identification of each part and accurate reference to the text for complete listing. Each illustration is identified by a figure number and title, and in the back of the book, will be found an index of all figures and the pages on which they appear.

Components of Kits, Sets, and Assemblies:

Whenever any doubt might exist as to what items are included as components of kits, sets, or assemblies, an explanatory note or complete listing of such components is shown.

Attaching Parts:

Attaching parts such as bolts, nuts, rivets, screws and washers, etc., are indented immediately following the parts which they attach. This promotes quick selection of all parts to be requisitioned for use in installing a bracket, generator, etc. Whenever two similar parts, having the same attaching parts, such as right and left fenders are listed, they are placed one immediately following the other and the attaching parts for both are covered by a single listing under the second part. The quantities shown for the attaching parts are those necessary to attach both items.

Commonly Used Parts:

Standard hardware and certain winch parts which are procured on the basis of the vehicle rather than for a particular use, do not have procurement quantities in the group where they are used but have a note written across columns 7, 8, and 9 referring to the group where total procurement and echelon breakdown quantities are shown.

Indexes:

Particular attention is directed to the fact that all indexes are placed at the back of the book and that all items are not included in all indexes. Excluded items are covered by explanatory notes at the beginning of the index. The various indexes are listed on the flyleaf of the index portion of the catalog.

Quantity Per Unit Assembly:

The quantity per Unit Assembly Column lists the quantity of the part required for the particular use in question. If, for example, there are two generators in the vehicle, the quantities of the components listed will be double the number required in one generator. If there are two similar brackets, each requiring four bolts, the total quantity of eight bolts will be indicated. It is therefore necessary to check the quantity of assemblies before using the indicated quantity of components to determine the quantity required per generator. In the case of attaching parts, the quantity of the items attached should be checked.

Ordering Parts, Official Stock Numbers:

All piece marks, official stock number and complete nomenclature must by carefully included on the requisition when parts are ordered. This is extremely essential. The prefix letter and number of the official stock number signifies only that the item was originally coded in that SNL and should not be interpreted as meaning that the part is used only with the vehicle reviewed in that SNL. This prefix continues unchanged when the item is listed again in catalogs for other vehicles in which it is used.

GENERAL INFORMATION (Cont'd)

Bracketed Part Numbers:

When a Kenworth kit, set or some miscellaneous part number is bracketed with Ward LaFrance or vendor's like-part number, the Kenworth part should be issued until stock is exhausted, then refer to the like Ward LaFrance or vendor's part number with which it is bracketed.

How to Find Parts

The various indexes provide several ways for locating parts in the catalog.

If only the description or name of the part is known refer to the Alphabetical Index, and locate the part by the basic noun and supplementary nomenclature. This will give the group or sub-group of ORD 8-9 in which the part is listed. Refer to this group and locate the part by nomenclature.

If only the location or function of the part is known, refer to the Standardized Government Grouping and find the group in which part is most likely to be found. Refer to the group and find part by basic noun and supplementary nomenclature.

If only the ordnance part number is known, refer to the Numerical Index which will show the group in which part is located.

If only the manufacturer's part number is known, refer to the Manufacturer's Part Number Section of the Numerical Index and obtain the group in which part is located.

For example: To locate the water pump, refer to the Standardized Government Grouping List in the General Information Section. Under major group "Cooling" find the sub-group for Water Pump which in this case is 0503. By the use of the quick reference index, group 0503 is readily found in ORD 8-9. The part can then be located within the group by use of the basic noun and supplementary nomenclature.

Publications pertaining to TRUCK, wrecking, heavy, M1 and M1A1 (Ward LaFrance Series 1, 2, 3, 4, 5; and Kenworth Models 570, 571, 572, 573):

, , , , , , , , , , , , , , , , , , ,	
Heavy wrecking truck, M1 (series 1 and 2) (31 Aug. 1942)	.TM 9-795
Heavy wrecking truck, M1A1 (Kenworth and Ward LaFrance)	. TM 9- 796 ′
Ordnance maintenance: Power train for heavy wrecker M1 and M1A1 (axles, transmissions, wheels and tires) (25 Sept. 1943)	. TM 9-1795A
Ordnance maintenance: Engine for heavy wrecking truck M1 and M1A1 (23 Jan. 1943)	TM 9-1795B
Ordnance maintenance: Crane and winches for heavy wrecking truck M1 (Ward LaFrance and Kenworth) (27 Jan. 1943)	.TM 9-1795C
Ordnance maintenance: Body and chassis for heavy wrecking truck M1 (27 Jan. 1943)	TM 9-1795D
Ordnance maintenance: Cranes for heavy wrecking truck M1A1 (Ward LaFrance and Kenworth)	. TM 9-1796
ORDNANCE FIELD SERVICE TECHNICAL BULLETINS	
Installation of boom end guards and lubrication of rear cylindrical	
body roller	TB 1795-1
Synchronizing dual ignition	
Disposal of Magneto on heavy wrecking truck M1 (series 1)	TB 1795B-1
Improved mounting of crane mounting brackets on chassis frame (Kenworth)	
ORDANALISE SISTER SERVICE DIMESTRAS	

ORDNANCE FIELD SERVICE BULLETINS

Lubrication instructions	
Libration ineffictions	(1424 6.(2.116

FIELD SERVICE MODIFICATION WORK ORDER

Tichta blackant	•	TOMBUO OI THE
Lights, Diackout	·	

The major item covered by this catalog is designated as a Special Equipment Vehicle as defined in paragraph 3 of AR850-15.

The SNL reference in the note symbol column indicates the SNL in which the item is stored, issued and reviewed.

THE PARTS SHOWN IN THIS PUBLICATION ARE ALL THE AUTHORIZED ITEMS OF ISSUE AVAILABLE FOR MAINTENANCE OF THE SUBJECT VEHICLE AND ARE THE ONLY ITEMS AVAILABLE FOR ISSUE. ITEMS THAT ARE NOT AUTHORIZED FOR ISSUE ARE THOSE ITEMS WHICH ARE NOT CONSIDERED ESSENTIAL FOR EFFICIENT MAINTENANCE OF THE VEHICLE. NORMALLY ITEMS SO OMITTED ARE ITEMS THAT ARE NON-FUNCTIONAL SUCH AS FENDERS, OR ITEMS WHICH ARE COMPONENTS OF KITS, SETS, OR ASSEMBLIES WHICH ARE AUTHORIZED FOR ISSUE.

MANUFACTURERS' IDENTIFICATION SYMBOLS

MANUFACTURER AND ADDRESS SYMBOLS A. C. Spark Plug Division (General Motors Corp.), 1300 N. Dort Highway, Flint 2, Michigan AC ACC American Cable Division (American Chain & Cable Co.), 230 Park Ave., New York 17, N. Y. Electric Auto-Lite Co., Main Post Office Box 931, Toledo 1, Ohio AL **AMC** American Stamping Company, 310 E. Burnham St., Battle Creek, Michigan Allegany Ordinance Plant, Cumberland, Maryland AO ASD Arrow Safety Device Co., Inc., Mt. Holly, New Jersey American Transformer Co., 178 Emmet St., Newark 5, New Jresey TA Bassick Co. (The), 38 Austin St., Bridgeport 2, Connecticut BA Barnes, Gibson & Raymond Div. (Associated Spring Corp.), 6400 Miller Ave., Detroit 11, **BGR** Michigan BM Blood Bros. Machine Co., 1 Glass St., Allegan, Michigan BP Brown Corp. (The), 213 Belleview Ave., Syracuse 4, N. Y. BR Briggs & Stratton Corp., 2711 N. 13th St., Milwaukee 1, Wisconsin **BRO** Brockway Motor Co., Inc., 106 Central St., Cortland, N. Y. Bendix-Stromberg Carburetor Co., 401 Bendix Drive, South Bend 20, Indiana BS BT Bingham Stamping & Tool Div. (Logan Gear Co.), 1062 Post St., Toledo 6, Ohio BW Budd Wheel Co., 12141 Charlevoix, Detroit 14, Michigan BWE Bendix-Westinghouse Automotive Air Brake Co., 901 Cleveland St., Elyria, Ohio Corcoran-Brown Lamp Co. (The), 4900 Spring Gr. Ave., Cincinnati, Ohio CB CH Cutler-Hammer, Inc., 315 N. 12th St., Milwaukee 1, Wisconsin CHC Cleveland Hardware & Forging Co., 3270 E. 79th St., Cleveland 4, Ohio CL Clum Mfg. Co., 601 W. National Ave., Milwaukee 4, Wisconsin CO Continental Motors Corp., 205 Market St., Muskegon, Michigan CP Champion Spark Plug Co., 900 Upton Ave., Toledo 1, Ohio CRB Corbin Division, P. & F. (The American Hardware Corp.), Park St., New Britain, Connecticut CS Culver-Stearns Mfg. Co., 53 Grayton St., Worcester 8, Massachusetts CW Chemical Warfare Service DAY Dayton Rubber Mfg. Co., 2345 Riverview Ave., Dayton, Ohio DM Douglas Mfg. Co., H. A., Bronson, Michigan DR Delco-Remy Div. (General Motors Corp.), Anderson, Indiana DSM Desmond-Stephen Mfg. Co., 173 S. Walnut St., Urbana, Ohio $\mathbf{D}\mathbf{Z}$ Dietz, R. E. Co., 60 Laight St., New York 13, N. Y. **ECM** Eclipse Machine Div. (Bendix Aviation Corp.), Elmira, N. Y. **ENG** Engineers Corps. ES Electric Storage Battery Co., 1900 Allegheny Ave., Philadelphia 22, Pa. **ESS** Electric Service Supplies Co., 17th and Cambrea Sts., Philadelphia 32, Pa. **ESX** Essex Brass Corp., 1998 Franklin St., Detroit, Michigan FT Firestone Tire & Rubber Co., 1200 Firestone Parkway, Akron 17, Ohio **FUL** Fuller Mfg. Co., Prouty St., Kalamazoo 13F, Michigan GD Greenlee Tool Co., 333 Eggers St., Rockford, Ill. GL Guide Lamp Div. (General Motors Corp.), 25th St. and Arrow Ave., Anderson, Indiana GOM G. & O. Mfg. Co. (The), P.O. Box 1860, New Haven 8, Connecticut GW Garwood Industries, Inc., 7924 Riopelle St., Detroit 11, Michigan **GWC** Gardner Wire Co., 5045 West Lake St., Chicago 44, Ill. HAL Hansen Mfg. Co., A. L., 5037 Ravenswood Ave., Chicago 40, Ill. HBL Hubbell, Inc. Harvey, State St. and Boswick Ave., Bridgeport 2, Conn. HC Cole-Hersee Co., 54 Old Colony Ave., So. Boston 27, Mass. **HCM** Hoof Co., C. M., 1414 S. Wabash Ave., Chicago 5, Ill. HD Hydraulic Controls, Inc. (New York Air Brake Co. The), 420 Lexington Ave., New York 17,

Houde Engineering Corp., 537 E. Delavan Ave., Buffalo 11, N. Y.

Imperial Brass Mfg. Co. (The), 1200 W. Harrison St., Chicago 7, Ill.

SNL G-116 4

N. Y.

HE IB

MANUFACTURERS' IDENTIFICATION SYMBOLS (Cont'd)

	·
SYMBOLS	MANUFACTURER AND ADDRESS
IL	Industrial Lamp Corp., 2501 South Dearborn St., Chicago 16, Ill.
JMC	Jalce Motor Co. (The), 607 W. Pearl St., Union City, Indiana
ĴМS	Jones Motrola Sales Co., 432 Fairfield Ave., Stamford, Conn.
KH	Kickhaefer Mfg. Co., 901 S. 2nd St., Milwaukee 4, Wisconsin
KMT	Kenworth Motor Truck Corp., 1263 Mercer St., Seattle 11, Washington
KSD	Kakomo Spring Co., 329 Firemen Ave., Kakomo, Indiana
MED	Medical Corps
MAR	Maremont Automotive Products Inc., 1600 S. Ashland Ave., Chicago 8, Illinois
MAS	Master Engineering Service
MD	Midland Specialties Company, 4801 S. Richmond St., Chicago 22, Ill.
MPC	Michiana Products Corp., Michigan City, Indiana, Lock Box 302
MZ	Mazda-General Electric Co., Schenectady 5, N. Y.
ND	New Departure Div. (General Motors Corp.), Bristol, Conn.
NF	Novelty Foundry & Iron Works, Inc., 15 Wallace St., Sterling, Ill.
PC	Packard Electric Div. (General Motors Corp.), Dana Ave., Warren, Ohio
PK	Parker-Kalan Corp., 200 Varick St., New York 18, N. Y.
PRX	Perfex Corp., 500 W. Oklahoma Ave., Milwaukee 7, Wisconsin
PWM	Powell Muffler Co., Inc., 720 Broad St., Utica, N. Y.
QMC	Quartermaster Corps
QPX	Quinplex Corp. (The), 429 4th Ave. Pittsburgh 19, Pa.
RG	Ross Gear & Tool Co., 8th and Heath Sts., Lafayette, Indiana
RSF	Resistoflex Corp., 39 Plansoen St., Bellvville 9, N. J.
SC	Signal Corps
SD	Studebaker Corp. (The), 635 S. Main St., South Bend 27, Indiana
SE	Sterling Engine Co., 1270 Niagara St., Buffalo 13, N. Y.
SF	Sterling Siren Fire Alarm Co., Inc., 56 Allen St., Rochester, N. Y.
SHA	Shakespeare Products Co., 241 E. Kalamazoo Ave., Kalamazoo 2F, Mich.
SK	Shakespeare Lock Washer Co., 2501 N. Keeler Ave., Chicago 39, Ill.
SKF	SKF Industries, Inc., Front St. and Erie Ave., Philadelphia 34, Pa.
SPT	Spencer Thermostat Co., 34 Forest St., Attleboro, Mass.
SPW	Sparks Withington Co., E. Michigan at Horton St., Jackson, Mich.
SSM	Saginaw Sheet Metal Parts Corp., 2064 E. Genesee Ave., Saginaw, Mich.
SSP	Stolper Steel Products Corp., 3258 W. Fond du lac Ave., Milwaukee 10, Wis.
SU	Superior Universal Products Co., Lima, Ohio
SW	Stewart-Warner Corp., 1826 Diversey Pkwy., Chicago 14, Ill.
SZ	Schwitzer-Cummins Co., 1125 Massachusetts Ave., Indianapolis, Indiana
TD	Timken-Detroit Axle Co., 100-400 Clark Ave., Detroit 32, Mich.
TEC	Triangle Engineering Co., 40 E. 9 Mile Rd., Ferndale, Mich.
TIM	Timken Roller Bearing Co. (The), 1935 Kelley Ave., Canton, Ohio
TRI TSC	Trico Products Corp., 817 Washington St., Buffalo 3, N. Y.
TWN	Tuthill Spring Co., 760 Polk St., Chicago 7, Ill.
UA	Townsend Co., New Brighton, Pa. United Air Cleaner Co., 9705 Cottage Grove, Chicago, Ill.
UC	United Carr Fastener, 31 Ames St., Cambridge 42, Massachusetts
UN	Universal Oil Seal Co., 34 W. Kennett Rd., Pontiac 12, Mich.
UTS	United Specialties Co., 9705 Cottage Grove Ave., Chicago 28, Ill.
VM	Visco Meter Corp. (The), 315 Grate St., Buffalo 7, N. Y.
WCE	Wico Electric Co., Phelon Ave., W. Springfield, Mass.
WE	Ward LaFrance Truck Div. (Great American Industries), Elmira, New York
WHM	Wilson-Hurd Mfg. Co., 2010 Lines St., Wausau, Wis.
VVIIVI	Wisconsin A-la Div. (Timber Detroit A-la Co.) 567 High St. Ochloch Wis

Wisconsin Axle Div. (Timken-Detroit Axle Co.), 567 High St., Oshkosh, Wis.

5

Zenith Carburetor Division, (Bendix Aviation Corporation), 696 Hart Ave., Detroit 14, Mich.

WIS

Z

STANDARDIZED GOVERNMENT GROUPING

01—ENGINE	GROUP	O3—FUEL SYS	TEM GROUP (Cont'd)
0100	Engine Assembly		· · · · · · · · · · · · · · · · · · ·
0101A		0301C-1	Air Cleaner Mounting Parts
	Cylinder Block	0301C-2	Connecting Parts—Carburetor to
0101B	Cylinder Head		Crankcase Relief Tube or Air
0102	Crankshaft		Cleaner
0102A	Crankshaft Bearings	0302	Fuel Pump
0103	Pistons	0302-1	Fuel Pump (6 Valve)
0103 A	Rings	0302 A	Fuel Pump Attaching Parts
0103 B	Piston Pins	0303	Accelerator and Linkage
0104	Connecting Rods	0303A	Hand Throttle and Linkage
0104A	Connecting Rod Bearings	0303A-1	Hand Throttle and Linkage (KMT)
0105	Valves, Seats, Guides and Springs	0304	Fuel Lines
0105 A	Tappets or Lifts	0304A	Fuel Lines (KMT)
0105B	Push Rods, Rocker Arms and	0305	Governor
	Shafts	0306	Fuel Filters
0105C	Push Rod Cover and Gaskets	0300	ruei riiteis
0105D	Valve Cover and Gaskets	04 541141145	
0106	Camshaft	04—EXHAUST	GROUP
0106A	Camshaft Bearings	0401	Muffler
0106C	Chains and Sprockets	0402	Exhaust Pipe
0106D	Chain Core Corres and Contrate	0.02	======================================
	Chain Case Cover and Gaskets	05-COOLING	CROUP
0107	Oil Pump	O3-COOLING	GROUP
0107A	Oil Pan	0501	Radiator
0107B	Oil Cooler	0501A	Shell
0107E	Oil Filter (Single Element Type)	0501B	Core
0107 E -1	Oil Filter (Dual Element Type)	0502	Thermostat
0107 F	Oil Filter Attaching Parts	0503	Water Pump
0107G	Oil Filler and/or Oil Breather	0503A	Fans
0107H	Level and/or Float Gauge	0503R 0503B	Fan and Generator Belts
0107Ј	Oil Lines and Fittings	050315	
0107 K	Oil Pressure Regulator		Radiator Mountings
0107 N	Crankcase Ventilator	0505	Engine Water Fittings and Hose
0108	Manifolds as an Assembly		
OTOO	WALLING BE ARE AUTHORITE		
		06-ELECTRICA	AL GROUP
0108A	Intake Manifolds		_
0108A 0108B	Intake Manifolds Exhaust Manifolds	0601	Generator
0108A 0108B 0109	Intake Manifolds Exhaust Manifolds Flywheel	0601 0601-1	Generator Generator Drive Parts
0108A 0108B 0109 0109B	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear	0601 0601-1 0601B	Generator Generator Drive Parts Regulator
0108A 0108B 0109 0109B 0109C	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing	0601 0601-1 0601B 0602	Generator Generator Drive Parts Regulator Motor Cranking
0108A 0108B 0109 0109B 0109C 0110	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings	0601 0601-1 0601B 0602 0603	Generator Generator Drive Parts Regulator Motor Cranking Distributor
0108A 0108B 0109 0109B 0109C 0110 0111	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets	0601 0601-1 0601B 0602 0603 0603-1	Generator Generator Drive Parts Regulator Motor Cranking Distributor Distributor
0108A 0108B 0109 0109B 0109C 0110	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings	0601 0601-1 0601B 0602 0603 0603-1 0603-2	Generator Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Distributor Drive Parts
0108A 0108B 0109 0109B 0109C 0110 0111	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3	Generator Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof
0108A 0108B 0109 0109B 0109C 0110 0111	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3	Generator Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto
0108A 0108B 0109 0109B 0109C 0110 0111	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A	Generator Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts
0108A 0108B 0109 0109B 0109C 0110 0111 0113B	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3	Generator Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or
0108A 0108B 0109 0109B 0109C 0110 0111 0113B 02—CLUTCH 0200 0201	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1	Generator Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto
0108A 0108B 0109 0109B 0109C 0110 0111 0113B 02—CLUTCH 0200 0201 0201A	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C	Generator Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil
0108A 0108B 0109 0109B 0109C 0110 0111 0113B 02—CLUTCH 0200 0201 0201A 0202	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1	Generator Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor)
0108A 0108B 0109 0109B 0109C 0110 0111 0113B 02—CLUTCH 0200 0201 0201A 0202 0203	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C	Generator Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor)
0108A 0108B 0109 0109B 0109C 0110 0111 0113B 02—CLUTCH 0200 0201 0201A 0202 0203 0204	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C	Generator Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto)
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT)	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C	Generator Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT) Pedal Linkage	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C	Generator Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs Ignition Lock or Switch
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT) Pedal Linkage Pedal Linkage (KMT)	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C 0604 0604A 0604A 0604A-1 0604B 0604C	Generator Orive Parts Regulator Motor Cranking Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs Ignition Lock or Switch Instruments (Ammeter)
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT) Pedal Linkage Pedal Linkage Pedal Linkage (KMT) Pilot Bearings	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C 0604 0604A 0604A 0604B 0604C 0605	Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs Ignition Lock or Switch Instruments (Ammeter) Panel Light
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT) Pedal Linkage Pedal Linkage (KMT)	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C 0604 0604A 0604A 0604B 0604B 0604C 0605 0605 0606	Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs Ignition Lock or Switch Instruments (Ammeter) Panel Light Switches
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT) Pedal Linkage Pedal Linkage (KMT) Pilot Bearings Housing, Clutch	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C 0604 0604A 0604A 0604A 0604B 0604B 0604C 0605 0605	Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs Ignition Lock or Switch Instruments (Ammeter) Panel Light Switches Chassis and Instrument Wiring
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT) Pedal Linkage Pedal Linkage (KMT) Pilot Bearings Housing, Clutch	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C 0604 0604A 0604A-1 0604B 0604C 0605 0605 0606 0606B	Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs Ignition Lock or Switch Instruments (Ammeter) Panel Light Switches Chassis and Instrument Wiring Circuit Breakers
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT) Pedal Linkage Pedal Linkage Pedal Linkage (KMT) Pilot Bearings Housing, Clutch	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C 0604 0604A 0604A 0604A-1 0604B 0604C 0605 0605 0606 0606B 0606D 0606E	Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs Ignition Lock or Switch Instruments (Ammeter) Panel Light Switches Chassis and Instrument Wiring Circuit Breakers Terminal Boxes
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2—CLUTCH 0200 0201 0201A 0201A 0202 0203 0204 0204-1 0204A-1 0205 0207	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT) Pedal Linkage Pedal Linkage Pedal Linkage (KMT) Pilot Bearings Housing, Clutch GROUP Fuel Tanks	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C 0604 0604A 0604A-1 0604B 0604C 0605 0605C 0606 0606B 0606D 0606E	Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs Ignition Lock or Switch Instruments (Ammeter) Panel Light Switches Chassis and Instrument Wiring Circuit Breakers Terminal Boxes Headlights
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2—CLUTCH 0200 0201 0201A 0202 0203 0204 0204 0204-1 0204A 0204A-1 0205 0207 O3—FUEL SYS	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT) Pedal Linkage Pedal Linkage Pedal Linkage (KMT) Pilot Bearings Housing, Clutch GROUP Fuel Tanks Tank Gauge Unit	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C 0604 0604A 0604A-1 0604B 0604C 0605 0605C 0606 0606B 0606B 0606D 0606E 0607	Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs Ignition Lock or Switch Instruments (Ammeter) Panel Light Switches Chassis and Instrument Wiring Circuit Breakers Terminal Boxes Headlights
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2—CLUTCH 0200 0201 0201A 0202 0203 0204 0204-1 0204A 0204A-1 0205 0207 O3—FUEL SYS	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT) Pedal Linkage Pedal Linkage Pedal Linkage (KMT) Pilot Bearings Housing, Clutch GROUP Fuel Tanks Tank Gauge Unit Carburetor	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C 0604 0604A 0604A-1 0604B 0604C 0605 0605C 0606 0606B 0606B 0606D 0606E 0607	Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs Ignition Lock or Switch Instruments (Ammeter) Panel Light Switches Chassis and Instrument Wiring Circuit Breakers Terminal Boxes Headlights Headlights Lamp Units (Sealed Beam)
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2—CLUTCH 0200 0201 0201A 0202 0203 0204 0204-1 0204A 0204A-1 0205 0207 O3—FUEL SYS 0300 0300A 0301 0301-1	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT) Pedal Linkage Pedal Linkage Pedal Linkage (KMT) Pilot Bearings Housing, Clutch GROUP Fuel Tanks Tank Gauge Unit Carburetor Carburetor	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C 0604 0604A 0604A-1 0604B 0604C 0605 0605C 0606 0606B 0606B 0606D 0606E 0607 0607-1 0607A 0607B	Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs Ignition Lock or Switch Instruments (Ammeter) Panel Light Switches Chassis and Instrument Wiring Circuit Breakers Terminal Boxes Headlights Headlights Lamp Units (Sealed Beam) Lamps
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2—CLUTCH 0200 0201 0201A 0201A 0202 0203 0204 0204-1 0204A 0204A-1 0205 0207 O3—FUEL SYS 0300 0300A 0301-1 0301A	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT) Pedal Linkage Pedal Linkage Pedal Linkage (KMT) Pilot Bearings Housing, Clutch GROUP Fuel Tanks Tank Gauge Unit Carburetor Carburetor Attaching Parts	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C 0604 0604A 0604A-1 0604B 0604C 0605 0605C 0606 0606B 0606B 0606D 0606E 0607	Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs Ignition Lock or Switch Instruments (Ammeter) Panel Light Switches Chassis and Instrument Wiring Circuit Breakers Terminal Boxes Headlights Headlights Lamp Units (Sealed Beam) Lamps Parking and/or Blackout Marker
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2—CLUTCH 0200 0201 0201A 0202 0203 0204 0204-1 0204A 0204A-1 0205 0207 O3—FUEL SYS 0300 0300A 0301 0301-1	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT) Pedal Linkage Pedal Linkage Pedal Linkage (KMT) Pilot Bearings Housing, Clutch GROUP Fuel Tanks Tank Gauge Unit Carburetor Carburetor Carburetor Attaching Parts Choke (Automatic) and/or Choke	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C 0604 0604A 0604A-1 0604B 0604C 0605 0605C 0606 0606B 0606D 0606E 0607 0607-1 0607B 0607D	Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs Ignition Lock or Switch Instruments (Ammeter) Panel Light Switches Chassis and Instrument Wiring Circuit Breakers Terminal Boxes Headlights Headlights Lamp Units (Sealed Beam) Lamps Parking and/or Blackout Marker Lights
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2—CLUTCH 0200 0201 0201A 0202 0203 0204 0204-1 0204A 0204A-1 0205 0207 O3—FUEL SYS 0300 0300A 0301-1 0301A 0301B	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT) Pedal Linkage Pedal Linkage Pedal Linkage (KMT) Pilot Bearings Housing, Clutch TEM GROUP Fuel Tanks Tank Gauge Unit Carburetor Carburetor Carburetor Attaching Parts Choke (Automatic) and/or Choke Control	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C 0604 0604A 0604A-1 0604B 0604C 0605 0605C 0606 0606B 0606D 0606E 0607 0607-1 0607B 0607D-1	Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs Ignition Lock or Switch Instruments (Ammeter) Panel Light Switches Chassis and Instrument Wiring Circuit Breakers Terminal Boxes Headlights Headlights Lamp Units (Sealed Beam) Lamps Parking and/or Blackout Marker Lights Blackout Marker Light
0108A 0108B 0109 0109B 0109C 0110 0111 0113B O2—CLUTCH 0200 0201 0201A 0202 0203 0204 0204-1 0204A 0204A-1 0205 0207 O3—FUEL SYS 0300 0300A 0301-1 0301A 0301B	Intake Manifolds Exhaust Manifolds Flywheel Ring Gear Flywheel Housing Mountings Lift Hooks and Brackets Accessory Drive GROUP Clutch Assembly Clutch Disc Facings and Rivets Cover, Pressure Plate and Springs Release Yoke, Bearing and Fork Pedal Pedal, Clutch (KMT) Pedal Linkage Pedal Linkage Pedal Linkage (KMT) Pilot Bearings Housing, Clutch GROUP Fuel Tanks Tank Gauge Unit Carburetor Carburetor Carburetor Attaching Parts Choke (Automatic) and/or Choke	0601 0601-1 0601B 0602 0603 0603-1 0603-2 0603-3 0603A 0603A-1 0603C 0604 0604A 0604A-1 0604B 0604C 0605 0605C 0606 0606B 0606D 0606E 0607 0607-1 0607B 0607D	Generator Drive Parts Regulator Motor Cranking Distributor Distributor Distributor Drive Parts Distributor, Dust Proof Magneto Magneto Drive Parts Manual Control Distributor or Magneto Ignition Coil Ignition Wiring, (for distributor) Ignition Wiring, (for Magneto) Spark Plugs Ignition Lock or Switch Instruments (Ammeter) Panel Light Switches Chassis and Instrument Wiring Circuit Breakers Terminal Boxes Headlights Headlights Lamp Units (Sealed Beam) Lamps Parking and/or Blackout Marker Lights

STANDARDIZED GOVERNMENT GROUPING (Cont'd)

06-	-ELECTRICA	L GROUP (Cont'd)	11-REAR AXL	E GROUP (Cont'd)
	0608	Tail Lights and Stop Lights	1102	Axle Drive Shafts
	0608-1	Blackout Tail and Stop Light	1103	Differential and Carrier Assembly
	0608-2	Blackout Tail and Service Light	1104	Differential Case, Gears, Pinions
	0608-3	Blackout Tail and Service Light (Old Style)		and Bearings
	0608 A 0609	Auxiliary Lights Horns	12—BRAKE GROUP	
		_	1201	Hand Brake and/or Emergency
	0609 A	Horn and/or Siren Button and Wiring	1202	Brake and Parts Shoes and Facings
	0609 B	Sirens	1203	BrakeShoeSupportandCamshafts
	0610	Battery	1203A	Guide Springs
	0610 A	Battery Hangers and/or Box	1203C	Slack Adjuster (Rear Axle)
	0610B	Starting Cables and Connections	1203C-1	Slack Adjuster (Front Axle)
07-	-TRANSMIS	SION GROUP	1203E	Brake Dust Shields
		•	1204	Pedal and Springs
	0700	Transmission Assembly	1207 A	Brake Cylinder (Front)
	0701	Case	1207 B	Brake Diaphragm Chamber (Rear)
	0703	Main Drive Pinion and Bearings	1209 B	Hoses
	0704_	Main Shaft and Bearings	1209C	Tubes, Clips and Tube Connectors
	0704B 0704C	Gears Countershaft and Reverse Idler	1209C-1	Tubes, Clips and Tube Connectors (For Trailer Connecting)
		Shaft and Bearings	1209D	Brackets and Springs
	0705	Speedometer Drive Gears (See	1209E	Relay Valve
		Group 0810)	1209 F	Foot Brake Valve
	0706	Gear Shift Cover and Bearings	1209G	Quick Release Valve
	0706A	Gear Shift Lever and Parts	1209H	Double Check Valve
	0706B	Gear Shifter Rails and Parts	1209H-1	Single Check Valve
	0706C	Gear Shift Yokes and Forks	1209J	Reservoir Tank
	0.000	dear biller rough und rolls	1209K	Safety Valve
OR-	_TD A NSFED	CASE GROUP	1209L	Governor
-			1209L 1209M	Low Pressure Indicator
	0800	Transmission Transfer Assembly		
	0801	Case	1209N	Cutout Cock
	0802	Drive Shaft, Gears and Bearings	1213	Air Compressor Assembly
	0803	Driven Shaft, Gears and Bearings	1213 B	Installation Parts for Compressor
	0804	Idler Gear, Shaft and Bearing		
	0804A	Declutch Assembly and Parts	13—WHEELS,	HUBS AND DRUMS GROUP
	0805	Shifter Shafts	1301	Wheel Assembly
	0805A	Yokes	1301 A	Bearings (Front Axle)
	0805B	Shift Control and Parts	1301A-1	Bearings (Rear Axle)
	0805C	Declutch Control and Parts	1301A-1 1302	
	0809	Mountings		Hubs and Drums (Front Axle)
	0810	Speedometer Drive Gears	1302-1	Hubs and Drums (Rear Axle)
00		-	1302A	Wheel Studs and Nuts
UY-		R SHAFT AND L JOINT GROUP	14-STEERING	
	0901 0902	Propeller Shaft Assemblies Universal Joint	1401	Steering Connecting Rod Drag Link
	0902-1	Universal Joint	1402	Tie Rod
	0302-1	Omversar John	1403	Steering Gear
10-	-GROUP FI	ONT AYIE	1403 A	Steering Gear Parts
.0-			1404	Wheel Assembly
	1000	Front Axle Assembly	1405	Brackets
	1001	Housing		
	1002 1003	Differential and Carrier Assembly Differential Gears, Pinion and		ND BRACKETS GROUP
		Bearings	1500	Frame and Brackets
	1006	Steering Knuckle Flange and Arm	1501	Towing Attachments
	1007	Axle Shafts, Universal Joints and	1502	Pintle Hooks
	:	Drive Flange	1504	Running Board Hangers
11-REAR AXLE GROUP		16—SPRINGS	AND SHOCK ABSORBERS GROUP	
	1000	Rear, Axle Assembly	1601	Front Springs
	1101	Housing Assembly	1601-1	Front Springs (KMT)

STANDARDIZED GOVERNMENT GROUPING (Cont'd)

16-		AND SHOCK ABSORBERS		ASSEMBLY, HOIST AND
	GROUP (\$	iont'd)	POWER	TAKE-OFF (Cont'd)
	1601A 1601A-1	Rear Springs (KMT)	2001G-1	Chain and Deflector, PTO to Front Winch Propeller Shaft
	1601C 1602	Spring Bumpers Shackles and Spring Attaching	2001 H	Rear Winch Automatic Brake Parts
	1002	Parts	2001 J	Rear Winch Propeller Shaft
	1603	Shock Absrobers and Mountings	2001K	Rear Winch Transmission
	1604	Torque Rods	2001L	Main Drive Line Shaft Assembly
		•	2001L-1	Main Drive Line Shaft Assembly
17-		FENDERS, RUNNING BOARDS, AND MISC. SHEET METAL GROUP	2001 M 2001 N	Rear Winch Layshaft Assembly Eccentrio Chain Tightener (Main Drive Chain)
	1701 1703	Fenders and/or Sand Guards Running Boards	2001P	Single Clutch Sprocket (Operates Front Winch Propeller Shaft)
	1704	Hoods	2001Q	Single Clutch Sprocket
			2001R	Double Joint Assembly
18-	-BODY GR	DUP	2001S	Double Joint Assembly
	1800	Body	2001 T	Chain and Tightener, Rear Winch
	1800A	Cab Assembly		Drive
	1800A	Body Gates and Steps	2002	Cables and Chains
	1803	Floor Mats and Seals	2003	Control Levers and Rods for Rear
	1804	Seats		Winch
	1804A	Cushions and Upholstery	2004A	Crane Winch Control
	1805	Door Assemblies	2004B	Crane Winch Control
	1805A	Door Hinges and Parts	2004C	Valve, Clutch Two Way Control
	1805B	Door Locks	2004D	Crane Winch Drive Chain and
	1805C	Door Handles—Remote Control		Deflector
	1805D	Door Handles—Outside	2004 F	Crane Winch Gear Box
	1805E	Door Window Control Mechanism	2004 G	Clutch Cylinder, (Remote Control)
	1805 F	Door Dove Tails	2004H	Double Check Valve
	1809A	Compartment and Parts	2004I	"A" Frame Base and Attaching
	1810	Cowl Ventilator	20047 4	Parts
	1811	Windshield Assembly	2004 I -1	"A" Frame Base and Attaching
	1811B	Windshield Frame, Mountings and Seals	2004J	Parts "A" Frame Assembly and Attach-
	1811C	Windshield Wiper Assembly	2004K	ing Parts
	1811D	Windshield Wiper Parts	2004K 2004K-1	Crane Winch Assembly Crane Winch Assembly
	1811E	Windshield Wiper Arms and Blades	2004K-1 2004L	Crane Winch
	1811F	Hood Latch	2004 M	Boom Winch
	1812	Window Glass or Door Glass	2004N	Boom Winch Assembly
	1812A 1812B	Glass Channels Mountings	2004O	Drive and Control for Boom
	1812C	Weather Strips		Winch
	1817	Tool Box	2004P	Boom Winch Control
	1817A	Spare Parts Storage	2004Q	Boom Pivot Assembly
		Spare 1 and Storage	2004R	Boom Pivot Assembly
20-	-WINCH A	SSEMBLY, HOIST AND	2004S	Boom Pivot Assembly
	POWER T		2004 T	Boom Assembly
	2000		2004 T -1	Boom Assembly
	2000	Front and Rear Mounted Winch Assemblies	2004U	Boom Assembly
	2001	Front Winch Parts	2004V	Boom and Load Indicator
	2001A	Rear Winch Parts L.H.	2004337	Assembly
	2001B	Rear Winch Parts R.H.	2004W 2004X	Boom Jacks Boom Jacks and Foot Assembly
	2001C	Front Winch Automatic Brake	2004X 2004Z	Boom Jacks and Foot Assembly
	2001D	Parts Front Winch Hand Clutch	2004 <i>Z</i> 2004 A A	Drive and Control for Boom Swinger
	2001E	Rope Guard and Roller (For Front Winch)		Drive and Control for Boom Swinger
	2001F	Front Winch Front Propeller Shaft	2004BB	Boom Swinger Cutout Switch (Electric)
	2001F-1	Outboard Bearing, Front Winch	2004CC	Boom Swing Control
	200177.0	Propeller Shaft	2004DD	Topping Pivot Assembly
	2001F-2 2001G	Front Winch Rear Propeller Shaft	2004EE	Topping Pivot Assembly
	2001	Front Winch Propeller Shaft	2004 FF	Rear Jacks and Skid Rails